


Meet your new PCV-RS700 Series

Thank you for purchasing a Sony VAIO® computer! The information provided here is designed to help you to become familiar with your computer and supplied accessories.


- A System unit
- B Keyboard
- C Speakers
- D Power cord
- E Video adapter*
- F TV coaxial cable*
- G Mouse
- H Remote control*
- I Infrared receiver*
- J AA batteries (2)*

*Not available with all VAIO® computer models.

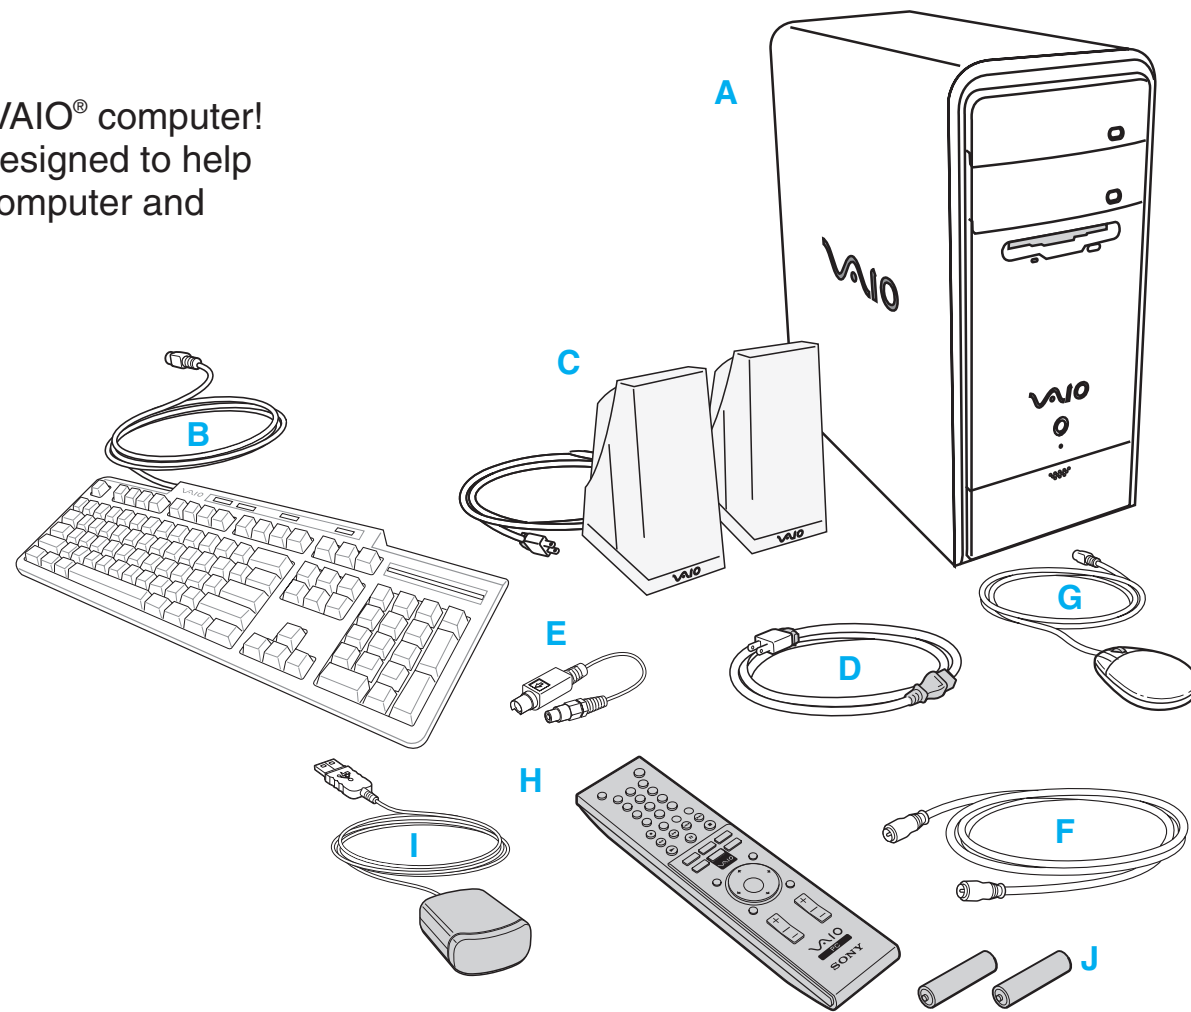


Your VAIO® computer is not supplied with System or Application Recovery CDs. Use the VAIO Recovery Wizard utility program to recover your computer's operating system and preinstalled software.

Front Panel

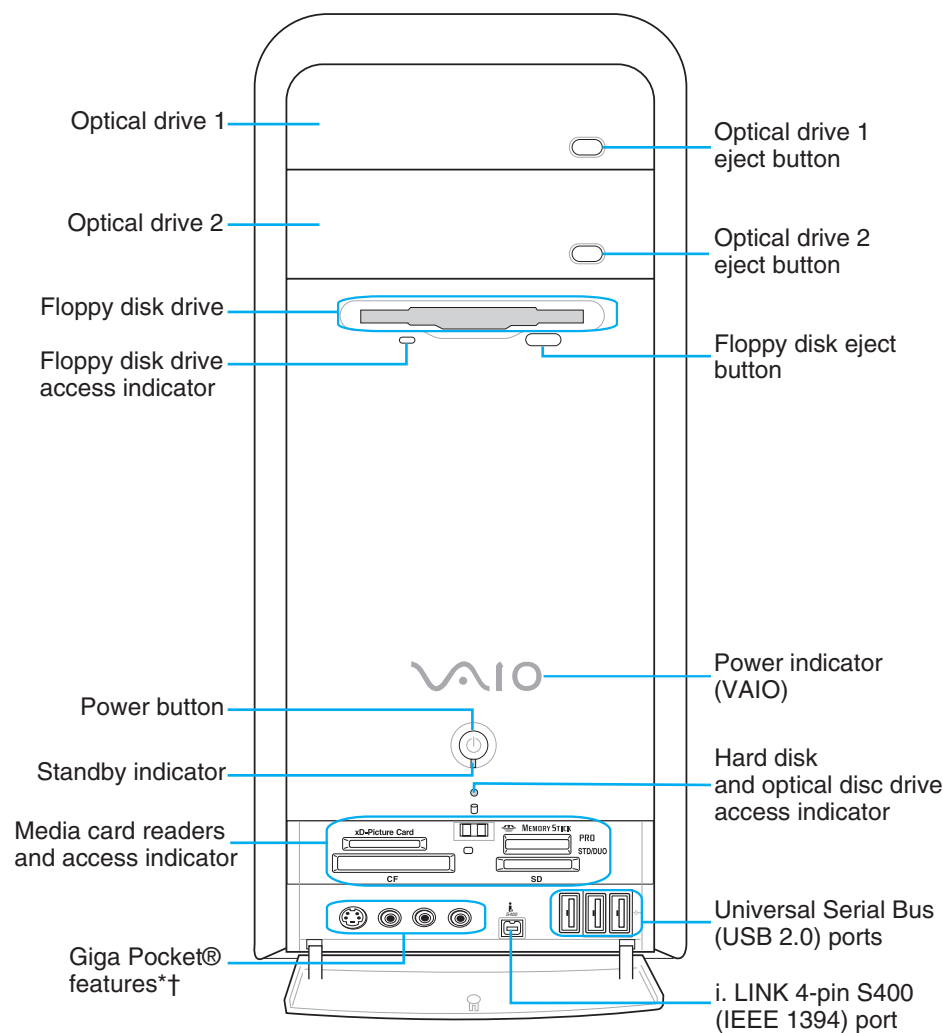

Back Panel

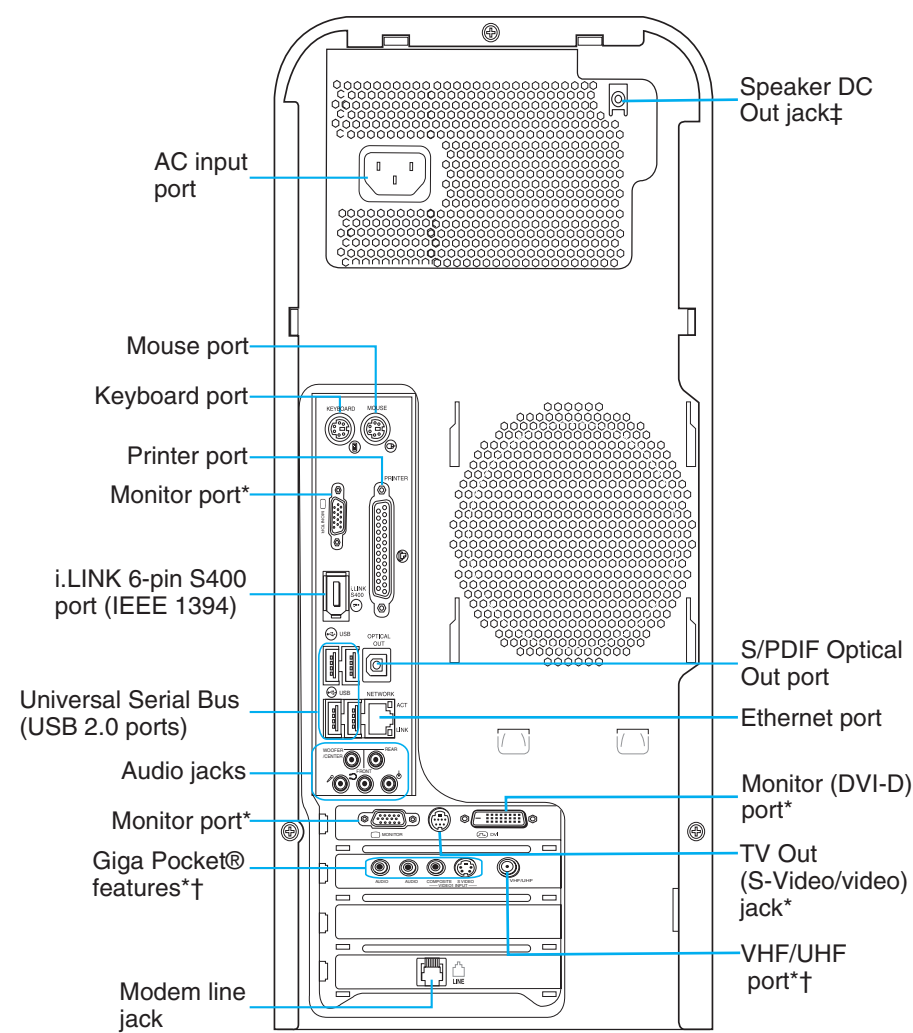

* Not available with all VAIO® computer models.

† Details on Giga Pocket ports and jacks are located on the back.

‡ Not required for supplied speakers.



Part No. 2-345-580-02 © 2004 Sony Electronics Inc. All rights reserved. Printed in USA.

1 Display

The location and availability of the monitor ports may vary, depending on the model purchased.

2 Speakers

- 1 From the right speaker, plug the jack connector into the headphones jack.
- 2 From the right speaker, plug the AC power cord into a grounded AC wall outlet or surge suppressor.

3 Keyboard & Mouse

Mouse
Keyboard

4 Telephone and Modem

"1-to-2" jack adapter (splitter - optional)


5 Power Cord

6 Power On

- 1 Press the power button on the computer to turn on the power.
- 2 Press the power button on the display to turn on the power.
- 3 Press the power button, located on the side of the right speaker, to turn on the power.

Giga Pocket


Giga Pocket® Personal Video Recorder is a unique set of tools that enhance your VAIO® computer's capabilities. Giga Pocket gives you a wide range of video recording, viewing, and playback capabilities.

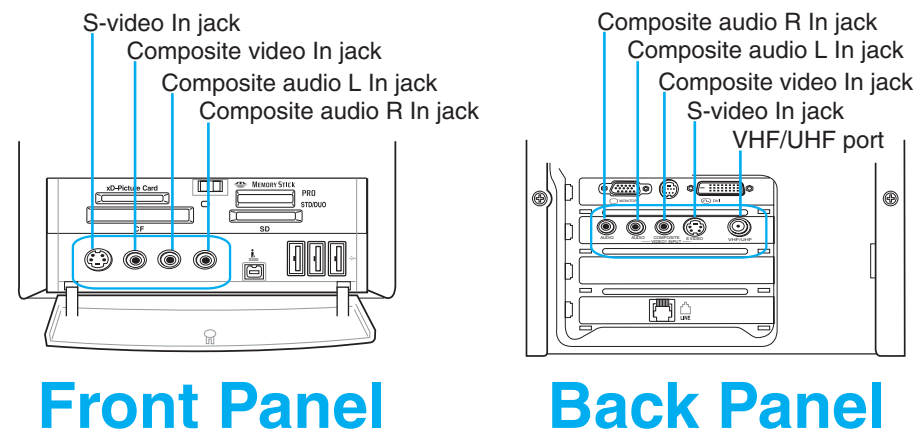

1 Standard cable access

The best method of connecting your computer and cable service access, depends on the type of cable connection available in your home.

- 1 Connect one end of the TV coaxial cable (supplied) to your cable service access.
- 2 Connect the other end of the TV coaxial cable to the VHF/UHF port on the back panel of your computer.

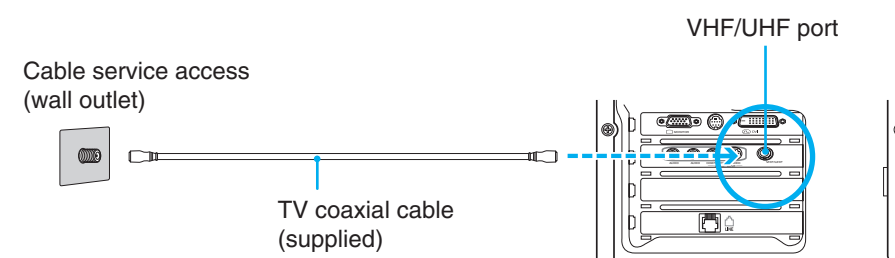

Using Giga Pocket

Giga Pocket® Personal Video Recorder is a suite of interactive Sony audio and video components that are designed to create, capture, and play back video files derived from television and your personal videos.

Giga Pocket® enables you to watch a TV program on your computer display while recording it onto your hard disk drive. Using the Giga Pocket Slip Play feature, you can view a program from the beginning even while it is being recorded.


Starting Giga Pocket

- 1 Click **Start > All Programs > Giga Pocket**.




2 Standard antenna modes


Option 1

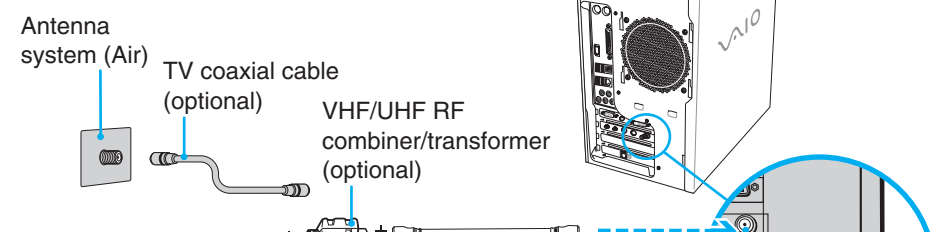

Option 2

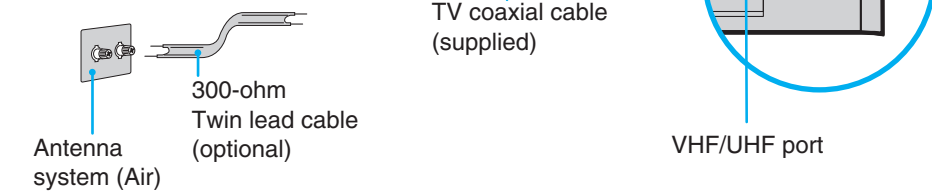

3 Set-top box (STB) mode

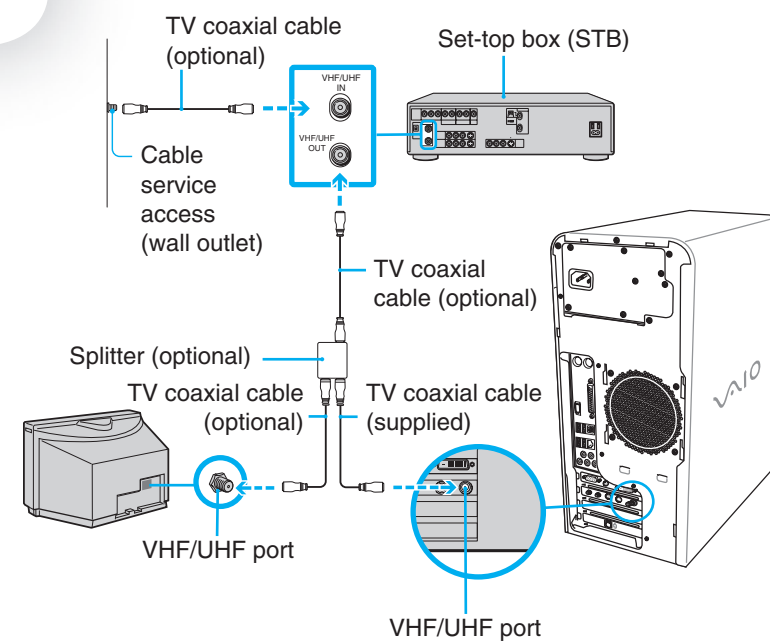

Hard Disk Drive Recovery

Your computer is equipped with the VAIO Recovery Wizard, a utility program that recovers your computer's operating system and preinstalled software to original factory installed settings.


For online information about hard disk recovery:

- 1 Click **Start > Help and Support**.
- 2 From the **VAIO Help And Support Center** menu, click **VAIO Recovery Options**.


You can create a VAIO Recovery Media Kit using CD-R, single layer DVD+R, or single layer DVD-R media on VAIO computers equipped with the appropriate optical drive (a CD-RW, DVD-RW, or DVD±RW drive).

DVD+RW, DVD-RW, double layer DVD+R, and double layer DVD-R media (when it becomes available) cannot be used to create a VAIO Recovery Media Kit.

4 VCR or camcorder

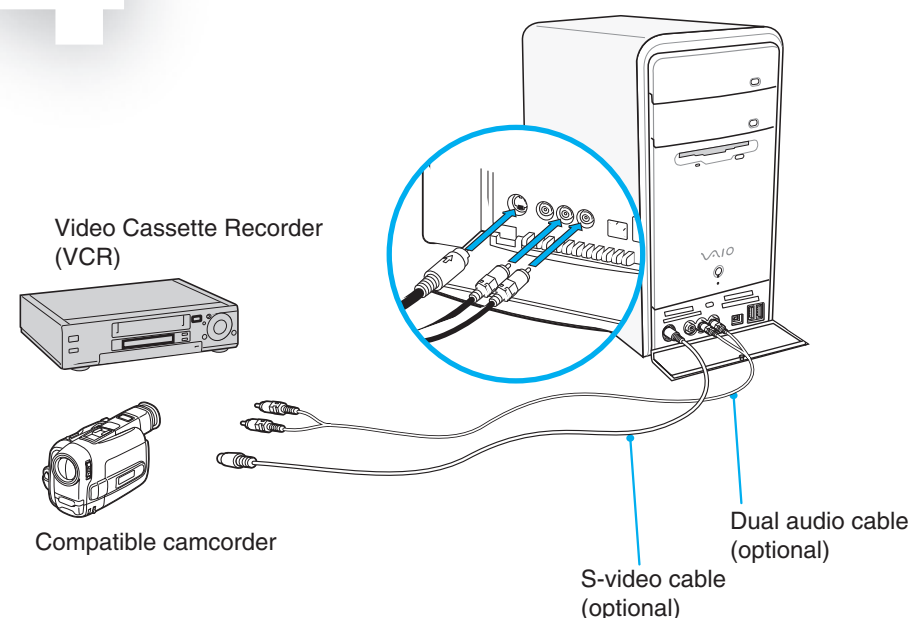

5 Infrared receiver

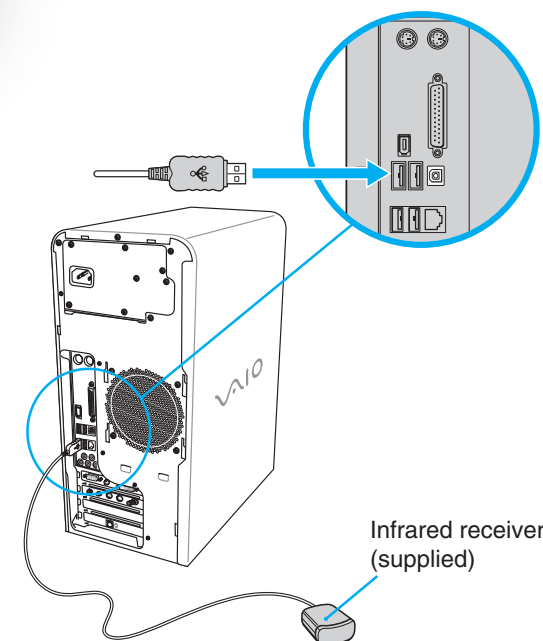

Support Options

If you have questions about your computer or the preinstalled programs, refer to the following sources for answers.

VAIO® Computer User Guide

The on-screen VAIO® Computer User Guide provides detailed information on how to maximize your computer capabilities and solve common problems.

- 1 Click **Start > Help and Support**.
- 2 From the **VAIO Help And Support Center** menu, click **VAIO User Guide**.

VAIO® Recovery Options Guide

Provides information about restoring individual software programs, software drivers, drive partition(s), or your entire hard disk drive to the original factory installed settings.

- 1 Click **Start > Help and Support**.
- 2 From the **VAIO Help And Support Center** menu, click **VAIO Recovery Options**.

Sony online Support

You can visit the Sony online support Web site at: <http://www.sony.com/pcsupport>. This Web site provides access to information on commonly encountered problems.