



## Video Quick Set Up

### 1 Connect Component cable

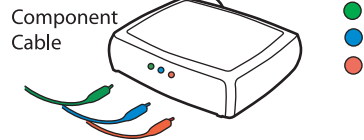


Connect Component cable from DVD, VCR, TV and satellite tuners, camcorders, or video game consoles to **Component**. Component cable may be used for progressive and HDTV sources.

### 1 Connect S-video cable

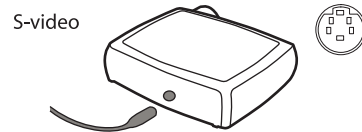

Connect S-video cable from DVD, VCR, TV and satellite tuners, camcorders, or video game consoles to **S-video**. S-video **should not** be used for progressive and HDTV sources.

### 1 Connect DVI cable

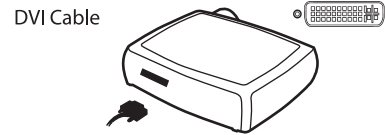


Connect the computer cable from High Definition (HD) sources to DVI. HD sources include HDTV, EDTV, and Progressive devices.

### 1 Connect Composite cable




Connect Composite cable from DVD, VCR, TV and satellite tuners, camcorders, or video game consoles to **Video**. Composite cable **should not** be used for progressive and HDTV sources.


### 2 Connect power cable

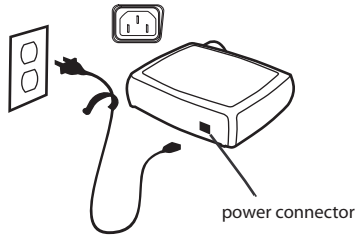


### 3 Remove lens cap

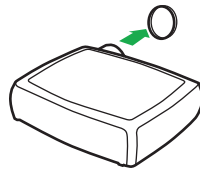


### 4 Power on projector warm up

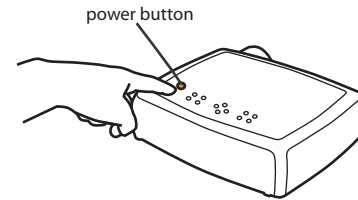


### 5 Adjust height

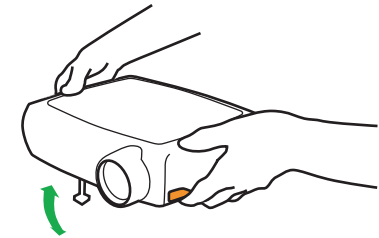

### 6 Adjust zoom and focus

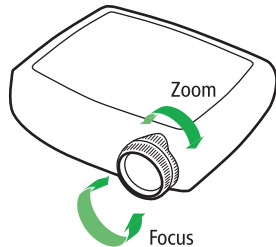


### 7 Adjust keystone

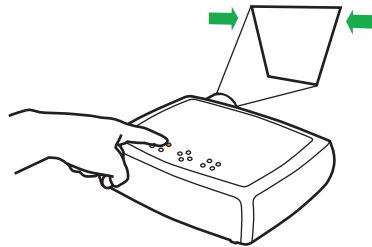

### 8 Power on video source



### 9 Project from source

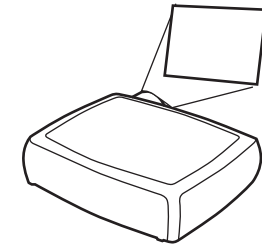

 See manual for detailed information and troubleshooting  
Please read the Safety Card before setting up the projector

009-0931-00 