





# HOOKER<sup>®</sup>

— FURNITURE —


## ASSEMBLY INSTRUCTION

Item#: 500-501020-89 Accent Chest

**\*\* Please make sure you have all parts indicated below prior to assembly. This unit is heavy and can best be assembled with the help of two or more people.**

NO.	HARDWARE LIST	Q'TY
A	 FLAT WASHER	8
B	 LOCK WASHER	8
C	 5/16*45mm BOLT	8
D	 ALLEN WRENCH	1

### Assembly steps:

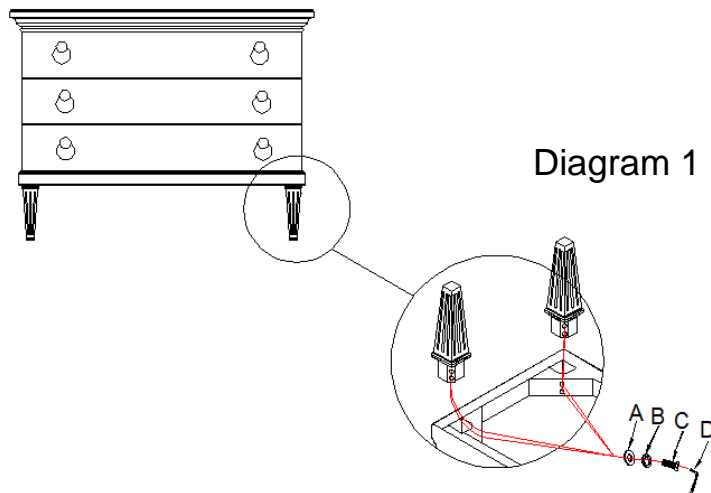

1. Place the top upside down on a soft surface to prevent it from being scratched.
2. Follow numbers on legs and corner blocks. Attach legs to accent chest by using flat washers (A), lock washers (B) and bolts (C), secure by turning with allen wrench (D) in a clockwise direction. (See Diagram 1)
3. Turn accent chest upright.

**Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.**