




30" FREESTANDING GAS RANGE WITH 4 BURNERS

MODELS:

KFGC500JSC00 (Scorched Orange)


BURNER BOX PARTS

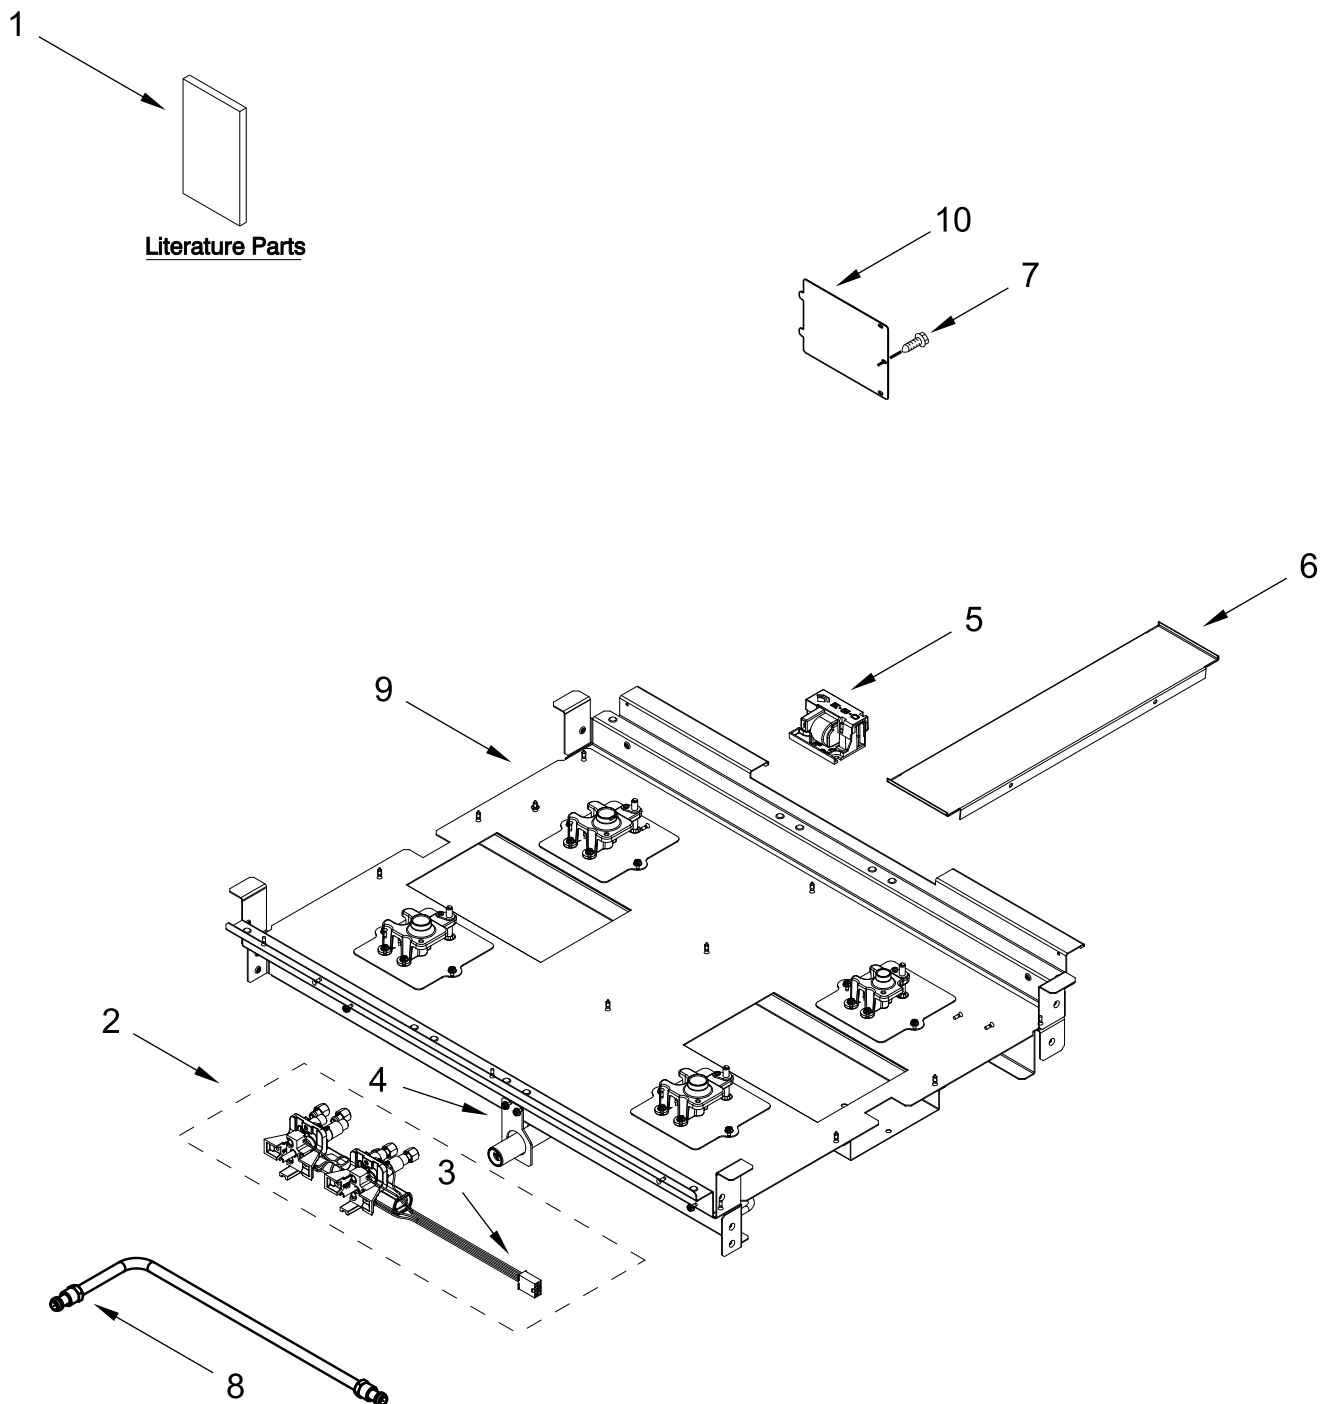

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	7101P426-60	Screw	10	W10115843	Cover, Ignition
	W11177370	Guide, Use and Care	8	W10892281	Tube, Manifold Supply			FOLLOWING PARTS NOT ILLUSTRATED
	W11177374	Instructions, Installation			(Left)			
	W11184759	Guide, Internet Connectivity		W10892292	Tube, Manifold Supply		W11200309	Harness, Main (30")
	W11202388	Diagram, Wiring			(Right)		W11200328	Harness, Cooktop
	W11202292	Sheet, Tech	9		Box, Burner (Not Serviced)		W10780278	Harness, Door Lock
	W11364680	Guide, Quick Start					W11200325	Harness, Communication
2	W10892994	Assembly, Valve Manifold					W11242785	Harness, WIFI
		(Left Front, Left Rear)					W10624584	Cord, Power
	W10892997	Assembly, Valve Manifold					4450800	Screw, Grounding
		(Right Front, Right Rear)					W10253333	Bracket, Anti-Tip
3	W10903728	Switch, Harness					7101P485-60	Screw, Anti-Tip Kit
4	W11121194	Bracket, Manifold					W11238042	Kit, LP Conversion
5	W11121317	Module, Spark					W11311196	Ignitor Wire, Wire-Electrode Bake
6	W11121361	Filler, Cooktop					W11311197	Ignitor Wire, Wire-Electrode Broil


COOKTOP, BURNER AND GRATE PARTS

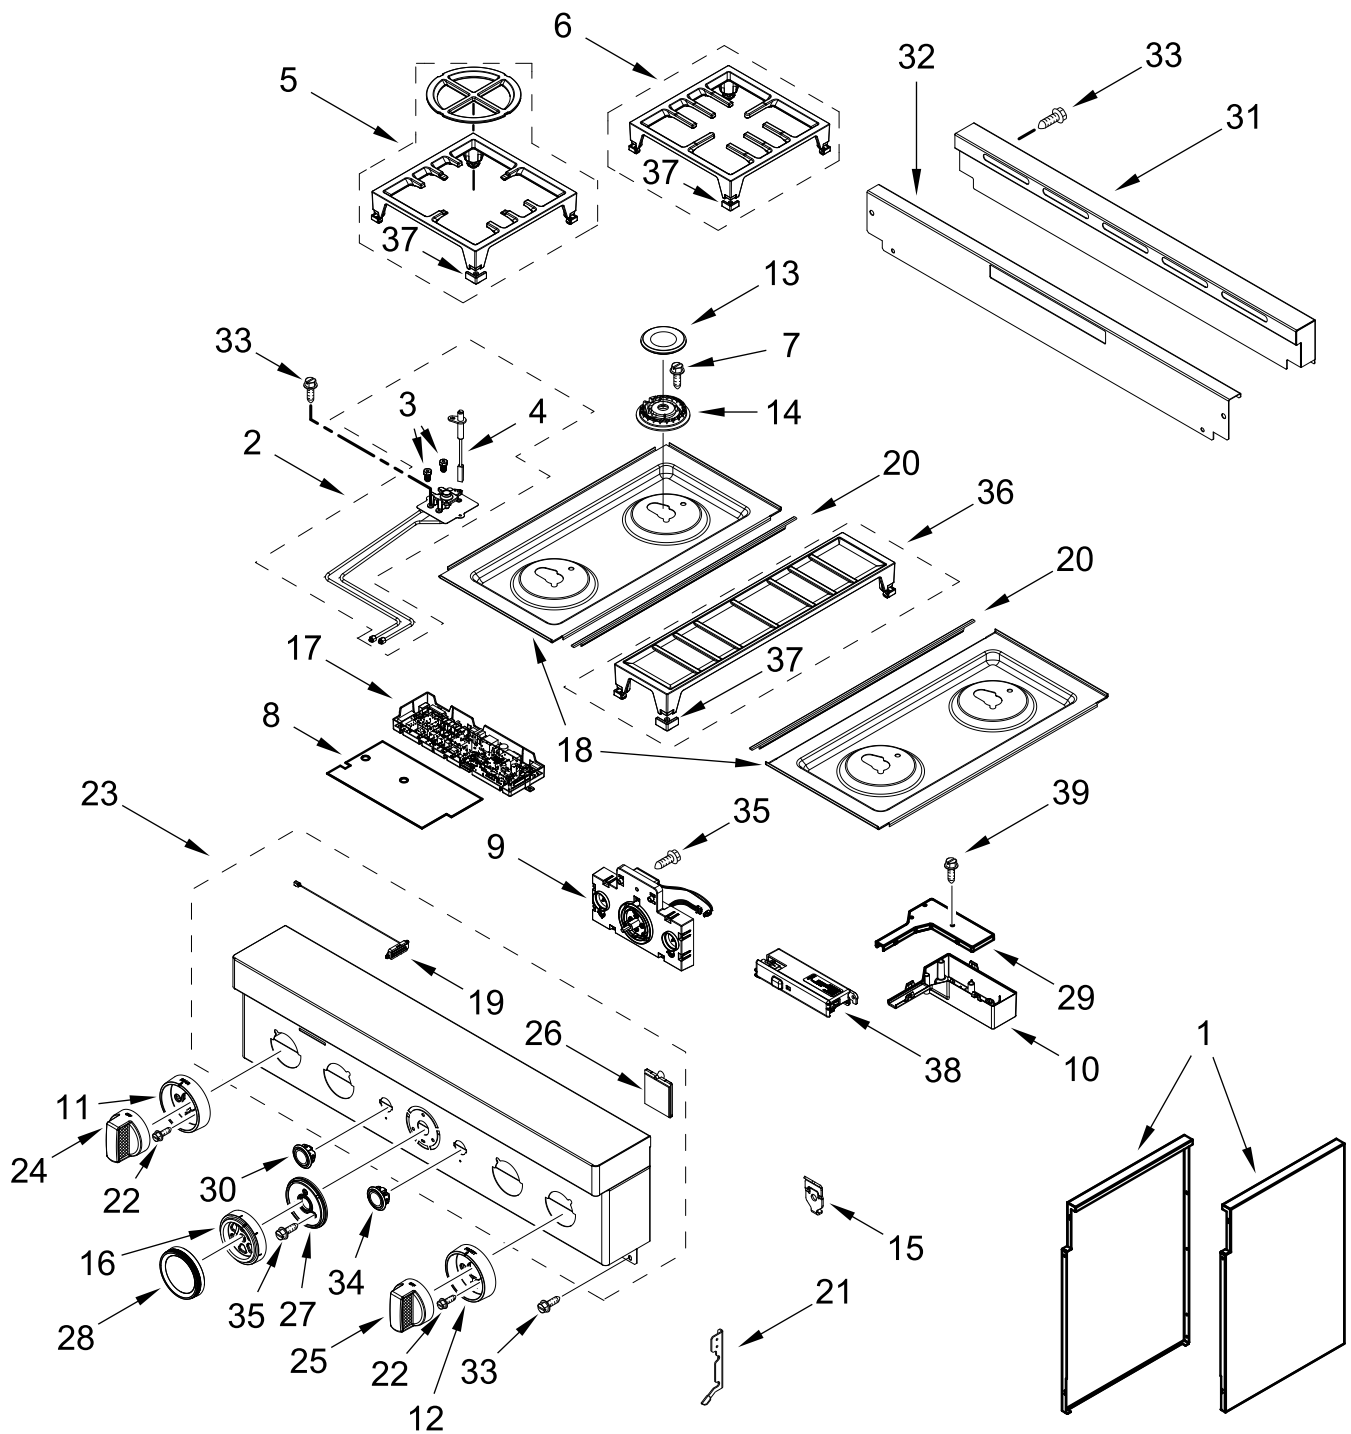

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	5	W11291183	Burner, Grate (With Wok Ring)	19	W11130078	Antenna, WIFI
	W11106880	Panel, Cabinet Side (Right)	6	W11291179	Burner, Grate	20	W10271524	Trim, T-Strip
2	W10892774	Assembly, Orifice Holder (Left Front)	7	W11323261	Screw (8-18 X 1")	21	W10130760	Bracket, Moving Console (Left)
	W10892484	Assembly, Orifice Holder (Left Rear)		W11323309	Screw (8-18 X 1/2")		W10130759	Bracket, Moving Console (Right)
	W10892479	Assembly, Orifice Holder (Right Front)	8	W11281269	Barrier, Appliance Manager	22	W10919387	Screw
	W10892735	Assembly, Orifice Holder (Right Rear)	9	W11095714	Interface, User	23	W10877949	Panel, Console
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	10	W11205795	Cover, WIFI Outer	24		Knob, Single
	W10892419	Orifice, Main (15K) (Left Rear)	11	W10883433	Bezel (Rear Burners)		W10912166	Stainless Knob, Dual
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	12	W10881642	Bezel (Front Burners)	25	W10883172	Stainless
	W10892438	Orifice, Simmer (5K) (Right Rear)	13		Cap, Burner	26	W10896366	Assembly, Light Pipe
4	W11238757	Igniter (Left Front, Right Front)		W11121389	Black (Set Of 4)	27		Bezel, Oven
	W10892340	Igniter (Left Rear)	14	W10891746	Spreader, Flame (High) (Left Front, Right Front)	28	W10913810	Stainless Knob, Oven Temperature
	W11114379	Igniter (Right Rear)		W10891974	Spreader, Flame (Low) (Left Rear)		W11249669	Stainless
				W10891978	Spreader, Flame (AUX) (Right Rear)	29	W11205794	Cover, WIFI Inner
			15	W11036559	Spring Clip, Range	30	W11241511	Button Assembly, Oven Light
			16		Knob, Oven Mode	31	W11183085	Trim, Island
				W11264992	Stainless	32	W10323248	Insert, Island Trim
			17	W11100282	Manager, Appliance (Powermax)	33	7101P426-60	Screw
			18		Panel, Cooktop	34	W11241510	Button Assembly, Oven Start
				W11038235	Black (Left)	35	3400814	Screw
				W11038245	Black (Right)	36	W11291178	Kit, Grate Filler
						37	W11042504	Bumper, Grate
						38	W11110768	Assembly, WIFI Module
						39	7101P624-60	Screw


CHASSIS PARTS

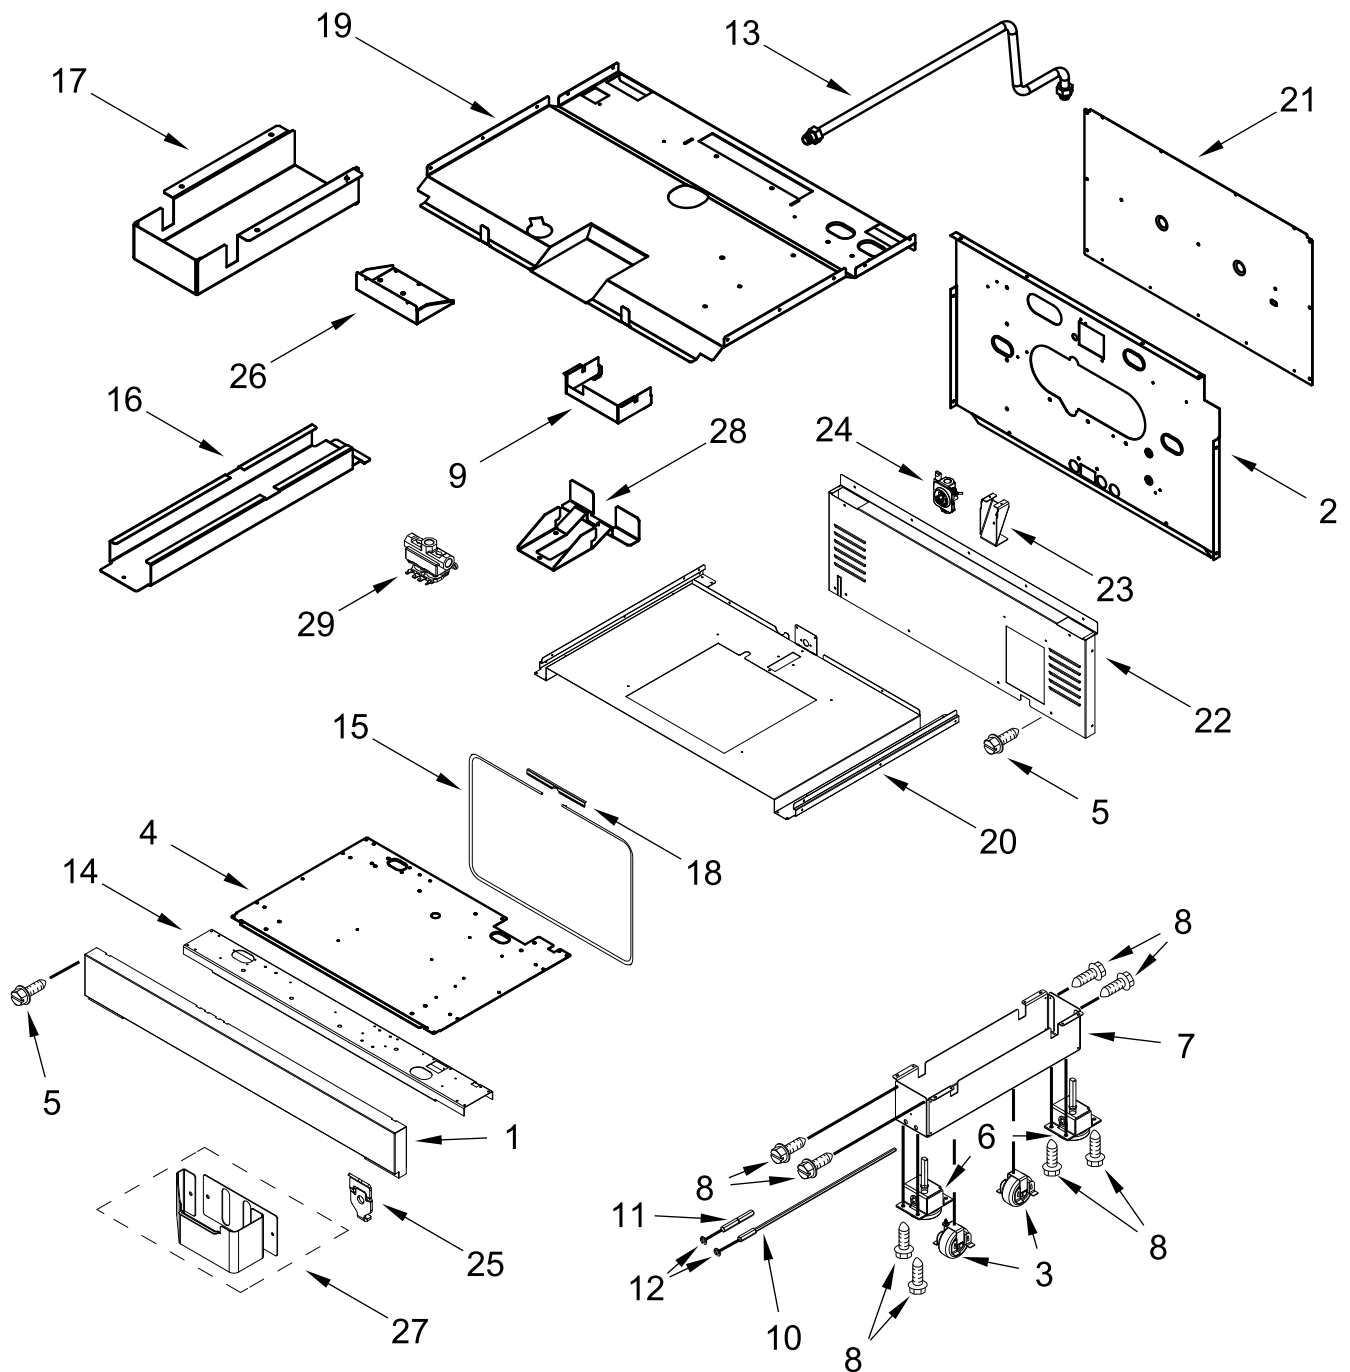

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394779	Kickplate	13	W11181648	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
2	W11324989	Back, Chassis	14	W11087491	Support, Channel	24	W10896959	Regulator, Pressure
3	W10138054	Assembly, Roller	15	W11115328	Gasket, Oven (30")	25	W11036559	Spring Clip, Range
4	W11109583	Duct, Bottom (30")	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
5	7101P426-60	Screw	17	W11368831	Channel, Wire	27	W11199181	Cover, Foot (Left)
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9" Long)		W11199178	Cover, Foot (Right)
7	W10908710	Base, Leveling Leg	19	W11324986	Top, Chassis	28	W11190223	Bracket, Bake Alignment
8	4449743	Screw	20	W11040802	Chassis, Bottom	29	W10145680	Valve, Dual
9	W11369237	Cabinet, Appliance Manager	21	W11103334	Panel, Back Top			
10	W10115869	Shaft, Long	22	W11034134	Panel, Back Bottom			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


OVEN PARTS

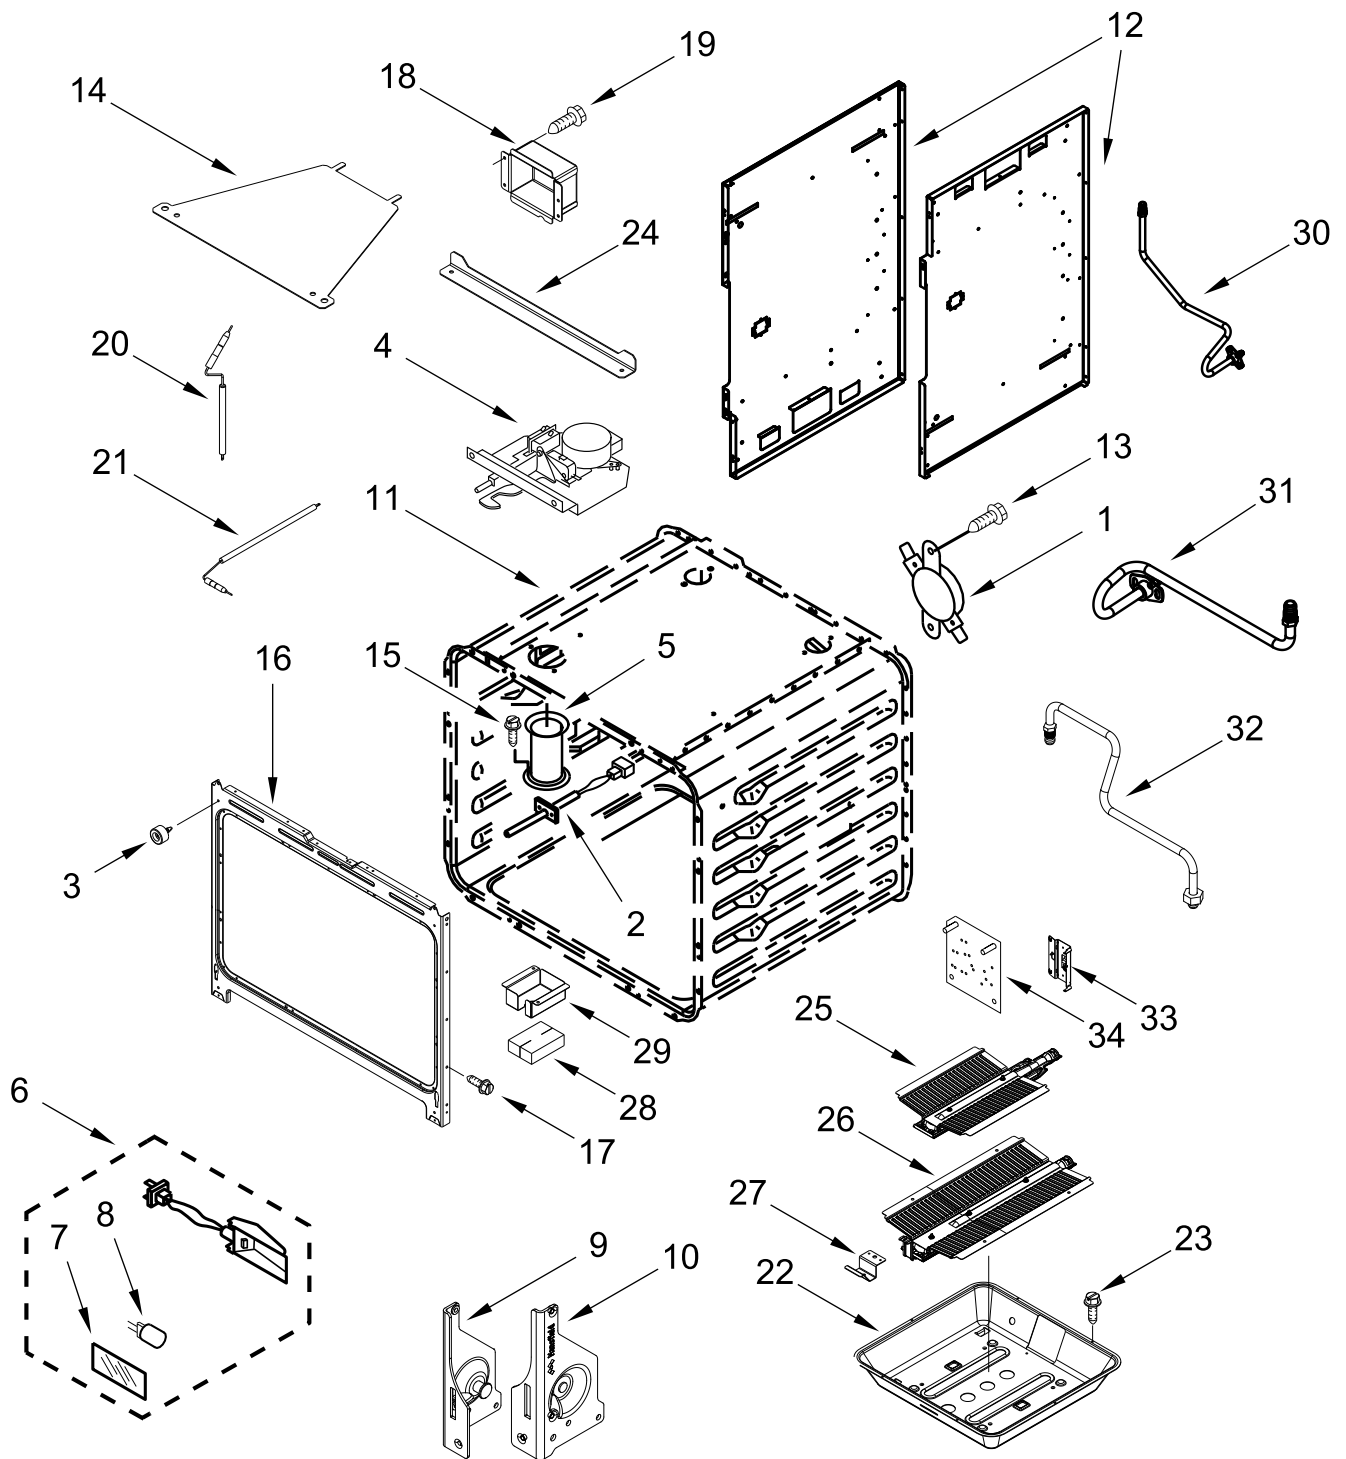

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	13	7101P426-60	Screw	28	W10311009	Insulation, Broil Cover
2	W10622170	Probe, Sensor	14	W10160858	Cover, Latch	29	W10310985	Cover, Broil
3	W10351278	Bumper & Screw	15	3196176	Screw	30	W11109238	Tube, Broil
4	W10830016	Latch, Motorized	16	W11192755	Frame, Front	31	W11106980	Tube, Bake
5	W10145743	Tube, Vent	17	3196560	Screw	32	W11109167	Tube, Gas
6	W11223932	Assembly, Oven Light	18	W10308051	Box, Broil	33	W10145362	Bracket-Board, DSI
7	W10169756	Lens, Light	19	7101P434-60	Screw	34	W10511278	Module, Spark DSI
8	W10169757	Bulb, Light	20	W11182863	Electrode, Broil			FOLLOWING PARTS NOT ILLUSTRATED
9	W11096294	Receiver, Hinge (Left)	21	W11205400	Electrode, Bake			
10	W11096293	Receiver, Hinge (Right)	22	W10145744	Support, Bake Pan			
11		Liner, Oven (Not Serviced)	23	12992902	Screw		W10282810	Insulation, Wrap, 30"
12	W11102297	Chassis, Side (Left)	24	W10317437	Bracket, Broil Standoff		W11109145	Insulation, Back, 30"
	W11102296	Chassis, Side (Right)	25	W10878504	Burner, Bake		W10299354	Insulation, Bottom
			26	W10311335	Burner, Broil		3400968	Nut
			27	W10308040	Bracket, Bake Burner			


VENTING PARTS

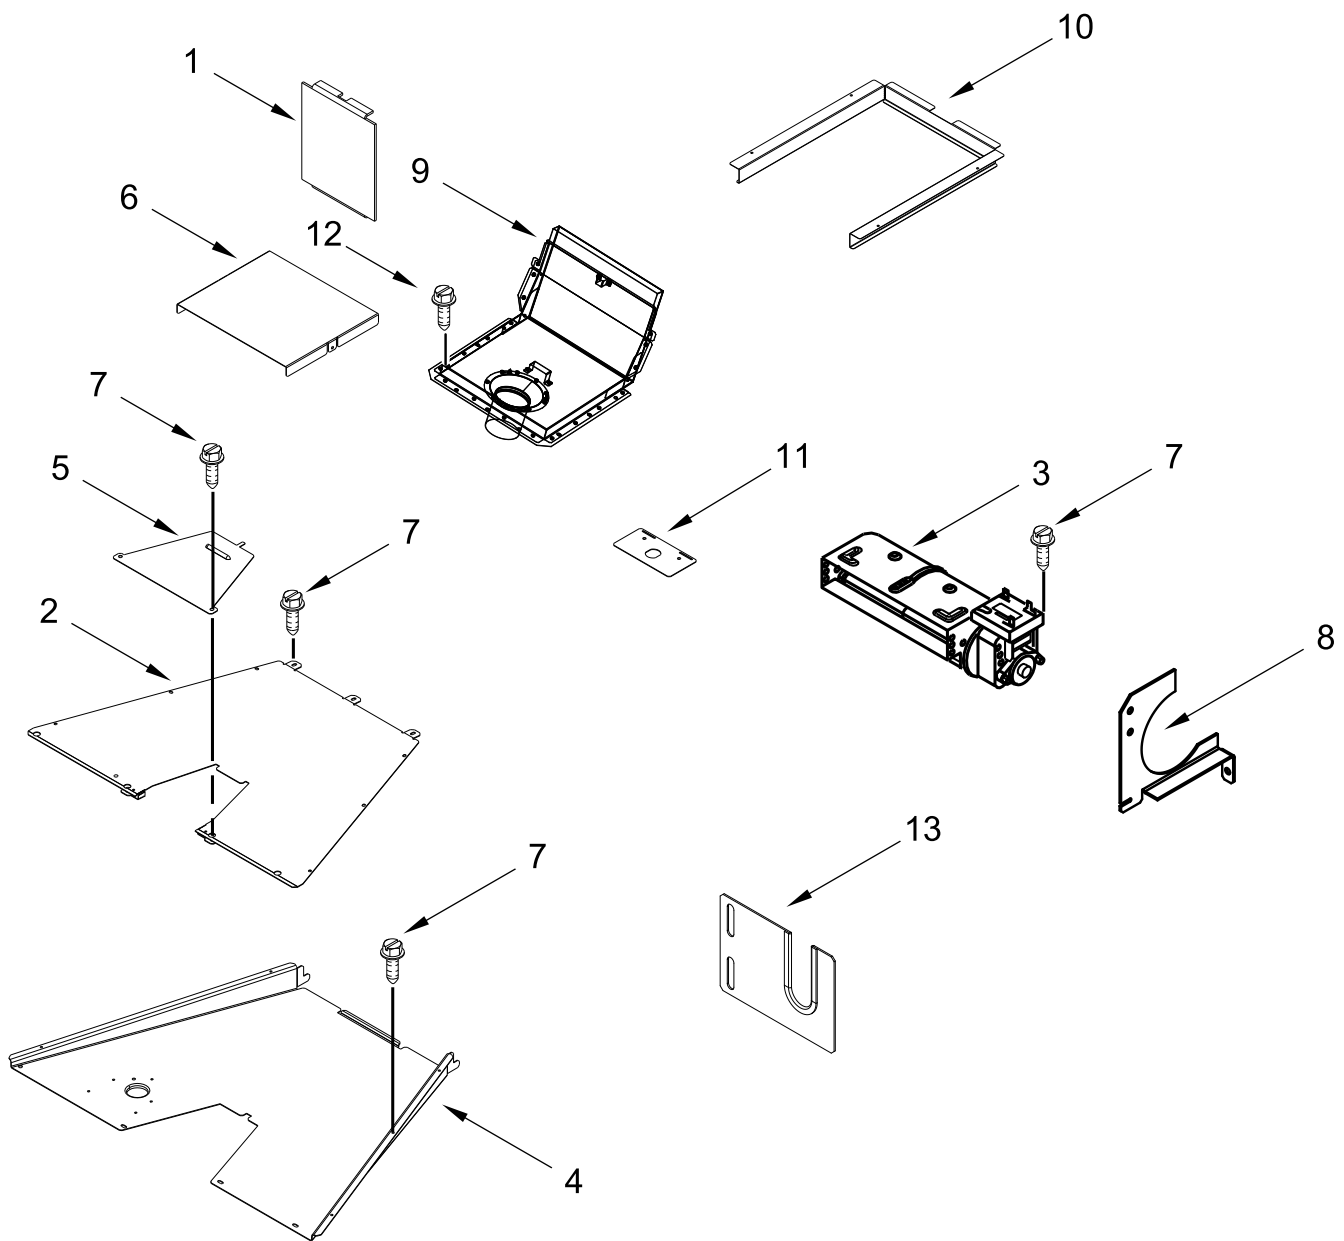

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10246087	Insulation, Chimney	6	W10246086	Retainer, Insulation	11	W10115855	Holder, Strain Relief
2	W11105221	Vent, Cooling Top (30")	7	7101P426-60	Screw	12	3400805	Screw (Zinc)
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
4	W11091676	Vent, Cooling Bottom (30")	9	W10340579	Vent, Chimney Box (30" / 36")			
5	W11109518	Plate, Cooling Latch	10	W10145363	Duct, Primary Air (30")			


OVEN DOOR PARTS

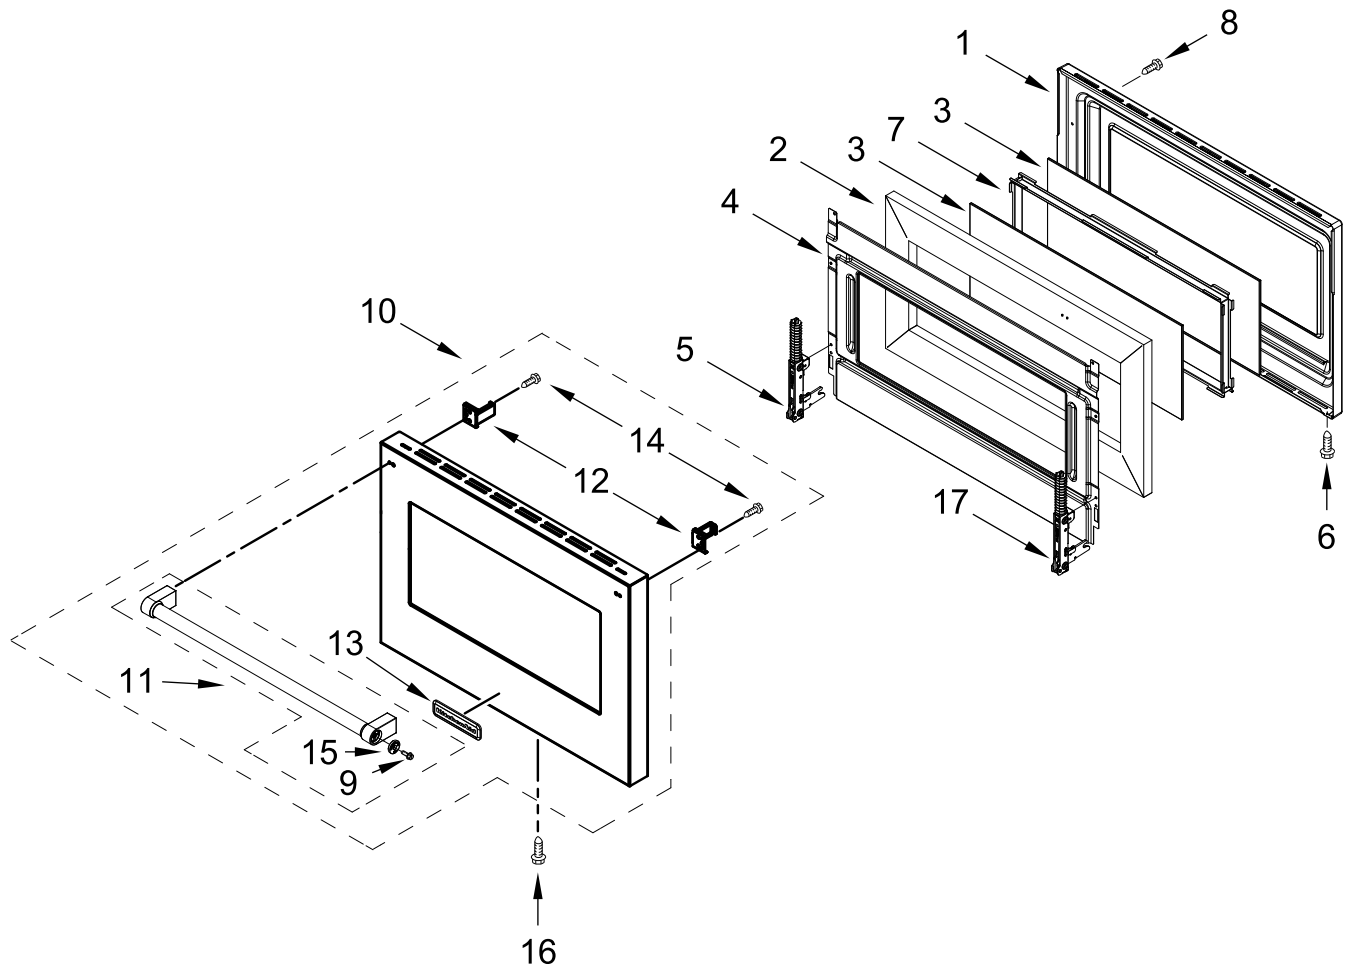

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W10321285	Insulation, Door	8	W10898280	Screw	13	W10518672	Badge
3	W11184409	Glass, Inner	9	W10656499	Screw	14	W10276043	Screw
4	W11194821	Retainer, Glass	10	W11389287	Assembly, Outer Door (Includes Handle)	15	W11221410	Medallion, Handle
5	W11390105	Hinge, Door (Left)	11	W11221412	Assembly, Door Handle	16	W10162096	Screw
6	W10607120	Screw				17	W11390124	Hinge, Dual (Right)

INTERNAL OVEN PARTS

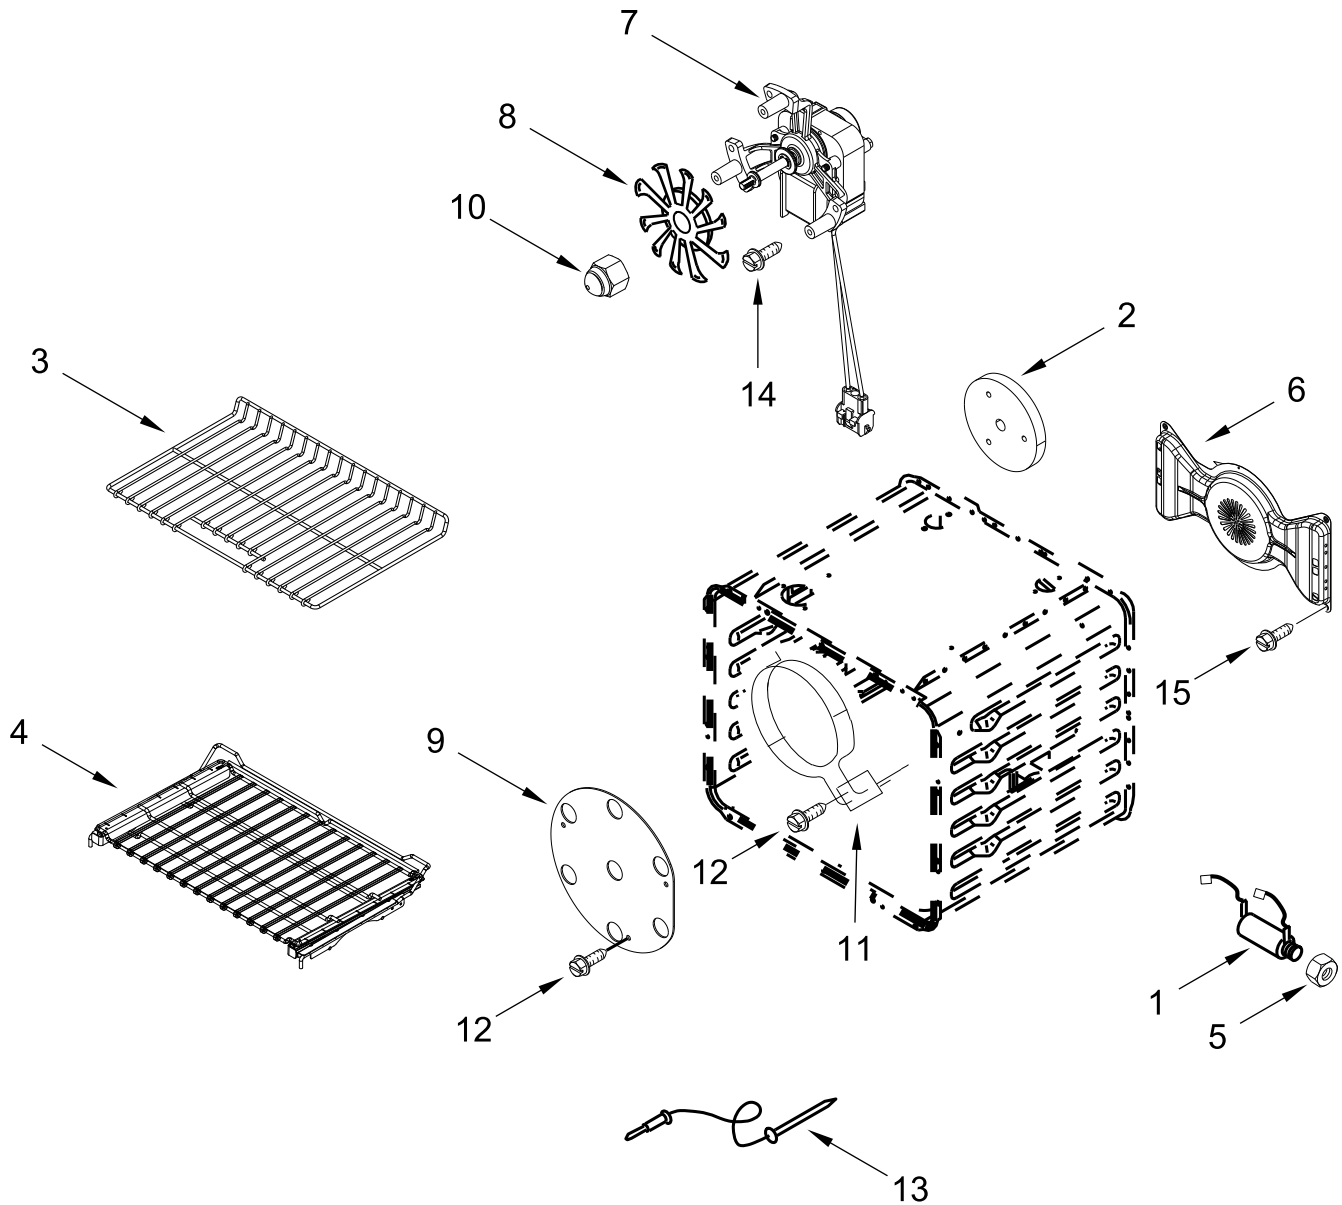

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9755543	Jack, Meat Probe	7	W10631506	Motor, Convection	13	9755542	Probe, Temperature
2	W10282821	Insulation, Convection Cover	8	W10631503	Blade, Fan	14	W10720084	Screw
3	W10570887	Rack, Oven	9	W10261523	Plate, Fan	15	W10739592	Screw
4	W11108461	Rack, Oven (Sliding)	10	W10631504	Nut, Acorn (LH)			
5	W11033111	Nut, Locking	11	W11098505	Element, Convection Heat			
6	W11212180	Baffle, Convection	12	4449154	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Medallion, Handle
	W11368841SI	Sl. Silver
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze
	W11368841DD	Dark Blue