



CERTIFICATE OF WARRANTY

Model Number:
Modèle:
Modellnummer:

Numero del modelo:
型号:
モデル番号:

Sold To
Vendu à:
Verkauft an:

Vendido a:
售予:
販売先:

Country/Date:
Pays/Date :
Land/Datum:

País/Fecha:
国家/日期:
国/日付:

Sold By:
Vendu par:
Verkauft durch:

Vendido por:
出售方:
販売店:

Retailer Stamp:
Cachet du revendeur:
Stempel des Händlers:

Sello del vendedor:
零售商印章:
小売店のスタンプ:

SHINOLA

DETROIT

At Shinola, we've made a lasting commitment to making lasting things. World-class watches, beautiful leather goods, high-integrity audio, thoughtful gifts, and a hotel. If it's made, we want to try to make it better.

With relentless optimism, tenacity, humor, and humility, we help people shine in an understated way.

SCREW-DOWN CROWNS

CROWN FUNCTIONALITY

The components of your Shinola watch are made of the finest materials and have been rigorously inspected to meet our strict criteria. Some Shinola watches feature a screw-down crown, which adds an extra level of water-tightness. To safeguard your investment, it is important to understand how this type of crown works:

- 1 To make the crown operational, unscrew it from the case by turning it counterclockwise until it releases. Once released, follow the instructions for setting the time/date as described in the next sections.
- 2 To reseal the crown, press it in against the case until the threads engage, and turn clockwise until tight. It is important to reseal your crown to maintain water-tightness.



WATCH MODELS WITH DATE INDICATOR

PLEASE NOTE:

- If your watch features a date indicator, the date window might be in a different position from the one depicted in this manual.
- Shinola timepieces have different movements. Depending on the movement, it may be necessary to adhere to a specific time period when setting the date indicator. Before adjusting the date setting, please refer to the instructions pertaining to the individual movement of the purchased timepiece.

CONFLICT-FREE DIAMONDS

Any diamonds used in Shinola watches have been purchased from legitimate sources not involved in funding conflict and in compliance with United Nations resolutions. We hereby guarantee that these diamonds are conflict-free, based on written guarantees provided by the supplier of these diamonds.

SINGLE TIME MODELS

SETTING THE TIME


- 1 Pull out the crown to position II.
(The watch stops.)
- 2 Turn the crown until you reach the correct time.
- 3 Push the crown back to position I.



SINGLE TIME WITH DATE MODELS

SETTING THE TIME

- 1 Pull out the crown to position III.
(The watch stops.)
- 2 Turn the crown until you reach the correct time.
- 3 Push the crown back into position I.

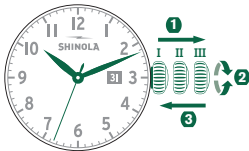

SETTING THE DATE

- 1 Pull out the crown to position II.
(The watch continues to run.)
- 2 Turn the crown until the correct date appears.
- 3 Push the crown back to position I.
- 4 If setting the date between 9:30 p.m. and 12:00 a.m., follow steps 1 through 3, but be sure to set the date to the following day.




CHRONOGRAPH MODEL 5020.B

DESCRIPTION OF THE DISPLAY AND CONTROL BUTTONS

Please note:


Before using the chronograph functions, please ensure that:

- the crown is in position **I** (= normal position).
- the four chronograph hands are precisely at zero position following activation of push-button **B**. If the hands are not precisely at zero, their positions must be adjusted. (See the chapter *Adjusting the Chronograph Hands to Zero*.)

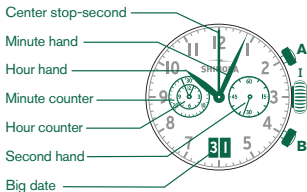

SETTING THE TIME

- 1 Pull out the crown to position **III**. (The watch stops.)
- 2 Turn the crown until you reach the correct time.
- 3 Push the crown back to position **I**.

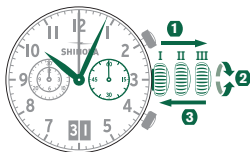


SETTING THE DATE

- 1 Pull out the crown to position **II**. (The watch continues to run.)
- 2 Turn the crown until the correct date appears.
- 3 Push the crown back to position **I**.
- 4 If setting the date between 9:30 p.m. and 12:00 a.m., follow steps 1 through 3, but be sure to set the date to the following day.



ADJUSTING THE CHRONOGRAPH HANDS TO ZERO


- 1 Pull crown out to position **III**.
(All four chronograph hands are in their correct or incorrect zero position.)
- 2 Keep push-buttons **A** and **B** depressed **simultaneously** for at least 2 seconds.
(The center stop-second rotates by 360° - corrective mode is activated.)
- 3 Press push-button **A** to single step the **center stop-second hand**. Press and hold push-button **A** to advance the center stop-second hand quickly. **3b** Press push-button **B** to advance to the next hand.
- 4 Press push-button **A** to single step the **minute** and the **hour counter hands**. Press and hold push-button **A** to advance the **minute** and **hour counter** hands quickly.
- 5 Return the crown to position **I**.

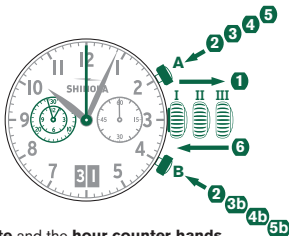

BASIC FUNCTION (START / STOP / RESET)

Example


- 1 **Start:** Press push-button **A**.
- 2 **Stop:** to stop the timing, press push-button **A**.
once more and read the four chronograph
counters: 4 hr. / 20 min. / 5 sec.
- 3 **Zero positioning:** Press push-button **B**.
(The four chronograph hands will
be reset to their zero positions.)

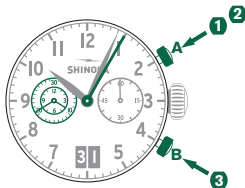

ACCUMULATED TIMING

Example

- 1 Start:** start timing.
- 2 Stop:** e.g., 15 min. 5 sec. following **1**.
- 3 Restart:** timing is resumed.
- 4 *Stop:** e.g., 10 min. 5 sec. following **3**.
The accumulated time = 25 min. 10 sec.
- 5 Reset:** The three chronograph hands are returned to their zero positions.

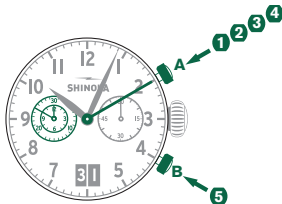


Please note:

* Following **4**, the accumulation of the timing can be continued by pressing push-button **A** (Restart/Stop, Restart/Stop,...)

INTERMEDIATE OR INTERVAL TIMING

Example

- 1 Start:** start timing.
- 2 Display interval:**
e.g., 10 min. 10 sec. following **1**.
Timing continues in the background.
- 3 Making up the measured time:**
the four chronograph hands are quickly advanced to the ongoing measured time.
- 4 Stop:** (Final time is displayed).
- 5 Reset:** The three chronograph hands are returned to their zero positions.

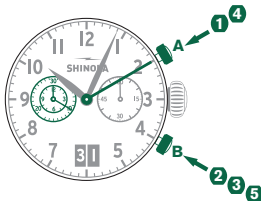

Please note:

* Following **3**, further intervals or intermediates can be displayed by pressing **B** (display interval / make up measured time, ...)


CHRONOGRAPH MODEL 5021.D

DESCRIPTION OF THE DISPLAY AND CONTROL BUTTONS

Please note:


Before using the chronograph functions, please ensure that:

- the crown is in position **I** (= normal position).
- the two chronograph hands are precisely at zero position following activation of push-button **B**. If the hands are not precisely at zero, their positions must be adjusted. (See the chapter *Adjusting the Chronograph Hands to Zero.*)

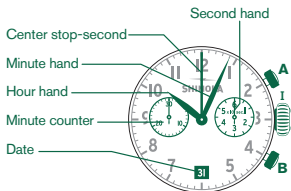


SETTING THE TIME

- 1 Pull out the crown to position **III**. (The watch stops.)
- 2 Turn the crown until you reach the correct time.
- 3 Push the crown back to position **I**.

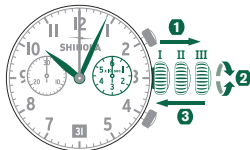


SETTING THE DATE

- 1 Pull out the crown to position **II**. (The watch continues to run.)
- 2 Turn the crown until the correct date appears.
- 3 Push the crown back to position **I**.
- 4 If setting the date between 9:30 p.m. and 12:00 a.m., follow steps 1 through 3, but be sure to set the date to the following day.

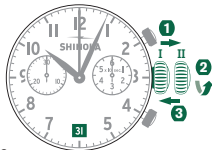

ADJUSTING THE CHRONOGRAPH HANDS TO ZERO


- 1** Pull crown out to position **III**.
(All two chronograph hands are in their correct or incorrect zero position.)
- 2** Keep push-buttons **A** and **B** depressed **simultaneously** for at least 2 seconds.
(The center stop-second hand rotates by 360° - corrective mode is activated.)
- 3** Press push-button **A** to single step the **center stop-second hand**. Press and hold push-button **A** to advance the center stop-second hand quickly. **3b** Press push-button **B** to advance to the next hand.
- 4** Press push-button **A** to single step the **minute counter hand**. Press and hold push-button **A** to advance the minute counter hand quickly.
- 5** Return the crown to position **I**.

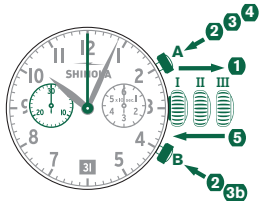

BASIC FUNCTION (START / STOP / RESET)

Example


- 1 Start:** press push-button **A**.
- 2 Stop:** to stop the timing, press push-button **A** once more and read the two chronograph counters: 20min / 10sec.
- 3 Zero positioning:** Press push-button **B**.
(The two chronograph hands will be reset to their zero positions.)

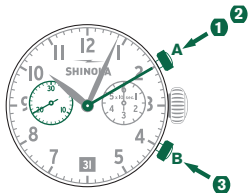

ACCUMULATED TIMING

Example

- 1 Start:** start timing
- 2 Stop:** e.g., 15 min. 5 sec. following **1**.
- 3 Restart:** timing is resumed
- 4 *Stop:** e.g., 13 min. 5 sec. following **3**.
The accumulated time = 28 min. 10 sec.
- 5 Reset:** the three chronograph hands are returned to their zero positions.

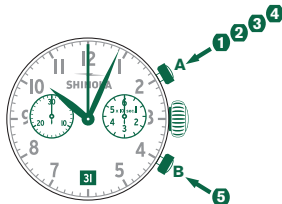


Please note:

- * Following **4**, the accumulation of the timing can be continued by pressing push-button **A** (Restart/Stop, Restart/Stop,...)

INTERMEDIATE OR INTERVAL TIMING

Example

- 1 Start:** start timing.
- 2 Display interval:**
e.g., 10 min. 10 sec. following **1**.
Timing continues in the background.
- 3 Making up the measured time:**
the two chronograph hands are quickly advanced to the ongoing measured time.
- 4 Stop:** e.g., 28 min. 10 sec. following **1**.
- 5 Reset:** the three chronograph hands are returned to their zero positions.

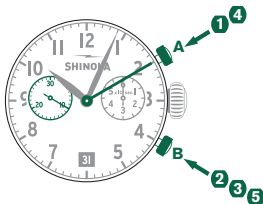

Please note:

- * Following **3**, further intervals or intermediates can be displayed by pressing **B** (display interval / make up measured time, ...)


CHRONOGRAPH MODEL 5030.D

DESCRIPTION OF THE DISPLAY AND CONTROL BUTTONS

Please note:


Before using the chronograph functions, please ensure that:

- the crown is in position **I** (= normal position).
- the three chronograph hands are precisely at zero position following activation of push-button **B**. If the hands are not precisely at zero, their positions must be adjusted. (See the chapter *Adjusting the Chronograph Hands to Zero.*)

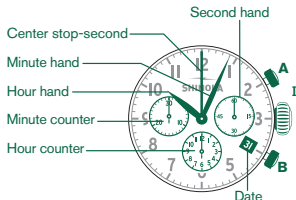


SETTING THE TIME

- 1 Pull out the crown to position **III**. (The watch stops.)
- 2 Turn the crown until you reach the correct time.
- 3 Push the crown back to position **I**.

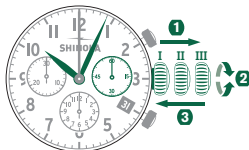


SETTING THE DATE

- 1 Pull out the crown to position **II**. (The watch continues to run.)
- 2 Turn the crown until the correct date appears.
- 3 Push the crown back to position **I**.
- 4 If setting the date between 9:00 p.m. and 12:00 a.m., follow steps 1 through 3, but be sure to set the date to the following day.

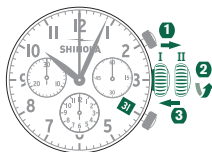

ADJUSTING THE CHRONOGRAPH HANDS TO ZERO


- 1 Pull crown out to position **III**.
(All three chronograph hands are in their correct or incorrect zero position.)
- 2 Keep push-buttons **A** and **B** depressed **simultaneously** for at least 2 seconds.
(The center stop-second rotates by 360° - corrective mode is activated.)
- 3 Press push-button **A** to single step the **center stop-second hand**. Press and hold push-button **A** to advance the center stop-second hand quickly. **3b** Press push-button **B** to advance to the next hand.
- 4 Press push-button **A** to single step the **hour counter hand**. Press and hold push-button **A** to advance the hour counter hand quickly. **4b** Press push-button **B** to advance to the next hand.
- 5 Press push-button **A** to single step the **minute counter hand**. Press and hold push-button **A** to advance the minute counter hand quickly.
- 6 Return the crown to position **I**.

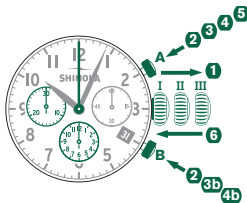

BASIC FUNCTION (START / STOP / RESET)

Example

- 1 **Start:** press push-button **A**.
- 2 **Stop:** to stop the timing, press push-button **A** once more and read the three chronograph counters: 1h / 20min / 10sec.
- 3 **Zero positioning:** Press push-button **B**.
(The three chronograph hands will be reset to their zero positions.)

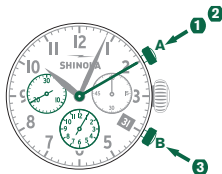

ACCUMULATED TIMING

Example

- 1 Start:** start timing
- 2 Stop:** e.g., 15 min. 5 sec. following **1**.
- 3 Restart:** timing is resumed
- 4 *Stop:** e.g., 13 min. 5 sec. following **3**.
The accumulated time = 28 min. 10 sec.
- 5 Reset:** the three chronograph hands are returned to their zero positions.




Please note:

* Following **4**, the accumulation of the timing can be continued by pressing push-button **A** (Restart/Stop, Restart/Stop,...)

INTERMEDIATE OR INTERVAL TIMING

Example

- 1 Start:** start timing.
- 2 Display interval:**
e.g., 10 min. 10 sec. following **1**.
Timing continues in the background.
- 3 Making up the measured time:**
the three chronograph hands are quickly advanced to the ongoing measured time.
- 4 Stop:** e.g., 28 min. 10 sec. following **1**.
- 5 Reset:** the three chronograph hands are returned to their zero positions.

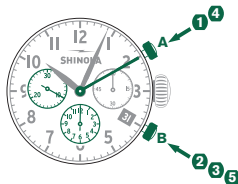

Please note:

* Following **3**, further intervals or intermediates can be displayed by pressing **B** (display interval / make up measured time, ...)


CHRONOGRAPH MODEL 5040.D

DESCRIPTION OF THE DISPLAY AND CONTROL BUTTONS

Please note:


Before using the chronograph functions, please ensure that:

- the crown is in position **I** (= normal position).
- the four chronograph hands are precisely at zero position following activation of push-button **B**. If the hands are not precisely at zero, their positions must be adjusted. (See the chapter *Adjusting the Chronograph Hands to Zero*.)

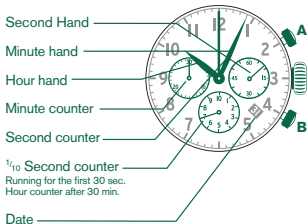

SETTING THE TIME

- 1 Pull out the crown to position **III**.
(The watch stops.)
- 2 Turn the crown until you reach the correct time.
- 3 Push the crown back to position **I**.

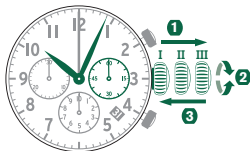


SETTING THE DATE

- 1 Pull out the crown to position **II**.
(The watch continues to run.)
- 2 Turn the crown until the correct date appears.
- 3 Push the crown back to position **I**.
- 4 If setting the date between 9:00 p.m. and 12:00 a.m., follow steps 1 through 3, but be sure to set the date to the following day.



ADJUSTING THE CHRONOGRAPH HANDS TO ZERO


- 1 Pull crown out to position **III**.
(All four chronograph hands are in their correct or incorrect zero position.)
- 2 Keep push-buttons **A** and **B** depressed **simultaneously** for at least 2 seconds.
(The center stop-second rotates by 360° - corrective mode is activated.)
- 3 Press push-button **A** to single step the **center stop-second hand**. Press and hold push-button **A** to advance the center stop-second hand quickly. **3b** Press push-button **B** to advance to the next hand.
- 4 Press push-button **A** to single step the **1/10 second counter hand**. Press and hold push-button **A** to advance the **1/10 second hand** quickly. **4b** Press push-button **B** to advance to the next hand.
- 5 Press push-button **A** to single step the **minute counter hands**. Press and hold push-button **A** to advance the **minute counter** hands quickly.
- 6 Return the crown to position **I**.

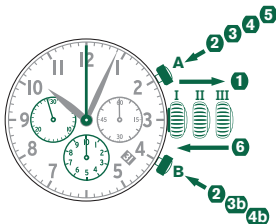

BASIC FUNCTION (START / STOP / RESET)

Example


- 1 **Start:** Press push-button **A**.
- 2 **Stop:** to stop the timing, press push-button **A**. once more and read the three chronograph counters: 7 hr. / 20 min. / 5 sec.
- 3 **Zero positioning:** Press push-button **B**.
(The three chronograph hands will be reset to their zero positions.)

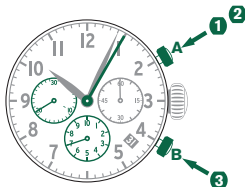

ACCUMULATED TIMING

Example

- 1 Start:** start timing.
- 2 Stop:** e.g., 15 min. 5 sec. following **1**.
- 3 Restart:** timing is resumed.
- 4 *Stop:** e.g., 10 min. 5 sec. following **3**.
The accumulated time = 25 min. 10 sec.
- 5 Reset:** The three chronograph hands are returned to their zero positions.

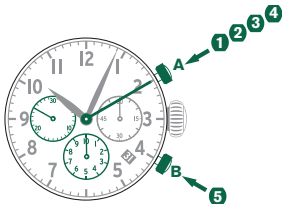


Please note:

* Following **4**, the accumulation of the timing can be continued by pressing push-button **A** (Restart/Stop, Restart/Stop,...)

INTERMEDIATE OR INTERVAL TIMING

Example

- 1 Start:** start timing.
- 2 Display interval:**
e.g., 10 min. 10 sec. following **1**.
Timing continues in the background.
- 3 Making up the measured time:**
the three chronograph hands are quickly advanced to the ongoing measured time.
- 4 Stop:** (Final time is displayed).
- 5 Reset:** The three chronograph hands are returned to their zero positions.

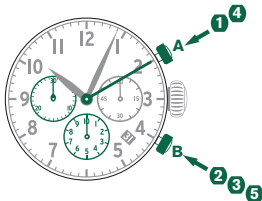

Please note:

* Following **3**, further intervals or intermediates can be displayed by pressing **B** (display interval / make up measured time, ...)


CHRONOGRAPH MODEL 5050.B

DESCRIPTION OF THE DISPLAY AND CONTROL BUTTONS

Please note:


Before using the chronograph functions, please ensure that:

- the crown is in position **I** (= normal position).
- the four chronograph hands are precisely at zero position following activation of push-button **B**. If the hands are not precisely at zero, their positions must be adjusted. (See the chapter *Adjusting the Chronograph Hands to Zero*.)

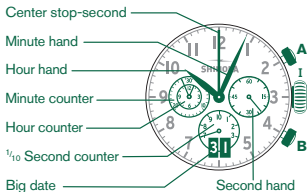


SETTING THE TIME

- 1 Pull out the crown to position **III**. (The watch stops.)
- 2 Turn the crown until you reach the correct time.
- 3 Push the crown back to position **I**.

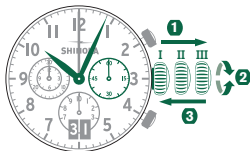


SETTING THE DATE

- 1 Pull out the crown to position **II**. (The watch continues to run.)
- 2 Turn the crown until the correct date appears.
- 3 Push the crown back to position **I**.
- 4 If setting the date between 9:00 p.m. and 12:00 a.m., follow steps 1 through 3, but be sure to set the date to the following day.

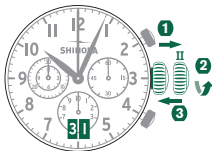

ADJUSTING THE CHRONOGRAPH HANDS TO ZERO


- 1 Pull crown out to position **III**.
(All four chronograph hands are in their correct or incorrect zero position.)
- 2 Keep push-buttons **A** and **B** depressed **simultaneously** for at least 2 seconds.
(The center stop-second rotates by 360° - corrective mode is activated.)
- 3 Press push-button **A** to single step the **center stop-second hand**. Press and hold push-button **A** to advance the center stop-second hand quickly. **3b** Press push-button **B** to advance to the next hand.
- 4 Press push-button **A** to single step the **1/10 second counter hand**. Press and hold push-button **A** to advance the **1/10 second hand** quickly. **4b** Press push-button **B** to advance to the next hand.
- 5 Press push-button **A** to single step the **minute** and the **hour counter hands**. Press and hold push-button **A** to advance the **minute** and **hour counter** hands quickly. **5b** Press push-button **B** to advance to the next hand.
- 6 Return the crown to position **I**.

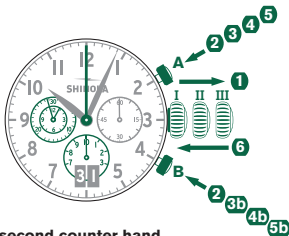

BASIC FUNCTION (START / STOP / RESET)

Example


- 1 **Start:** Press push-button **A**.
- 2 **Stop:** to stop the timing, press push-button **A**. once more and read the four chronograph counters: 4 hr. / 20 min. / 5 sec. / 7/10 sec.
- 3 **Zero positioning:** Press push-button **B**.
(The four chronograph hands will be reset to their zero positions.)

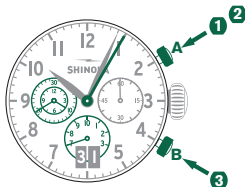

ACCUMULATED TIMING

Example

- 1 Start:** start timing.
- 2 Stop:** e.g., 15 min. 5 sec. following **1**.
- 3 Restart:** timing is resumed.
- 4 *Stop:** e.g., 10 min. 5 sec. following **3**.
The accumulated time = 25 min. 10 sec.
- 5 Reset:** The four chronograph hands are returned to their zero positions.

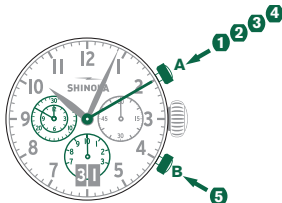


Please note:

* Following **4**, the accumulation of the timing can be continued by pressing push-button **A** (Restart/Stop, Restart/Stop,...)

INTERMEDIATE OR INTERVAL TIMING

Example

- 1 Start:** start timing.
- 2 Display interval:**
e.g., 10 min. 10 sec. following **1**.
Timing continues in the background.
- 3 Making up the measured time:**
the four chronograph hands are quickly advanced to the ongoing measured time.
- 4 Stop:** (Final time is displayed).
- 5 Reset:** The four chronograph hands are returned to their zero positions.

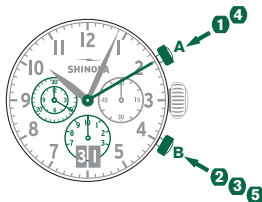

Please note:

* Following **3**, further intervals or intermediates can be displayed by pressing **B** (display interval / make up measured time, ...)


CHRONOGRAPH MODEL 3540.D

DESCRIPTION OF THE DISPLAY AND CONTROL BUTTONS

Please note:


Before using the chronograph functions, please ensure that:

- the crown is in position **I** (= normal position).
- the three chronograph hands are precisely at zero position following activation of push-button **B**. If the hands are not precisely at zero, their positions must be adjusted. (See the chapter *Adjusting the Chronograph Hands to Zero*.)

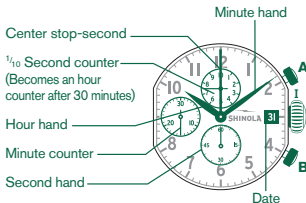

SETTING THE TIME

- 1 Pull out the crown to position **III**.
(The watch stops.)
- 2 Turn the crown until you reach the correct time.
- 3 Push the crown back into position **I**.

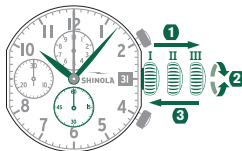


SETTING THE DATE

- 1 Pull out the crown to position **II**.
(The watch continues to run.)
- 2 Turn the crown anticlockwise until the correct date appears.
- 3 Push the crown back into position **I**.
- 4 If setting the date between 8:30 p.m. and 12:00 a.m., follow steps 1 through 3, but be sure to set the date to the following day.



ADJUSTING THE CHRONOGRAPH HANDS TO ZERO


- 1 Pull crown out to position **III**.
(All three chronograph hands are in their correct or incorrect zero position.)
- 2 Keep push-buttons **A** and **B** depressed **simultaneously** for at least 2 seconds.
(The center stop-second rotates by 360° - corrective mode is activated.)
- 3 Press push-button **A** to single step the **center stop-second** hand. Press and hold push-button **A** to advance the center stop-second hand quickly. **3b** Press push-button **B** to advance to the next hand.
- 4 Press push-button **A** to single step the **1/10 second counter at 12H**. Press and hold push-button **A** to advance the hour counter hand quickly. **4b** Press push-button **B** to advance to the next hand.
- 5 Press push-button **A** to single step the **minute counter hand**. Press and hold push-button **A** to advance the minute counter hand quickly.
- 6 Return the crown to position **I**.

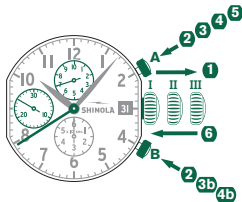

BASIC FUNCTION (START / STOP / RESET)

Example


- 1 **Start:** Press push-button **A**.
- 2 **Stop:** to stop the timing, press push-button **A** once more and read the three chronograph counters: 4 min. / 38 sec. / 7/10 sec.
- 3 **Zero positioning:** Press push-button **B**.
(The three chronograph hands will be reset to their zero positions.)

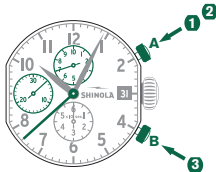

ACCUMULATED TIMING

Example

- 1 Start:** start timing.
- 2 Stop:** e.g., 15 min. 5 sec. following **1**.
- 3 Restart:** timing is resumed.
- 4 *Stop:** e.g., 13 min. 5 sec. following **3**.
The accumulated time = 28 min. 10 sec.
- 5 Reset:** The three chronograph hands are returned to their zero positions.

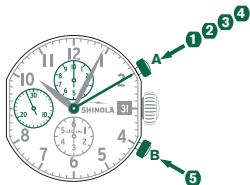


Please note:

* Following **4**, the accumulation of the timing can be continued by pressing push-button **A** (Restart/Stop, Restart/Stop,...)

INTERMEDIATE OR INTERVAL TIMING

Example

- 1 Start:** start timing.
- 2 Display interval:**
e.g., 10 min. 10 sec. following **1**.
Timing continues in the background.
- 3 Making up the measured time:**
the three chronograph hands are quickly advanced to the ongoing measured time.
- 4 Stop:** e.g., 10 min. 10 sec. following **1**.
- 5 Reset:** The three chronograph hands are returned to their zero positions.

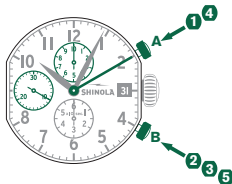

Please note:

* Following **3**, further intervals or intermediates can be displayed by pressing **B** (display interval / make up measured time, ...)

MOON PHASE MODEL 708

SETTING THE TIME

- 1** Pull out the crown to position **III** (the watch stops).
- 2** Turn the crown until you reach the correct time.
- 3** Push the crown back into position **I**.



SETTING THE DATE

- 1** Pull out the crown to position **II** (the watch continues to run).
- 2** Turn the crown until the correct date appears.
- 3** Push the crown back to position **I**.
- 4** Do not set the date between 9:30 p.m. and 12:00 a.m. to ensure accuracy.



SETTING THE MOON PHASE

- 1** Pull out the crown to position **III** (the watch stops).
- 2** Turn the crown until you reach the correct moon position. Be sure to match the position to accurate moon phase (use a lunar calendar). The moon disc moves very slowly by incrementally jumping every 24 hours (each date change).
- 3** As time function rotates on position **III**, the hands will move while setting moon phase. Once accurate moon phase is achieved, set the hour and minute hands back to the correct time.
- 4** Be sure to reset the date indicator to correct date (refer to SETTING THE DATE instructions above).




GMT MODEL 515.24H

If your 24-hour watch features a date indicator, the date window might be in a different position from the one depicted in this manual.


SETTING THE TIME

- 1** Pull out the crown to position **III**.
(The watch stops.)
- 2** Turn the crown until you reach the correct time.
- 3** Push the crown back into position **I**.

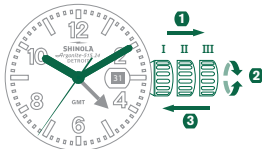


SETTING THE 24-HOUR INDICATOR

- 1** Pull out the crown to position **II**.
(The watch continues to run.)
- 2** Turn the crown counterclockwise until you reach the correct time.
- 3** Push the crown back to position **I**.

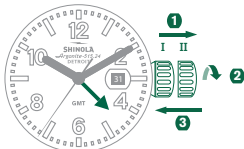

SETTING THE DATE

- 1** Pull out the crown to position **II**.
(The watch continues to run.)
- 2** Turn the crown clockwise until the correct date appears.
- 3** Push the crown back to position **I**.
- 4** If performing a quick date setting between 10:30 p.m. and 12:00 a.m., follow steps 1 through 3, but be sure to set the date to the following day, as there will be no change at midnight.

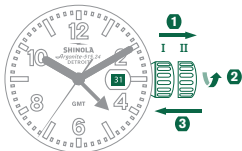


DAY & NIGHT (GMT) MODEL 515.24D

SETTING THE DATE


- 1** Pull out the crown to position II. (Watch still runs.)
- 2** Turn the crown clockwise until the required date appears.
- 3** Push the crown back into position I.

NOTE: The date can also be corrected during the day-changing phase between 10:30 pm and 12:00 a.m. The date of the following day has to be set, because no automatic date change takes place at midnight.

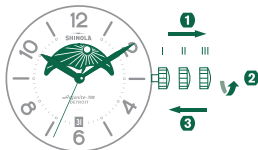

SETTING THE 24-HOUR DISPLAY

- 1** Pull out the crown to position II. (Watch still runs.)
- 2** Turn the crown counterclockwise until the sun reaches the desired position.
- 3** Push the crown back into position I.

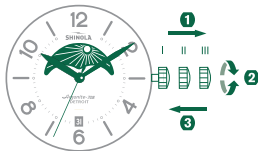

SETTING THE TIME

- 1** Pull out the crown to position III. (The watch stops.)
- 2** Turn the crown until the current time is shown (remember the 24-hour cycle).
- 3** Push the crown back into position I.


CHRONOGRAPH MODEL 5040.F

DESCRIPTION OF THE DISPLAY AND CONTROL BUTTONS

Please note:


Before using the chronograph functions, please ensure that:

- the crown is in position **I** (= normal position).
- the three chronograph hands are precisely at zero position following activation of push-button **B**. If the hands are not precisely at zero, their positions must be adjusted. (See the chapter *Adjusting the Chronograph Hands to Zero*)

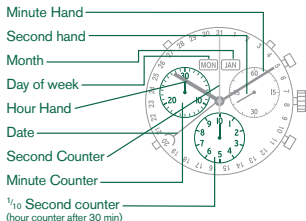

SETTING THE TIME

- 1 Pull out the crown to position **II**. (The watch stops.)
- 2 Turn the crown until you reach the correct time.
- 3 Push the crown back into position **I**.

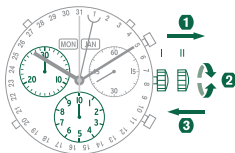


NOTE: In order to set the time to the exact second, 1 must be pulled out when the second hand is in position "60". Once the hour and minute hands have been set, 3 must be pushed back into position I at the exact second.

SETTING THE DATE (QUICK MODE)


- 1 Press the corrector **C** once to adjust the date 1 day forward.

NOTE: If setting the date between 9:00 p.m. and 12:20 a.m., be sure to set the date to the following day.

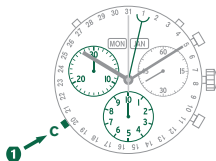

SETTING TIME / DATE / DAY / MONTH


- 1 Pull out the crown to position II.
(The watch stops.)
- 2 Turn the crown until the current time is shown.
- 3 Push the crown back into position I.
- 4 Press the corrector **C** to advance the date hand.
- 5 Press the corrector **D** to advance the day.
- 6 Press the corrector **E** to advance the month.

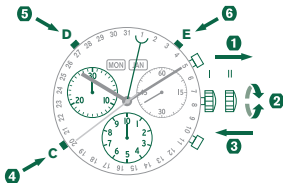

BASIC FUNCTION (START / STOP / RESET)

Example


- 1 **Start:** Press push-button **A**.
- 2 **Stop:** To stop the timing, press push-button **A** once more and read the three chronograph counters: 4 min. / 38 sec. / 7/10 sec.
- 3 **Zero positioning:** Press push-button **B**.
(The three chronograph hands will be reset to their zero positions.)

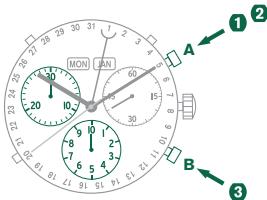

ACCUMULATED TIMING

Example


- 1 **Start:** start timing.
- 2 **Stop:** e.g., 15 min. 5 sec. following 1.
- 3 **Restart:** timing is resumed.
- 4 ***Stop:** e.g., 13 min. 5 sec. following 3.
The accumulated time = 28 min. 10 sec.
- 5 **Reset:** The three chronograph hands are returned to their zero positions.

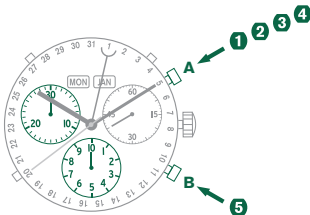

INTERMEDIATE OR INTERVAL TIMING

Example

- **1 Start:** Press push-button **A**.
- 2 Display interval:**
e.g., *10 min. 10 sec.* following **1**.
Timing continues in the background.
- 3 Making up the measured time:**
The chronograph hands are quickly advanced to the ongoing measured time.
- 4 Stop:** Final time is displayed.
- 5 Reset:** The three chronograph hands are returned to their zero positions.

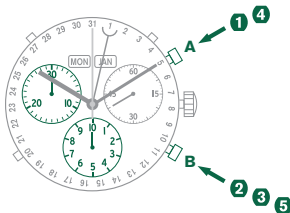

Please note:

* Following **3**, further intervals or intermediates can be displayed by pressing **B** (display interval / make up measured time, ...)

ADJUSTING THE CHRONOGRAPH HANDS TO ZERO POSITION

Example

One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- 1 Pull out the crown to position II.
(All chronograph hands are in their correct or incorrect zero position).
- 2 Keep push-buttons **A** and **B** depressed simultaneously for at least 2 seconds then release
(the second counter hand rotates by 360° —corrective mode is activated).

Adjusting the second counter hand:

Single step — press **A** 1x short

Continuous — press **A** long

Adjusting the next hand — press **B**

Adjusting the 1/10 second counter hand (position 6h):

Single step — press **A** 1x short

Continuous — press **A** long




Adjusting the next hand — press **B**

Adjusting the minute counter (position 9h):

Single step — press **A** 1x short

Continuous — press **A** long

- 3 Returning the crown to position I.
(Termination of the chronograph hands)

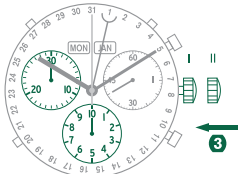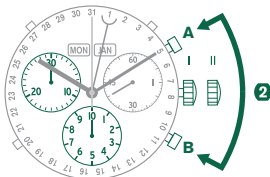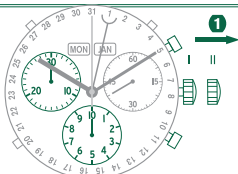


AUTOMATIC MODEL SW200-1

If your timepiece features a screw-down crown, you must first unscrew the crown before you adjust any settings. Refer to page 5 for crown functionality.


WINDING WHILE STOPPED

The maximum power reserve can be restored by turning the crown clockwise around 30 times.

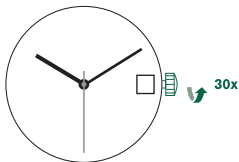


SETTING THE DATE (QUICK MODE)

- 1 For screw-down crown, unscrew the crown to release it into first position.
- 2 Pull out the crown to position II (watch still running).
- 3 Turn the crown clockwise until the required date appears.
- 4 Push the crown back into position I.
- 5 If setting the date between 9:00 p.m. and 3:00 a.m., follow steps 1 through 3, but be sure to set the date to the following day.
- 6 Remember to reseal the crown if it is a screw down. To do so, press it against the case until the threads engage. Then turn it clockwise until tight.

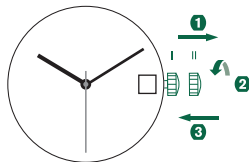

SETTING THE TIME

- 1 For screw-down crown, unscrew the crown to release it into first position.
- 2 Pull out the crown to position III (the watch stopped).
- 3 Turn the crown until the current time is shown (remember the 24-hour cycle).
- 4 Push the crown back into position I.
- 5 Remember to reseal the crown if it is a screw down.
To do so, press it against the case until the threads engage.
Then turn it clockwise until tight.

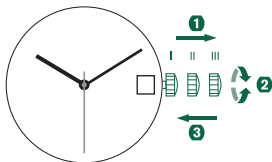

WATER RESISTANCE

All the Shinola timepieces are designed with a minimum water-resistance rating of 3ATM (100ft / 30m).

The water-resistance of a timepiece protects the movement from dust, moisture, and risk of damage to the movement should it be immersed in water. Please see chart for guidelines for recommended exposure of various water ratings.

It is important not to attempt to adjust the position of the crown while the timepiece is in contact with water. Water can enter the case causing damage to the movement. For timepieces with screw-down crowns, it is important to ensure the crown is in the proper position and completely locked before contact with water. For timepieces with chronograph functions, do not engage the chronograph under water, as water may leak into the case and cause damage to the movement.

INDICATION		WATER-RELATED USE		
	Water-Resistance Characteristics	Light Spray, Perspiration, Light Rain, etc.	Swimming, etc.	Skin Diving (Diving without oxygen cylinder)
1	3 ATM	OK	NO	NO
2	5 ATM	OK	NO	NO
3	10 ATM	OK	OK	NO
4	20 ATM	OK	OK	OK
5	30 ATM	OK	OK	OK

ALWAYS SET THE CROWN IN THE NORMAL POSITION AND TIGHTEN SCREW LOCK CROWN COMPLETELY.

CARE AND PRECAUTION

Each Shinola timepiece is designed and manufactured to the highest of standards. Unlike most other mechanical objects, a watch operates non-stop. In order to ensure optimal performance and longevity from your Shinola timepiece, please review the simple guidelines for care and precautions.

CARE

- Clean your watch with a soft cloth and water only. Do not submerge your watch under water unless it is water rated.
- After saltwater use, rinse watch under tap water and wipe dry with a soft cloth.
- Metal bracelets should be cleaned periodically. Clean with a soft brush dipped in mild soapy water and dry thoroughly with a soft cloth.
- We advise having your timepiece serviced every 2-3 years to maintain water resistance and ensure long use and trouble free operation.

PRECAUTIONS

Your timepiece is a complex integration of parts and components brought together by skilled craftsmen. There are certain actions or environmental situations that may damage or impede your timepiece's ability to perform optimally.

It is important to avoid the following conditions: extreme heat or cold, as well as prolonged periods of exposure to direct sunlight, exposure to wet conditions that exceed your timepiece's water rating. (See caseback and chart).

Your timepiece should not be affected by magnetic fields generated by household items such as televisions and stereos, but avoidance of other strong electric fields or static electricity, which may interrupt mechanism, is suggested. It is also important to avoid extreme shock or impact.

POWER SAVING MECHANISM

In order to extend the battery life of your watch when it's not in use, gently pull the movement stem/crown out until you feel it click. This will reduce battery power consumption by 70%. Please note that this is the same stem/crown position that is used to perform a quick TIME SETTING. If your watch features a screw-down crown, follow the instructions at the beginning of this manual to release the crown before pulling it out all the way.

END OF BATTERY LIFE (EOL)

Select quartz watches are equipped with a feature to indicate when the battery level is low. When the battery gets to that stage, the second hand will jump 4 steps at a time, every 4 seconds. This behavior lowers the power consumption while still displaying the time accurately and letting you know that it is time to change the battery.

LEATHER CONDITIONING BALM

Unique formula cleans, polishes and protects, leaving a soft satiny finish that retards water spotting and cracking. Enhances the life and natural lustre of your leather watch strap. May be used safely on all colors of Shinola leather watch strap (**please note that use of this product may darken the color of your watch strap**). Do not use on suede or nubuck.

Directions: Apply a small amount with soft cloth, let dry and buff lightly.

Ingredients: Paraffin wax, Tallow, and Mink Oil.

Caution: Do not take internally. KEEP OUT OF REACH OF CHILDREN.



THE SHINOLA GUARANTEES

THE LIMITED LIFETIME GUARANTEE (COVERS ALL ORIGINAL SERIES WATCHES, INCLUDING BEDROCK, BIRDY, BRAKEMAN, CANFIELD, CASS, GAIL, GOMELSKY, GUARDIAN, SHINOLA MONSTER, MULDOWNNEY, OMAHA, RAMBLER, RUNWELL, TRUMBULL AND VINTON COLLECTIONS)

**THE 3-YEAR LIMITED GUARANTEE (COVERS THE DETROLA COLLECTION)
[REGISTRATION REQUIRED FOR ACTIVATION]**

The following warranties and remedies are exclusive and in lieu of all other warranties, terms or conditions, express, implied or statutory, as to any matter whatsoever, including, without limitation, warranties of merchantability, fitness for a particular purpose, accuracy, satisfactory quality, title, and non-infringement, all of which are expressly disclaimed by Shinola. Shinola shall not be liable for incidental, consequential, indirect, special or punitive damages or liabilities of any kind arising out of or in connection with the sale or use of this product, whether based in contract, tort (including negligence), strict product liability or any other theory, even if Shinola has been advised of the possibility of such damages and even if any limited remedy specified herein is deemed to have failed of its essential purpose. Shinola's entire liability shall be limited to replacement or repair at Shinola's sole option. However some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental consequential damages so the above limitations and exclusions may be limited in their application to you. When implied warranties may not be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights; you may have other rights that may vary depending on local law. Your statutory rights are not affected.

WARRANTY DETAILS

Your Shinola watch is warranted by Shinola under the terms and conditions of its warranty. The Shinola warranties cover faulty workmanship under normal use for the period applicable to your timepiece indicated above. In case of defects covered by the warranties, all components (excluding battery, leather/rubber/nylon/silicone strap and buckle) will be repaired or the watch will be replaced free of charge. In the case of a replacement, Shinola cannot guarantee that you will receive the same watch model. If your model is not available a watch of equal value and similar style will be provided.

For service work that is not covered under these warranties, the service center may perform the services you request for a charge dependent on the type of work requested. You will be notified of such charges prior to Shinola commencing the requested repair(s). Shinola will commence such repairs only upon your prior approval to such charges.

THESE WARRANTIES DO NOT COVER

- Silicone/leather/rubber/nylon strap, battery or buckle
- Damage resulting from improper handling, lack of care, accidents or normal wear and tear
- Water damage unless marked water-resistant
- These warranties are void if the watch has been damaged by accident, negligence or persons other than authorized Shinola sales or service agents, unauthorized service, or other factors not due to defects in materials or workmanship.
- Detrola watches which have not been registered with Shinola
- Pre-owned vintage watches sold in as-is condition
- If you have your watch battery replaced by any service provider other than a Shinola authorized service center, such replacement will not void your warranty, so long as such replacement (i) is performed by an experienced and legitimate service center, (ii) is not performed in a negligent manner, and (iii) is reassembled properly, including without limitation, replacement of gasket if necessary to achieve suitable water-tightness. Shinola has the right to determine, in its sole and absolute discretion, if any such third party battery replacement voids your warranty.

REQUESTING WARRANTY AND OTHER WATCH REPAIR

Should you require work under warranty, please send in your watch, a copy of your sales receipt and/or the Certificate of Warranty, and a completed watch repair form, which can be found on the Shinola website (www.shinola.com), to the authorized international watch service center listed below. Do not send original packaging, as it will not be returned. Shinola highly recommends you insure your parcel and adequately protect the watch during shipment. Shinola is not responsible for product lost or damaged during shipment. For service work that is not covered under this warranty, the service center may perform the services you request for a charge dependent on watch

style and type of work requested. Such charges will be notified and agreed by you prior to performing the services. In addition to repair charges, if required, a service and handling fee of \$25.00 will be charged for all repairs and warranty services. Such fee must be prepaid by check or money order payable to Shinola/Detroit, LLC at the time of delivery of the watch to the repair center. This fee is subject to change.

INTERNATIONAL WARRANTY & REPAIRS

SHINOLA / DETROIT, LLC

485 W. Milwaukee St. Suite 501
Detroit, MI 48202

1-844-744-6652

www.shinola.com

SHINOLA
DETROIT