

# GETTING Started

## WITH YOUR FRIGIDAIRE GALLERY ELECTRIC RANGE



### BEFORE YOU START



#### Set up your oven

Make sure your oven racks are in place prior to operating the range. Check out your Use & Care Guide.



#### Set your clock

It's easy! Press SET CLOCK, enter the time using numeric keys, then press OK/START.



#### Before cooking for the first time

Set your oven to bake at 350°F for about 30 minutes. As the range gets settled in your home, it's normal to experience some noises and smoke.


Use a ceramic cooktop cleaning cream before cooking for the first time to protect your cooktop from scratches.

### YOU'RE IN CONTROL



#### Your oven controls

Using your oven starts with just pressing the keys on your oven control. Temperature and cooking modes will appear in the display as you go.

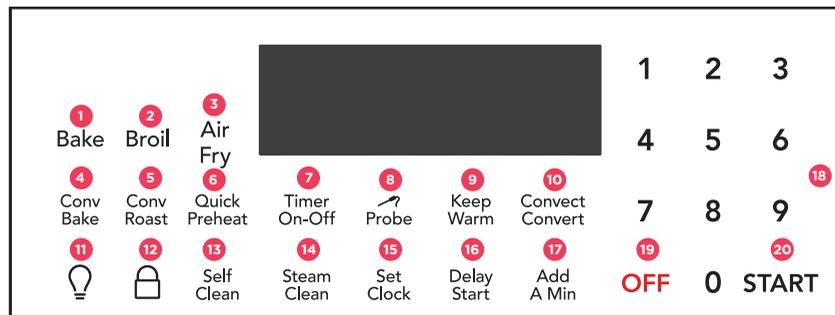

1. Bake - Use to select Bake feature.
2. Broil - Use to set Broil feature.
3. Air Fry - Uses super hot air circulating around food to produce crispy golden results.
4. Conv Bake - Circulates the oven heat evenly and continuously for faster cooking of some foods.
5. Conv Roast - Uses a convection fan to gently brown meats and poultry and seal in the juices.
6. Quick Preheat - Best used for single rack baking with packaged and convenience foods.
7. Timer Off-On - Use to set or cancel the minute timer. The minute timer does not start or stop any cooking function.
8. Probe - Use to set and adjust temperatures when using probe.
9. Keep Warm - Use to keep cooked foods at serving temperature.
10. Convect Convert - Use to change standard bake recipe to a convection bake recipe.
11. Oven Light - Use to turn on internal light when checking on food. Also will turn on when the oven door is open.
12. Oven Lock - Use to lock out oven controls.
13. Self Clean - Use with arrow keys to set self clean cycle of 2, 3, or 4hrs.
14. Steam Clean - Use for cleaning light soils.
15. Set Clock - Use set the time of day
16. Delay Start - Add to Quick Preheat, Bake, Convection Bake, Convection Roast, or Self Clean features to program a delay start time.
17. Add A Min - Use to add additional minutes to the timer.
18. 0 through 9 keys - Use to set temperature and time.
19. OFF - Use to clear any feature except the time of day and minute timer.
20. START - Use to start most oven features.

### REMEMBER

- Do not use aluminum foil or any other materials to line any part of the oven.
- All oven racks should be removed before a self clean operation.
- Do not add bleach, ammonia, oven cleaner, or any other abrasive household cleaners to the water used for Steam Clean.

## QUICK CARE



### A little love goes a long way

Quick ongoing care keeps your range working great for years to come! Clean with warm water and mild soap, or try our line of Frigidaire™ ReadyClean cleaners, available on our website. Refer to your Use & Care Guide for detailed instructions on how to clean your ceramic cooktop.



### Setting a self-clean cycle is easy

1. Remove the racks from your oven and clean by hand. Make sure you close the oven door.
2. Press Self Clean.
3. The default clean time 3 0 0 (3 hours) will appear in the display. To choose a different clean time, use the numeric keys to enter any time between 2 and 4 hours.
4. Press START twice to activate self clean.
5. After a few seconds you'll hear the door lock. Be careful around the oven during and after cleaning, things can get hot!

## AIR FRY

Deliver all of the flavor and none of the guilt. Our Air Fry button allows you to make healthy and delicious meals for the entire family - right in your oven. Use a dark, nonstick baking sheet when using Air Fry.

For perfect crispy-golden results, may we suggest our ReadyCook™ Air Fry Tray. The Air Fry Tray can be purchased from [frigidaire.com](http://frigidaire.com) or from an authorized dealer.



## FAQs

### Why does my range make noises when I'm cooking?

Temp changes during preheat and cool-down can make parts of the range expand and contract. The controls click as they work to create even cooking temps. Different fans run to heat up the oven or cool down different parts of oven, even when it's off. These sounds are normal.

### This oven doesn't work like my old one. What's wrong?

We know adjustment isn't always easy. As you get used to a new range, you may need to test and adjust cooking times and temperatures for recipes. Consult your Use & Care Guide for detailed instructions on how to adjust temperature or call us if you need help!

### Why does my oven smoke when I use the broil setting?

Broiling is direct heat cooking and will produce some smoke. If smoke is excessive, place food further away from the element. Watch food to prevent burning.



Find more troubleshooting tips in the back of your Use & Care Guide.

## LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your new range.

Look for the Photoregister<sup>SM</sup> icon on your registration card.



WE ARE  
*here*  
FOR YOU



Have a question?



Want help?



Need service?

owner support

[frigidaire.com](http://frigidaire.com) 1 (800) 374-4432

[frigidaire.ca](http://frigidaire.ca) 1 (800) 265-8352

