
















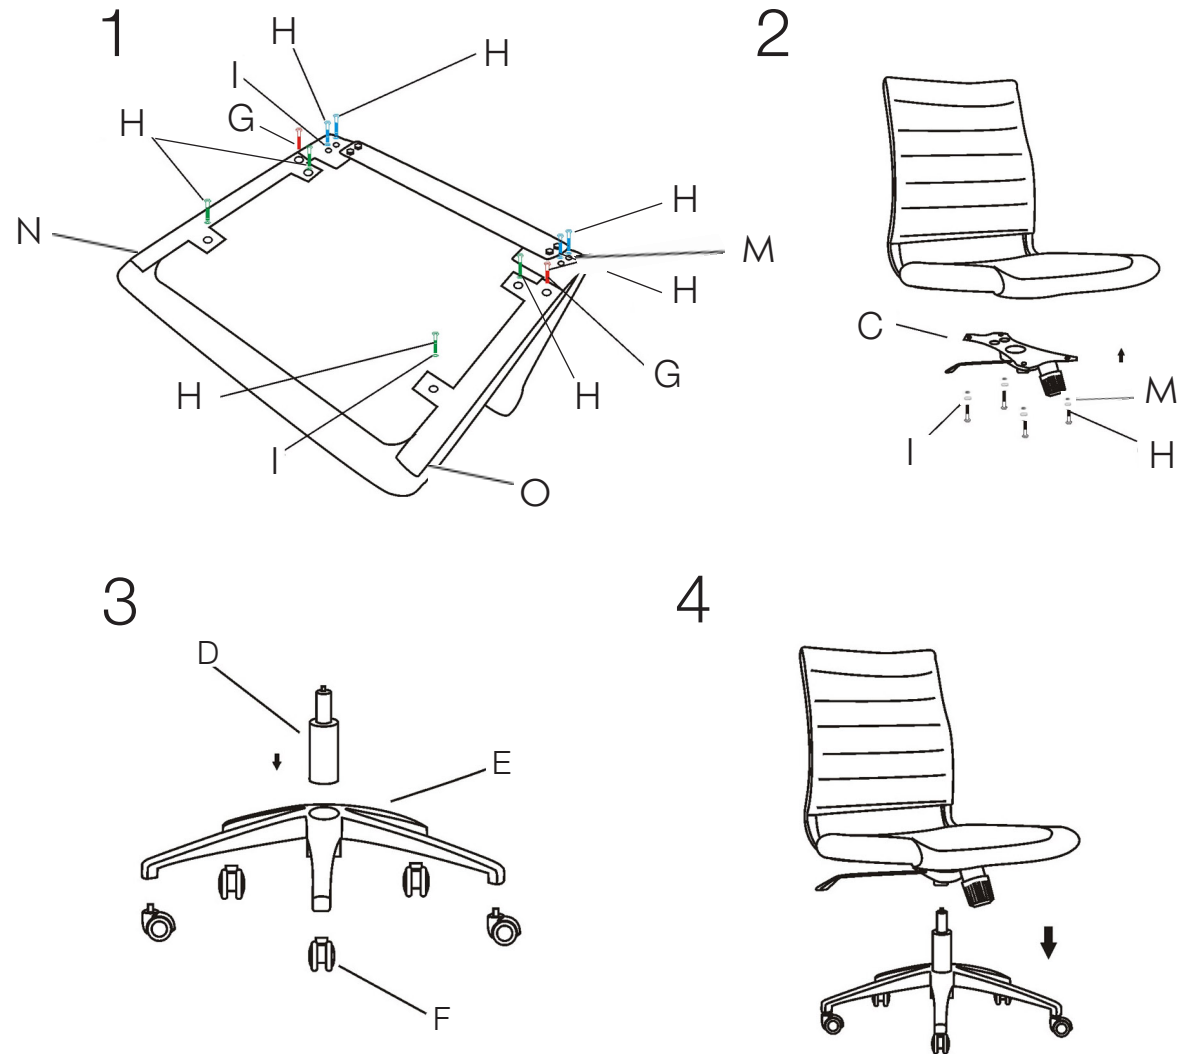
eurowstyle™

Assembly Instructions

AXEL Low Back w/o Armrests

PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts please contact your retailer.

- | | | | |
|-----------|---|------------|---|
| A (1 pc) |  | H (8 pcs) |  Ø6 x 30mm |
| B (1 pc) |  | I (12 pcs) |  |
| C (1 pc) |  | J (1 pc) |  3mm |
| D (1 pc) |  | K (1 pc) |  6mm |
| E (1 pc) |  | L (4 pcs) |  Ø6 x 25mm |
| F (5 pcs) |  | M (12 pcs) |  M6 |
| G (2 pcs) |  Ø3 x 16mm | N (1 pc) |  |
| | | O (1 pc) |  |



During assembly, hand tighten screws only. When the screws are in place, tighten completely.