


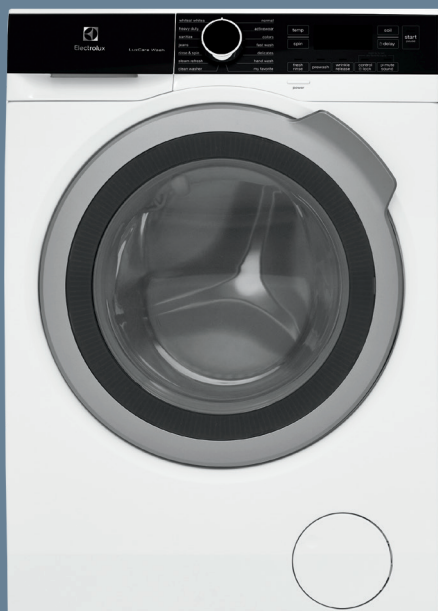

Better living means combining thoughtful compact design and performance for an effective clean.

A Quick Guide to Getting Started



Before you begin

- Make sure all shipping materials including shipping bolts are removed. Ensure your washer is level with all four corners firmly resting on the floor.
- Use new hoses and check HOT and COLD water supply connections are turned on.
- Following these tips will help prevent leaks and excessive vibration during wash cycles. Refer to the installation instructions included with the unit for more details.

Care and cleaning

Run the clean washer cycle once per month. Raise the detergent flap and fill with bleach or PureAdvantage™ Probiotic Washer Cleaner. See your Use & Care Manual for additional cleaning suggestions.



We Recommend:

When safely able to do so, leave the washer door open after use to prevent odors and mildew.

FAQs

• How do I use my detergent dispenser?

We recommend using high-efficiency (HE) detergent for your front load washer. For liquid detergent ensure the dispenser flap is in the down position and up for powder detergent. PODS or detergent packs must be placed directly in the washer tub prior to loading laundry.

• How do I add an item if the wash cycle has already started?

To add an item while ADD A GARMENT is lit in the display, press the start/pause button to pause the cycle and wait for the door to unlock..

• How do I change a setting after a cycle has begun?


Turn the knob to the reset position (12 o'clock) OR press the power button to turn off the washer and cancel the cycle. Press the power button to turn the washer on again, select the new setting, then press start/pause to start the cycle. Changing a cycle selection without canceling the current cycle will not change the cycle selection.



Turn the knob to the reset position to change cycle settings after the start button has been pressed.



Getting Started

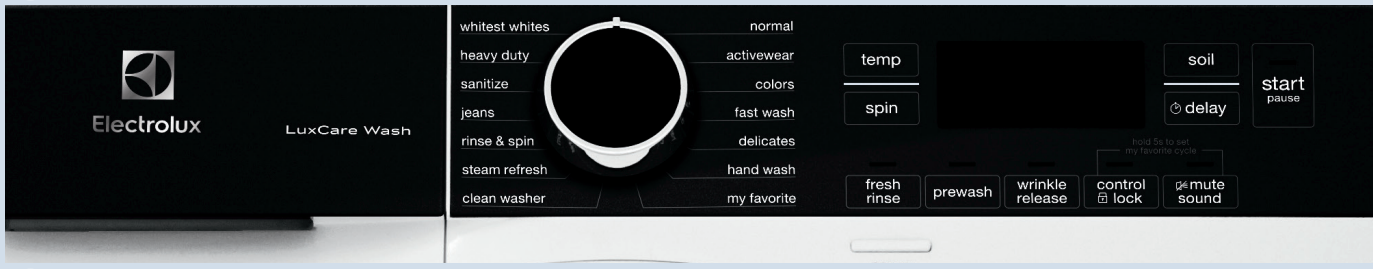

Turn on your washer

Press the power button to turn on your unit.

Select a cycle

WHITEST WHITES

Select for white and lightly colored fabrics.

HEAVY DUTY

Select for heavily soiled, durable garments.

SANITIZE

Select to clean and sanitize heavily soiled, fabrics with colors that do not run or fade.

JEANS

Select to wash an entire load of light to normally soiled denim loads.

RINSE & SPIN

Select for loads needing a cold rinse or to add fabric softener missed in a regular cycle.

STEAM REFRESH

Select to refresh a small load of dry clothes with steam.

CLEAN WASHER

Select to clean and freshen the washer.

NORMAL

Select to wash cotton, linen, towels, sheets, denim and mixed loads.

ACTIVWEAR

Select for lightweight synthetic apparel.

COLORS

Select for lightly soiled dark or dyed fabrics susceptible to dye loss.

FAST WASH

Washes a small, lightly soiled load in 22 minutes.

DELICATES

Select for lightly soiled knits and delicates.

HAND WASH

Select for fine garments with a "hand wash only" label.

MY FAVORITE

Customize any existing wash program and save it as a unique cycle for future use. See your Use & Care Manual for easy instructions.

SPIN SPEED

Spin speed can be changed depending on the type of clothing in the load. Higher spin speeds extract more water, and conserve energy.

SOIL LEVEL

Adjusts the wash time based on the soil level of the load.

Start load

Close the door and press the start/pause button.

Learn More

We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.

Select cycle settings

WASH WATER TEMPERATURE

Preset wash temperatures can be changed, however not all temperatures are available with every cycle. Cold water saves energy and reduces wrinkling.



Sustainability, together

Specifically designed for high-quality energy efficient performance without sacrificing clean.



Peace of Mind & Protection

Get more with product registration. Look for the photo icon on your registration card to text and register, or visit us online.

electroluxappliances.com

(877) 435-3287

10200 David Taylor Drive
Charlotte, NC 28262

electroluxappliances.ca

(800) 265-8352

5855 Terry Fox Way
Mississauga, ON L5V 3E4