





**Cleaning the main dispenser**

Clean the main dispenser stainless steel cover **by hand** only.


- Open the appliance door.

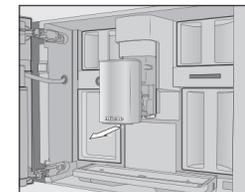

- Remove the main dispenser stainless steel cover and clean it.

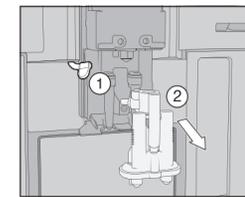

- Detach the milk pipework from the dispensing unit ①. Pull the dispensing unit down to remove it ②.

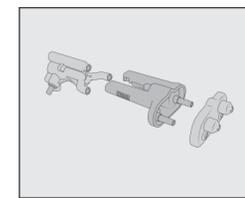


- Disassemble the dispensing unit into 3 parts.
- Clean all parts thoroughly. Clean the surfaces of the main dispenser with a damp cloth.

- Reassemble the dispensing unit.
- Push the dispensing unit back into the main dispenser and replace the stainless steel cover.
- Confirm the message with OK.


**Removing the brew unit and cleaning it by hand**

Only clean the brew unit by hand with warm water. Do not use any cleaning agents.

- Open the appliance door and remove the water container.

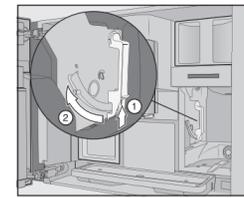


- Press the button under the handle of the brew unit ① and, while doing so, turn the handle forward ②.

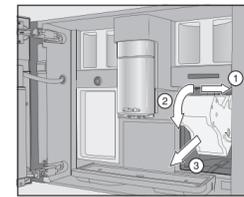

- Pull the brew unit to the side ① first and then pull out to the front ②. Tilt the brew unit forward ③.

Once you have removed the brew unit, do not change the position of the handle on the brew unit.

- Clean the brew unit **by hand** under warm running water.

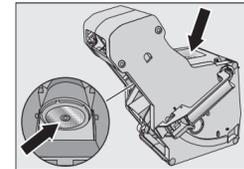

- Wipe any remaining coffee off the filters (see arrows).
- Dry the funnel in the brew unit.
- Carefully clean the inside of the coffee machine.
- Push the brew unit back into the coffee machine.
- Lock the brew unit: Press and hold the button under the brew unit handle and, while doing so, turn the handle to the right.
- Close the appliance door.
- Follow the additional instructions given in the display.

The process is complete when rinsing has finished.

**Descaling the appliance**

You will need 2 descaling tablets for the descaling program.

- Descalce appliance will appear in the display.
- Tap OK.

The maintenance program will then start.

- Follow the instructions in the display.



- Fill the water container to the descaling symbol with lukewarm water.
- Drop 2 descaling tablets in the water.
- Reinsert the water container.
- Follow the additional instructions given in the display.

When Rinse the water container, refill to the symbol and insert. Close the door appears in the display, proceed as follows.

- Remove the water container and rinse it thoroughly with clean water. Fill the water container to the descaling symbol with fresh drinking water.

The descaling process is complete when rinsing has finished.

 
**Bean system**

You can change the names for the types of coffee bean and/or reallocate the types of bean under Settings | Type of beans.

If you do not allocate a type of bean, you will be asked what type of bean you want to use for the coffee as you make it.

**Renaming bean types**

The 3 bean containers are shown in the display as follows and are pre-named.



If you are using the same type of beans in two of or all the bean containers at the same time (for instance, because you only use one bean type), make sure you name them in the exact same way.

- Select Change name.
- Enter the name you want and then tap Save.

**Allocating the bean types**

If you have set up at least one profile and at least one coffee drink, first select the profile.

- Select Change allocation.

**Tip:** If you tap All drinks, you will highlight all coffee drinks and you can deselect the ones you do not want.

**Drink parameters**

You can set the amount of coffee, the brewing temperature, and pre-brewing for each drink individually.

- Touch the drink entry and keep your finger on it until the context menu opens.
- Select Parameters.
- Select Amount of coffee, Brew temperature, Pre-brewing or Type of beans.
- Select the setting you want and tap OK.
- Tap OK again to save your changed settings.

**Portion size**

You can adjust the portion size for all coffee drinks, hot water, all types of tea, and drinks with milk.

- Place a cup under the main dispenser.
- Touch the drink entry and keep your finger on it until the context menu opens.
- Tap Portion size.

The drink will be made and Save will appear in the display, as soon as the minimum dispensing amount is reached.

- When the container is filled to the desired level, tap Save.

If you want to change the portion size for coffee drinks made with milk or hot water, the ingredients which make up the drink will be saved one after the other while the drink is being made.

**Performance mode**

You can select the appropriate mode to suit your personal preferences under Settings | Performance Mode. The energy consumption varies depending on the selected mode.

- **Eco Mode:** This is an energy-saving mode.
- **Barista Mode:** This mode is optimized for espresso and coffee drinks.
- **Latte Mode:** In this mode, milk-based drinks can be prepared within a much shorter space of time.

In addition, you can activate **Party Mode** for the occasional intensive use of the coffee machine, e.g., for family get-togethers (see the operating instructions).

**Profiles**

In addition to the Miele drinks menu (Miele profile), you can create individual profiles to cater for different tastes and preferences.

**Creating a profile**

- Select Profiles and then Create profile.
- The editor will open in the display.
- Enter the name you want and then tap Save.

The profile is created. You can now prepare drinks.

**Editing profiles**

Once you have created a profile, you can rename, delete, or move profiles via the context menu.

**Setting when the profile should change**

You can choose between the following options:

- **Manual:** The selected profile will remain active until you select another one.
- **After each use:** The machine will revert to the Miele profile whenever a drink is dispensed.

**Creating and processing drinks in a profile**

You can create new drinks based on existing drinks. A maximum of nine drinks can be saved under one profile.

- Start by accessing the profile you want as follows: Tap Profiles and select the profile.
- Tap Create drink and select a drink.
- Change the portion size or drink parameters.

Preparation will begin and you can save the portions for each component as you wish.

- Enter a name for the new drink and tap Save.

Once you have created some drinks, you can edit these entries in the context menu.

You can personalize your coffee machine by adapting the factory default settings to suit your requirements.

Factory default settings are marked in italics.

**Language**

- deutsch | ... and other languages
- Location

**Time**

- Display: On | Off | Night dimming
- Clock type: Analog | Digital
- Clock format: 24 h | 12 h (am/pm)
- Set

**Tip:** If you touch the time of day on the top right of the display, you can set the time directly.

**Date**

The date appears if the Time | Clock type | Digital setting is selected.

**Start screen**

- Main menu | Drinks | Profiles | MyMiele

You can select the menu that is displayed when the coffee machine is switched on.

**Timer**

- Appliance timer: On at | Off at | Off after (00:20)
- TeaTimer: Automatic | Manual
- Maintenance timer

**Volume**

- Buzzer Tones
- Keypad Tone
- Welcome Melody: On | Off

**Display**

- Brightness
- Color scheme: Bright | Dark
- QuickTouch: On | Off

**Lighting**

Coffee machine switched on: You can use the sensor control to switch the lighting on or off at any time.

Coffee machine switched off: You can still switch the lighting on or off whenever you like, but you will need to select the following settings first:

- Time | Display | On, or Night dimming (time of day is displayed)
- Display | QuickTouch | On

**Info**

- Number of drinks (Total drinks | Total coffee drinks | ...)
- No. of uses until maintenance: Descalce Appliance | Degrease the brew unit
- Fill levels (of cartridges)

**Fresh water (CVA 7x45)**

- On | Off

**Altitude**

0–250 m, 251–500 m, ...

**Performance mode**

- Eco Mode | Barista Mode | Latte Mode | Party Mode

Party mode is a Performance mode for the occasional intensive use of the coffee machine (see the operating instructions).

**Water hardness**

Set to 22 gpg (21 °dH) at the factory.

**Automatic cleaning**

- On | Off

**Bean types**

- Types A, B, and C: Change name | Change allocation

**Motion sensor**

- Switch the light on: Appliance turned on (On | Off) | Appliance turned off (On | Off)
- Switch the appliance on: On | Off
- Acknowledge buzzer: On | Off

**System lock**

- On | Off

When the system lock is activated, the On at timer and MotionReact cannot be selected.

**Miele@home**

- Set up | Deactivate / Activate | Connection status | Set up again
- Remote Control (On | Off)
- SuperVision: SuperVision display (On | Off), Display in standby (On | Off), Appliance list
- RemoteUpdate (On | Off)

Some menu options only appear if Miele@home has been set up and the coffee machine is connected to a WiFi network.

**Software version**

For Customer Service

**Legal information**

- Open Source Licenses

**Showroom program**

- Demo Mode: On | Off

Quick Start Guide

Coffee machine



This Quick Start Guide is a substitute for the operating instructions supplied with the appliance. It is essential to familiarize yourself with the coffee machine before using it for the first time. Please read the operating instructions carefully and pay particular attention to the IMPORTANT SAFETY INSTRUCTIONS.