



We're saving some paper.
View your manual online.

dhlifelabs.com/help-support/

Need Help?

1-877-548-9722

9 AM - 6 PM, CST, Monday - Friday



EPA EST NO. 99117-CHN-1
MADE IN CHINA

Dernier & Hamlyn Inc.
720 Northgate Parkway
Wheeling, IL 60090

*The Aaira Surface uses HOCl Technology that takes ingredients found in nature (water and non-iodized salt) and uses science (electrolysis) to create a powerful disinfectant.

**Dispose used products according to local regulations.



Aaira Surface

QUICK START GUIDE | ASE-00WH07

Created by nature.
Engineered by science.



Your safety is important to us.

Read all safety instructions before you use the device.



WARNING! TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY PLEASE ADHERE TO THE FOLLOWING:

- ! Use only as described in the Instruction Manual. Do not carry out any maintenance other than that shown in this guide or as advised by customer support. Any other use not recommended by the manufacturer may cause fire, electric shock or injury.
- ! When moving the machine, hold it by the base. DO NOT MOVE THE MACHINE WITH WATER IN THE PITCHER.
- ! THIS MACHINE IS NOT INTENDED FOR USE BY CHILDREN. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children. This appliance can be used by children 8 years and above if supervised.
- ! This machine is not intended for use by persons with reduced physical, sensory or reasoning capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning the use of the machine by a person responsible for their safety.
- ! Do not use it on wet surfaces or outdoors. Do not use in bathrooms. Never operate the machine where it may fall in the bath or other water container. Do not use or store it where it may get wet or in the immediate surroundings of a bath, shower or swimming pool.
- ! Do not pour water into any openings except for the pitcher. When refilling, only do so as described in this guide. DO NOT USE HOT WATER.

- ! This machine may have hot parts inside. Do not use in areas where fuel, paint or flammable liquids are present. Keep combustible materials away from the machine. DO NOT USE NEAR FURNACES, FIREPLACES, STOVES OR OTHER HIGH-TEMPERATURE HEAT SURFACES.
- ! DO NOT LOCATE DIRECTLY BELOW A MAIN ELECTRICITY SUPPLY SOCKET.
- ! To Reduce the Risk of Electric Shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way. (Not applicable in UK).
- ! Do not unplug by pulling the cord from the socket. To unplug, grasp the plug, not the cord.
- ! Do not handle any part of the plug with wet hands.
- ! Do not use the machine with a damaged cord or plug. If the cord is damaged it must be replaced.
- ! If the machine is not working properly, has received a sharp blow, has been dropped or damaged, do not use the machine and contact customer support for repair.
- ! ALWAYS PLACE MACHINE ON A FIRM, FLAT, LEVEL SURFACE.
- ! Turn off all controls before unplugging. Always unplug machine when not in use.
- ! READ AND SAVE THESE INSTRUCTIONS.
- ! THIS MACHINE IS INTENDED FOR HOUSEHOLD AND INDOOR USE ONLY.
- ! When the device is not used for an extended time store it in a cool dry place. Do not store the device where it might be exposed to excessive moisture or direct sunlight. The device may not operate effectively in very low temperatures. The device can be damaged when exposed to sub-freezing temperatures.

Read all safety instructions in the quick start guide, instruction manual, and on the device.



Product Overview



1. Pitcher
2. Cap/Vinegar Measuring Cup
3. Salt Bottle with 1 Gram Scoop
4. Base
5. Power Supply
6. Stirring Stick
7. Green Spray Bottle
(Used to fill with low concentration disinfectant)
8. Blue Spray Bottle
(Used to fill with high concentration disinfectant)

Quick Start Guide

1

Fill to max water line with tap water and add non-iodized salt:

- 2 scoops (2 grams) for low concentration (100 PPM).
- 4 scoops (4 grams) for high concentration (200 PPM).



2

Use the vinegar measuring cup to add 4ml/0.14oz. of 5% white vinegar. Stir the salt for 10 seconds with the provided stirring stick.



3A

Press the left button to make low concentration (100 PPM) HOCl disinfectant. Wait 9 minutes until process is complete.



3B

Press the right button to make high concentration (200 PPM) HOCl disinfectant. Wait 12 minutes until process is complete.



Quick Start Guide (Cont.)

4

When the disinfectant is ready.
Pour into coordinating spray bottle.
Remove safety clip before use.



Use the green bottle for low concentration disinfectant (100 PPM).

Use the blue bottle for high concentration disinfectant (200 PPM).



Control Panel



Low Concentration
HOCl Disinfectant (100 PPM)



High Concentration
HOCl Disinfectant (200 PPM)

Maintenance

We recommend not leaving disinfectant in pitcher or bottles for more than 48 hours.

How to clean:

1. Fill the pitcher with 500ml/16.91oz. of water. Do not add any salt or vinegar.
2. Press both buttons on the control panel.
3. Wait 3 minutes.
4. Empty pitcher.



Where to Use

Remove heavy deposits from surfaces before using the HOCl disinfectant. Be sure to test HOCl in a small, inconspicuous area before using to ensure discoloration does not occur.

Everyday Use

Low Concentration (100 PPM)

Clean high-touch areas and surfaces including but not limited to countertops, tabletops, appliances, cabinets, doors and windows.

Disinfectant

High Concentration (200 PPM)

Heavy duty cleaning areas including but not limited to bathtubs, showers, toilets, floors, sinks and drains.