



WELCOME!

Congratulations on your Golden Tee™ PGA TOUR® Clubhouse Edition purchase!

You are now the proud owner of the most popular golf arcade game ever produced.

Let's Get You Set Up and Ready to Play!

Step 1: Deluxe Stand Assembly

*Note: This step is for customers who purchased a Deluxe Stand **only**. If you purchased the Standard model, please see Step 2.*



Scan for the Golden Tee [PGA TOUR Edition Deluxe Stand Kit Install Guide \(PDF 1.6 MB\)](#).

Step 2: Setting Up Your Cabinet – Standard Model

Mount Main Screen Display

Position the Showpiece cabinet in front of a 4K HDTV. Incredible Technologies recommends a 4K HDTV from 42" or larger. You will need to supply a 4K HDTV digital display for the game's main monitor, and an appropriate stand or wall mount. Be sure that the stand or wall mount is UL listed.

The HDTV can be mounted to a wall or another viable stand. There are many different types of wall mounts available through retail, wholesale and Internet outlets. The wall mount you select **must** be UL listed. Be sure that the top of the Showpiece cabinet has at least 24" clearance in all directions. Insufficient clearance may result in damage to your display or player injury.



Leg Leveler Adjustment

Once your game is in position, it is necessary to adjust the leg levelers. The leg levelers will help stabilize the game on an uneven floor and help it from moving or shifting during game play. The game is shipped with the two front and two rear leg levelers installed. Adjust the levelers as necessary to level and stabilize the game.

Use one $\frac{3}{4}$ -inch open ended wrench and one $\frac{5}{8}$ -inch open ended wrench to adjust the leg levelers. The $\frac{3}{4}$ inch nut must be cracked and loosened to allow the leveler to move up and down. Use the $\frac{5}{8}$ -inch wrench to hold the leveler in place while using the $\frac{3}{4}$ -inch wrench to unlock the locking nut. After the locking nut is loosened, adjust the leg leveler to the desired position. Once the levelers are positioned so that the game is steady, lock the $\frac{3}{4}$ -inch nut in place on any levelers that where adjusted.

- Connect Game AC power cord from HDTV AC power input (rear of cabinet) to an AC Power source.
- Turn on game using the cabinet power switch located next to AC power cord on the back of cabinet.



Step 3: Getting Online

Each cabinet comes equipped with Wi-Fi and Ethernet connectivity capability. This will allow you to maximize your playing experience with additional game modes, features and exclusive tournaments that will update weekly.

Note: Your online subscription is FREE until Golden Tee PGA TOUR 2023 is released.

To access online features, please **Register** and **Activate Wi-fi/Ethernet**.

To register your game, scan the QR Code or visit:

https://amusement.itsgames.com/pgs_clubhouse_edition_registration



Scan for detailed Wi-Fi/Ethernet instructions: [PGA TOUR Online Configuration Guide \(PDF 338 KB\)](#)



Ethernet Port

Use the Ethernet Port on the back of the cabinet to connect an Ethernet Cable to your Ethernet Output.

HDMI Port

Use the HDMI Port on the back of the cabinet to connect an HDMI Cable to the rear of the 4K HDTV.

Note: You **do not** need to plug in the Ethernet Cable or the HDMI Cable to the Titan System Box.



Additional Resources

Scan for the Golden Tee [PGA TOUR Clubhouse Edition Menus Guide \(PDF 3.6 MB\)](#).



Scan for the Golden Tee [PGA TOUR Edition Troubleshooting and Reference Guide \(PDF 335 KB\)](#).

For help with any additional questions, visit the Amusement Service area of the website.

<https://amusement.itsgames.com/service>





WARNINGS AND NOTICES

NOTICE

- This game is intended to be operated for amusement purposes only. It is not to be operated in violation of any federal, state, or local laws or regulations. As the owner and/or operator of this game you are responsible for its operation in compliance with such laws and regulations. The factory settings for this game may require adjustment to comply with the laws and/or regulations in the jurisdiction where the game is located. It is the sole responsibility of the operator to determine what laws and/or regulations are applicable and to make any adjustments to the game before operating it for its intended purpose.
- This guide and the information contained within is subject to change without notice.

WARNING

- Use of unauthorized parts or making any unauthorized modifications will void the warranty and may result in the game operating in an unsafe or incorrect manner.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- This cabinet is not suitable for installation in an area where a water jet would be used. The cabinet must not be cleaned by a water jet.

WARRANTY, REPAIR, AND RETURN POLICY

- 90-day warranty on all electronic components. All warranty periods begin on the date of purchase from Incredible Technologies, Inc.
- There is a minimum \$75.00 service charge for all non-warranty repairs or returns.
- For all servicing, return to Incredible Technologies, Inc.
- ANY non-factory repair or attempted repair voids warranty.

RETURN MERCHANDISE AUTHORIZATION

- All returned merchandise must have a Return Merchandise Authorization (RMA) number marked clearly on the outside of the package.
- You must obtain all RMA numbers from Incredible Technologies. Please have the product's Cabinet Identification Device number available when calling for an RMA number.
- Merchandise returned without an RMA number will not be accepted.
- Warranty may be void if serial number or security labels are tampered with or removed. **Opening the System Box will void your warranty.**
- Advance replacement hardware will be shipped to the customer address on file unless specified otherwise.
- Advance replacement hardware will be billed to the customer until Incredible Technologies, Inc. receives the returned merchandise, at which time a credit will be issued.
- All repairs and/or replacements will ship as soon as possible after receipt or request (subject to availability).



PAYMENT FOR AND STORAGE OF REPAIR MATERIALS

Materials sent to IT for repair must be paid for according to current price schedules and in a reasonable time. Storage fees for repaired equipment will be charged at a rate of \$50.00 (Fifty US Dollars) per calendar month or fraction thereof after 90 (Ninety) days from notice to the customer that the repairs are complete. IT reserves the right to resell repaired equipment to cover accumulated storage charges when the accumulated storage charge reaches 100% (One Hundred Percent) of the repaired items' then-current replacement cost.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions
- Keep these instructions
- Heed all warnings
- Follow all instructions
- Do not use this apparatus near water
- Clean only with dry cloth
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- DO NOT expose the apparatus to dripping and splashing. DO NOT put objects filled with liquids, such as vases on the apparatus.

SERVICE INSTRUCTIONS CAUTION

The motherboard is provided with a replaceable lithium battery. There is a danger of explosion if a battery is incorrectly replaced. Replace the battery only with the same or equivalent type.



WARNING

- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The apparatus shall be connected to a mains socket outlet with a protective earthing connection. Substitute cords may not provide adequate fault protection. Only use the power cord supplied with this product or an Incredible Technologies, Inc. authorized replacement.
- The mains plug or an appliance coupler must remain readily operable.
- Use of unauthorized parts or making any unauthorized modifications will void the warranty and may result in the game operating in an unsafe or incorrect manner.
- This cabinet is not suitable for installation in an area where a water jet would be used. The cabinet must not be cleaned by a water jet.
- The Showpiece cabinet is intended for use with the Showpiece Stand. Use of any other integrated or physically attached stand or other hardware is not intended: IT does not approve or inspect any third-party products for use with its Showpiece cabinet. Any damage or injury caused by use of other integrated stand or physically attached hardware is not covered by warranty and IT specifically disclaims any and all liability for such damage or injury.