



## AXTC SERIES

### CHANGING RADIO TYPE

The **AXTC** has the capability to change the radio type using the OEM Steering wheel buttons. This feature can be performed three different ways; through a Windows based computer using the **Axxess Updater**, through the **Axxess Updater** app available from the Android™/Apple® mobile devices app store, or by following the steps below.

**Note:** Apple mobile devices will require the use of the **AX-HUB** for this feature.

**Attention!** If more than 20 seconds elapses between steps, the procedure will abort, and the interface's LED light will go out. The interface may not function properly and may need to be reset and reprogrammed.

1. Program the interface to the vehicle following the vehicle specific document.
2. Turn the radio off.
3. Cycle the key off, then back on.
4. Wait until the interface's light flashes **GREEN** one time then goes out.
5. Press and hold the **Volume Down** button on the steering wheel until the interface's light turns solid **RED**, then release. The light will then go out, indicating that the interface is in **Changing Radio Type** mode.
6. Reference the **Radio Legend** for the radio number preferred.
7. Press and hold the **Volume Up** button on the steering wheel until the interface's light turns solid **RED**, then release. Radio number 1 has now been programmed. Repeat this step for the desired radio.
8. Once the desired radio has been selected, press and hold the **Volume Down** button on the steering wheel until the interface's light turns solid **RED**. The light will remain solid **RED** for 3 seconds while it stores the new radio information. After the light goes out, turn the radio on and test the steering control wheel controls.

### Radio Legend

| Radio Brand                 | Radio Number |
|-----------------------------|--------------|
| Pioneer / Jensen            | 1            |
| Boss (type 1) / Dual / Sony | 2            |
| Kenwood                     | 3            |
| JVC                         | 4            |
| Alpine                      | 5            |
| Boss (type 2)               | 6            |
| Clarion (type 1)            | 7            |
| Clarion (type 2)            | 8            |
| Boss (type 3)               | 9            |
| Insane Audio                | 10           |
| Magnadyne                   | 11           |
| Visteon / Boss (type 4)     | 12           |

| Radio Brand      | Radio Number |
|------------------|--------------|
| JBL              | 13           |
| Eclipse (type 1) | 14           |
| Eclipse (type 2) | 15           |
| Philips          | 16           |
| XITE             | 17           |
| Parrot           | 18           |
| Valor            | 19           |
| LG               | 20           |
| Kicker           | 21           |
| Axxera           | 22           |
| Axxera (type 2)  | 23           |
| Alpine (type 2)  | 24           |