




## WAVS-315 Wood Audio Video Cabinet

### **ASSEMBLY INSTRUCTIONS**

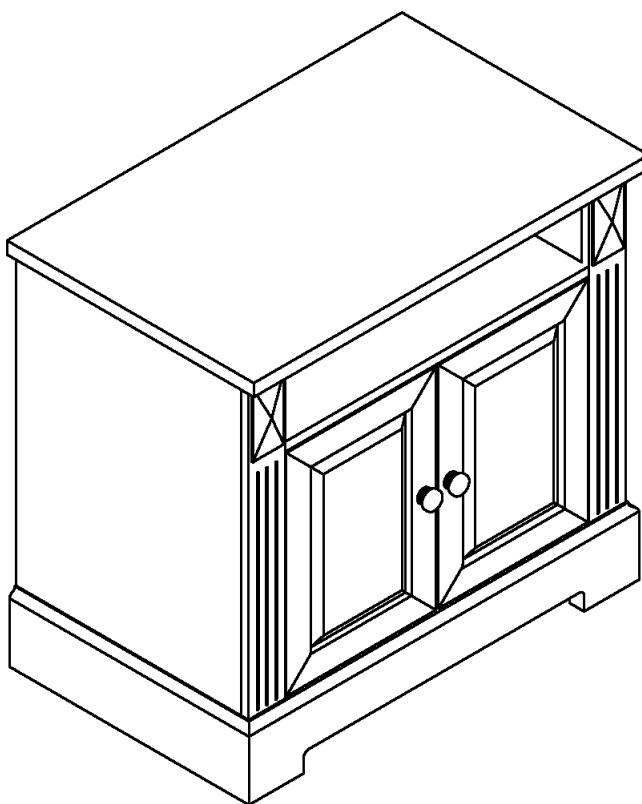



 


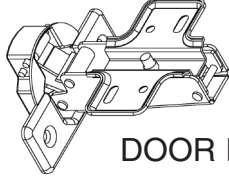

THE REAL HARDWOODS USED IN BELL'O FURNITURE ARE NATURALLY BEAUTIFUL.  
SOME DIFFERENCES IN WOOD GRAIN ARE DESIRABLE AND EXPECTED.  
PLEASE USE ONLY HIGH QUALITY WOOD FURNITURE POLISH TO CARE FOR YOUR CABINET.  
A SMALL AMOUNT OF PANEL FLEX IS COMMON IN WOOD PRODUCTS.

 
 



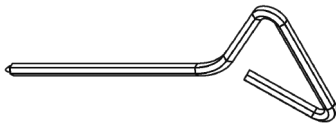
 
Patent Pending  
Italian Designed  
A Product of China

*Do not discard these instructions*

P-1\_052307v1
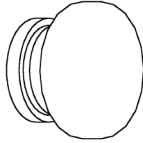
## Parts List

NO.	SKETCH	QTY.
1	 DOWEL M8 * 32	18
2	 34mm CAM PIN	18
3	 CAM LOCK	18
4	 DOOR KNOB	2
5	 M3 * 14mm SCREW	18
6	 DOOR HINGE	4
7	 M3.5 * 16mm SCREW	24

NO.	SKETCH	QTY.
8	 M4 * 25mm SCREW	2
9	 SHELF SUPPORT POSTS	4
10	 M4 * 25mm SCREW	2
11	 ALLEN WRENCH	1
12	 M7 * 50mm SCREW	10
13	 SCREWDRIVER TOOL	1
14	 WOOD DOOR STOP	1

*Bell'O International Corp. will not be responsible for failure to assemble as directed or for the improper assembly, use or handling of this stand.*



### **FOR YOUR SAFETY, PLEASE FOLLOW THESE PRECAUTIONS:**


- ! ALWAYS REMOVE THE TV AND OTHER EQUIPMENT FROM THE FURNITURE PRIOR TO MOVING THE ASSEMBLED UNIT.
- ! BE CAREFUL WHEN MOVING THE ASSEMBLED FURNITURE AFTER THE SHELVES AND DOORS HAVE BEEN INSTALLED, AS THIS MAY CAUSE THE SHELVES AND OTHER ITEMS TO BECOME UNSECURED AND FALL.
- ! WHEN IN USE, THIS FURNITURE MUST BE PLACED ON A FLAT, SOLID AND LEVEL SURFACE.
- ! DO NOT LEAN ON THE TV WHEN IT IS ON THE TV STAND.
- ! DO NOT CLIMB OR STEP ON THE STAND.
- ! DO NOT BANG INTO OR PLACE YOUR OWN WEIGHT ON THE DOORS.
- ! DO NOT PLACE ITEMS ON THE SHELVES WHICH EXCEED THE MAXIMUM WEIGHT LIMITS OF 125 LBS. FOR TOP SHELF AND 50 LBS. FOR EACH LOWER SHELF

# ASSEMBLY INSTRUCTIONS


NOTE: TWO PEOPLE ARE RECOMMENDED TO ASSEMBLE THIS UNIT.

**Fig. 1**

1. ATTACH the Wood Door Stop (14) to the underside of the Upper Shelf Panel (G) using two 25mm Screws (8) and the supplied screwdriver tool.

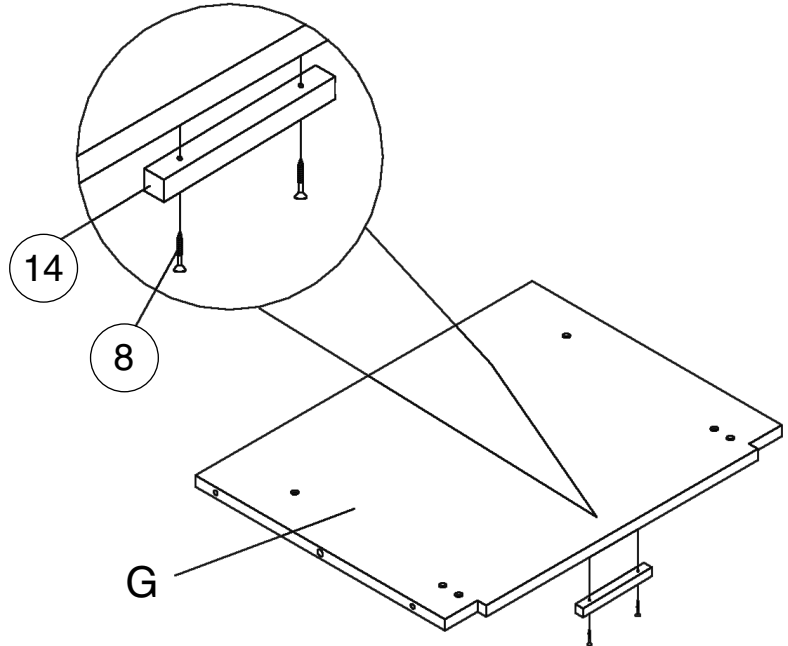


**Fig. 2**

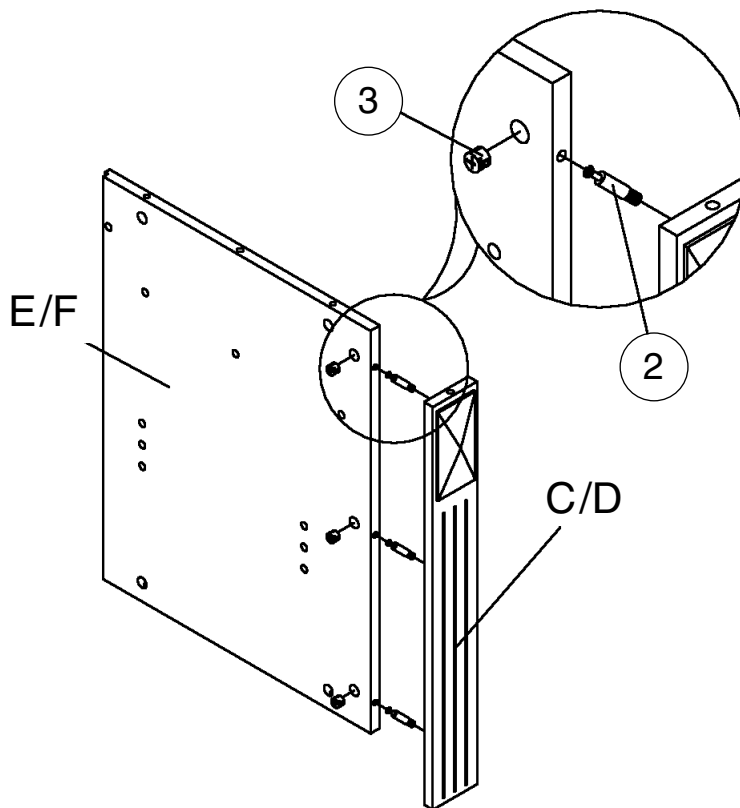


2. ATTACH each Decorative Front Panel (C & D) to the Left & Right Side Panels (E & F) as shown above. SCREW three Cam Lock Pins (2) into the prethreaded holes on the backside of each Decorative Front Panel. INSERT three Cam Locks (3) into the large holes along the inner-front edge of each Side Panel. INSERT the Cam Lock Pins in each Decorative Front Panel into the holes along the front edge of each Side Panel and SECURE by tightening the Cam Locks using the supplied tool.

**Fig. 2**

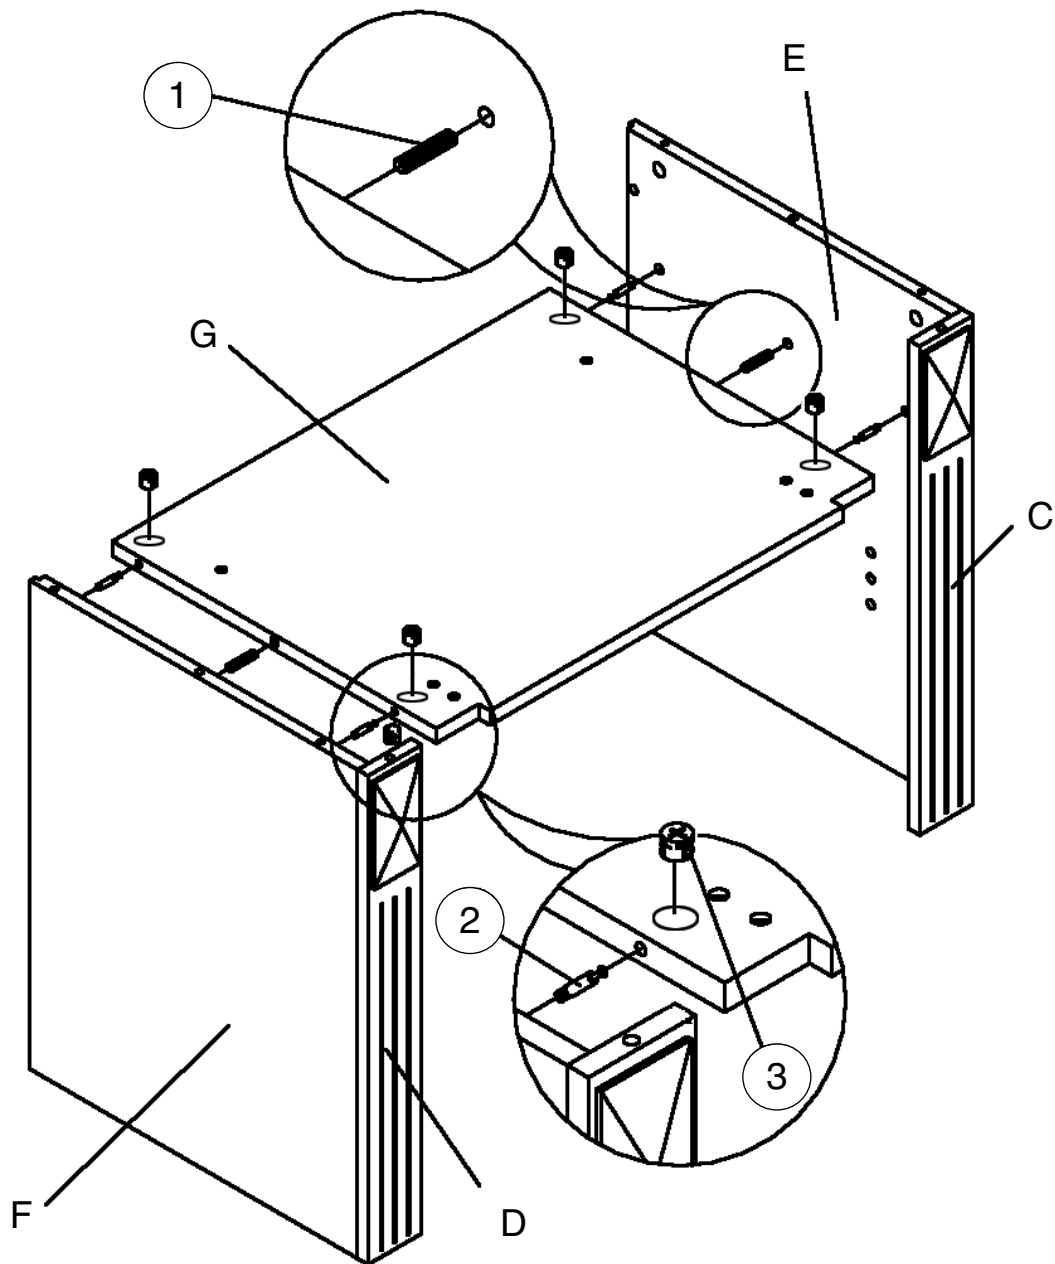


3. ATTACH the Left & Right Side Panels (E & F) to the Upper Shelf Panel (G) as shown in Fig. 2. SCREW two Cam Lock Pins (2) into the prethreaded holes in the inside of each Side Panel, and INSERT two Dowels (1) into the center holes along the left & right edge of each Upper Shelf Panel as shown above.
4. INSERT four Cam Locks (3) into the large holes in the top side of the Upper Shelf Panel.
5. ATTACH the Upper Shelf Panel to the Left & Right Side Panels and SECURE by tightening the Cam Locks.

**Fig. 3**

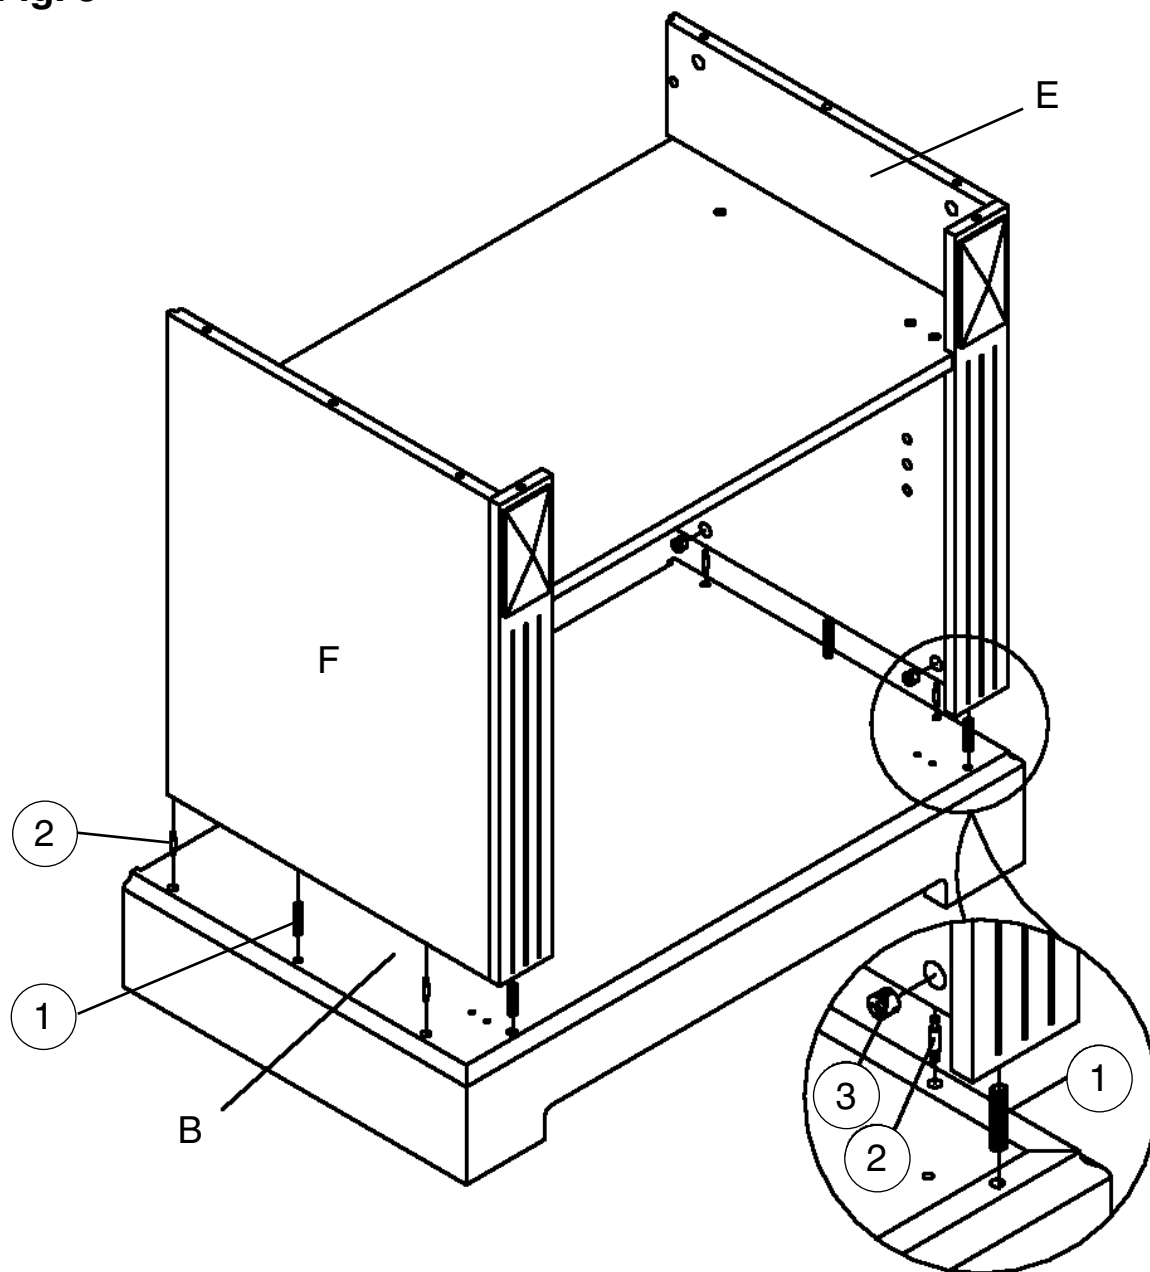


6. ATTACH the Left & Right Side Panels (E & F) to the Base (B) by SCREWING four Cam Lock Pins (2) into the prethreaded holes in the Base. INSERT four Dowels (1) into the predrilled holes in the Base as shown above.
7. INSERT four Cam Locks (3) into the large holes along the bottom-insides of the Left & Right Side Panels.
8. CAREFULLY PLACE the Side Panel assembly onto the Base. Make sure all Cam Lock Pins and Dowels are properly inserted into the holes on the bottom edges of the Left & Right Side Panels.
9. TIGHTEN the four Cam Locks to secure the Side Panels to the Base.

**Fig. 4**

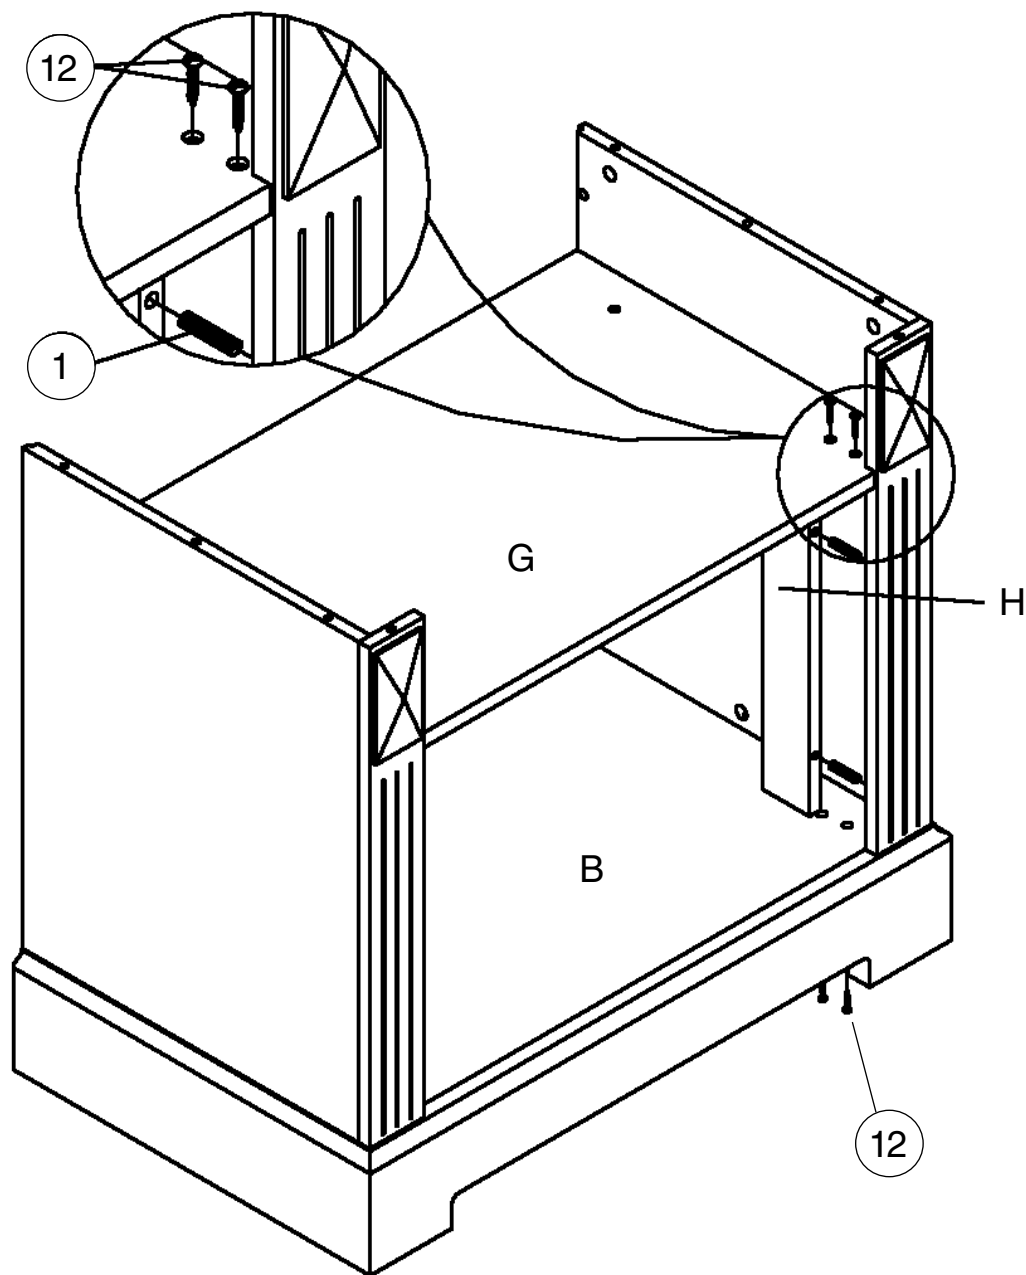


10. ATTACH the Door Support Panels (H) to the inside of the preassembled unit as shown in Fig. 4. With the help of an assistant, CAREFULLY TILT the unit onto its back side. ALIGN each Door Support Panel with the pairs of holes in the Base (B) and the Upper Shelf Panel (G).
11. INSERT two 50mm Screws (12) through the Upper Shelf Panel and into each Door Support Panel. DO NOT TIGHTEN FULLY AT THIS POINT. INSERT two 50mm Screws through the underside of the Base and into each Door Support Panel. INSERT two Dowels (1) into the front edge of each Door Support Panel. REPEAT for other Door Support Panel. DO NOT TIGHTEN FULLY AT THIS POINT.
12. Once ALL eight 50mm Screws have been inserted, carefully LIFT the cabinet back into an upright position. Make sure the cabinet is on a flat, level surface. Now go back and FULLY TIGHTEN all 50mm Screws with the supplied tool.

**Fig. 5**

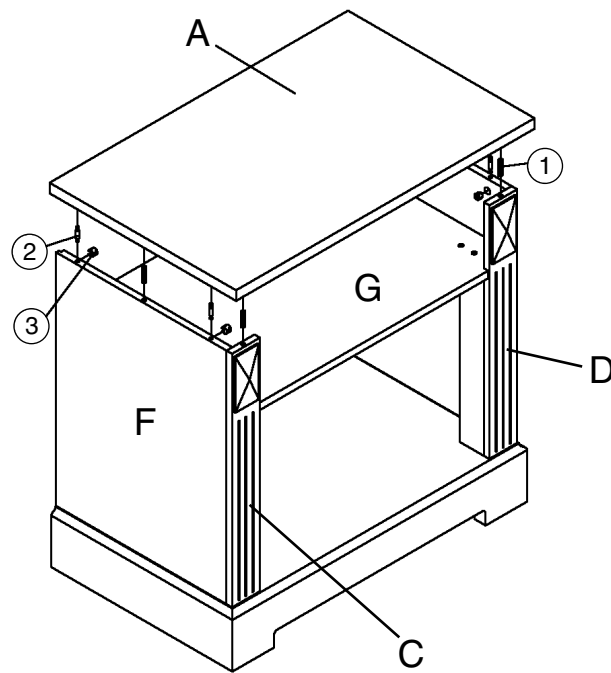


13. INSERT two Dowels (1) into the predrilled holes at the tops of the Decorative Front Panels (C & D).  
INSERT two more Dowels into the holes in the center top edges of the Left & Right Side Panels (E & F).
14. INSERT four Cam Locks (3) into the large holes in the top-inside edges of the Left & Right Side Panels as shown in Fig. 5. SCREW four Cam Lock Pins (2) into the prethreaded holes in the Top Shelf (A).
15. Carefully PLACE the Top Shelf (A) onto the cabinet and SECURE by tightening the four Cam Locks.

**Fig. 6**  
(View from REAR  
of cabinet)

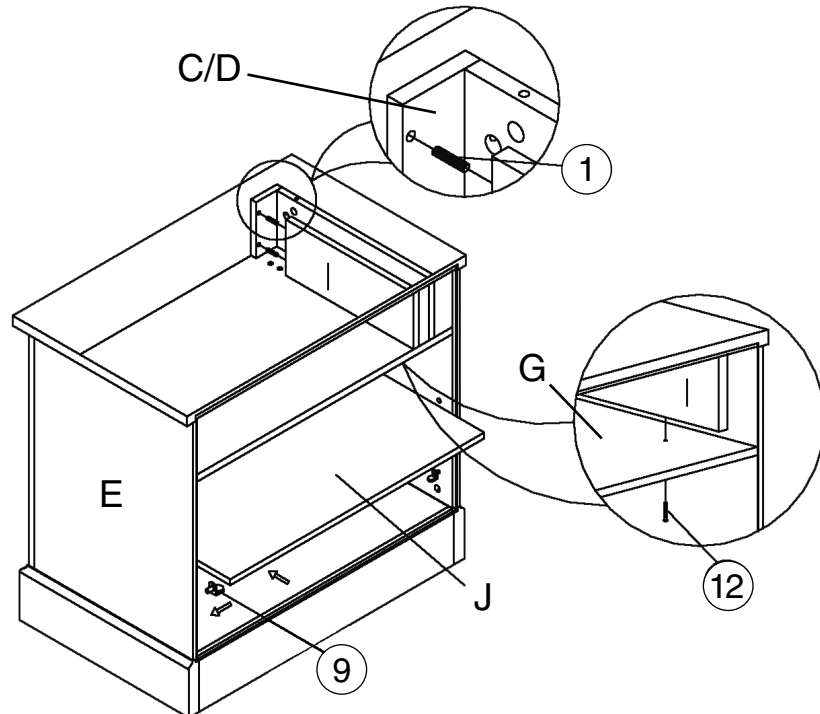

16. INSERT two Dowels (1) into the holes in the front edge of each Top Shelf Support Panel (I).  
ATTACH each Top Shelf Support Panel by inserting the Dowels into the predrilled holes in the back sides of each Decorative Front Panel (C & D). Make sure the hole in the bottom edge of the Top Shelf Support Panel lines up with the hole in the Upper Shelf Panel (G).
17. SECURE each Top Shelf Support Panel with a 50mm Screw (12) as shown in the above inset.
18. INSERT four Shelf Support Posts (9) into the holes on the insides of the Left & Right Side Panels (E & F) and carefully PLACE the Middle Shelf (J) onto the Shelf Support Posts.


**Fig. 7**  
(View from REAR  
of cabinet)

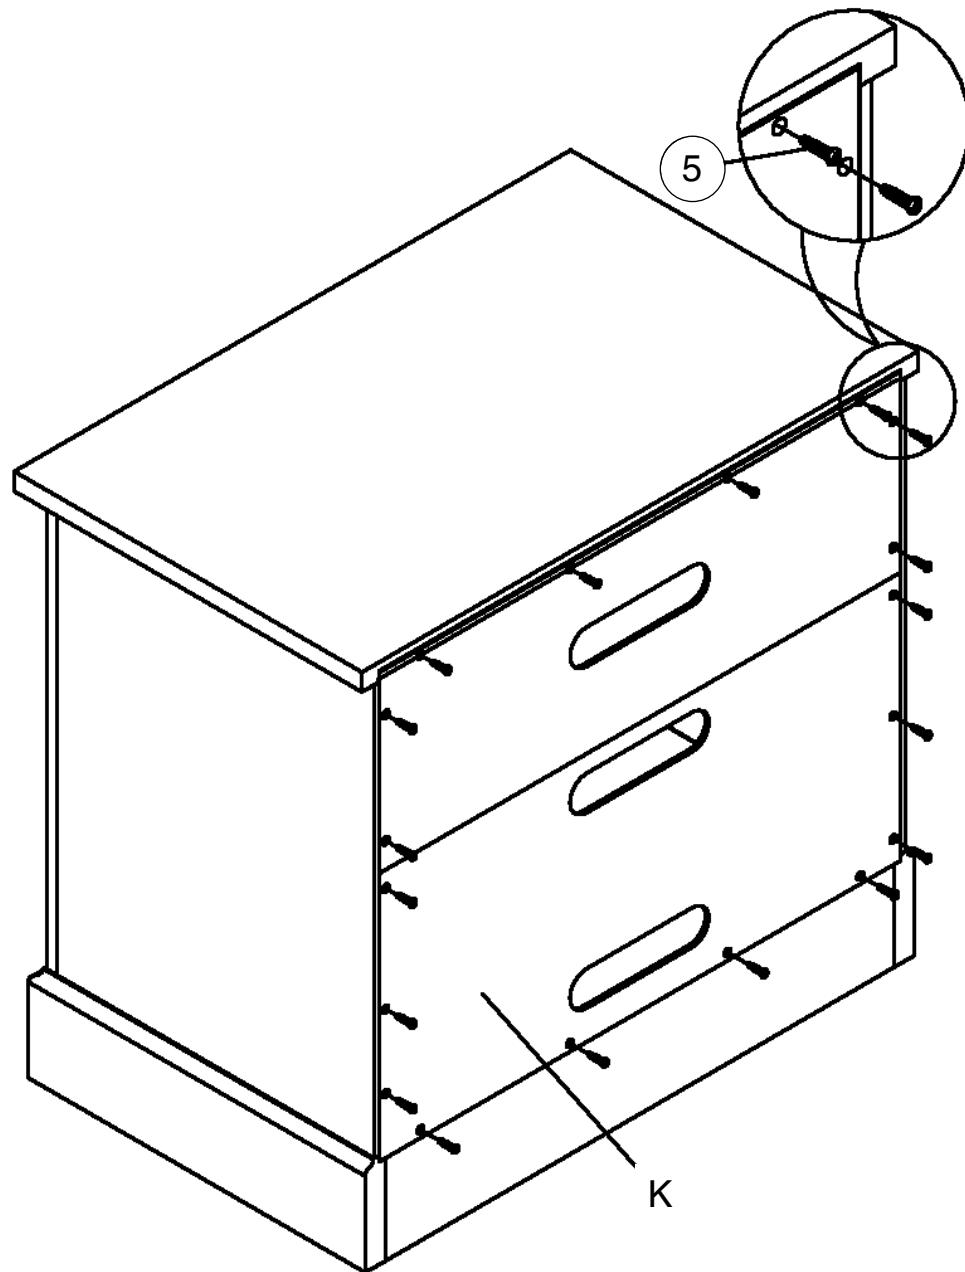

19. ATTACH the Back Panel (K) to the cabinet and SECURE with eighteen 14mm Screws (5) as shown in Fig. 7.




**Fig. 8**

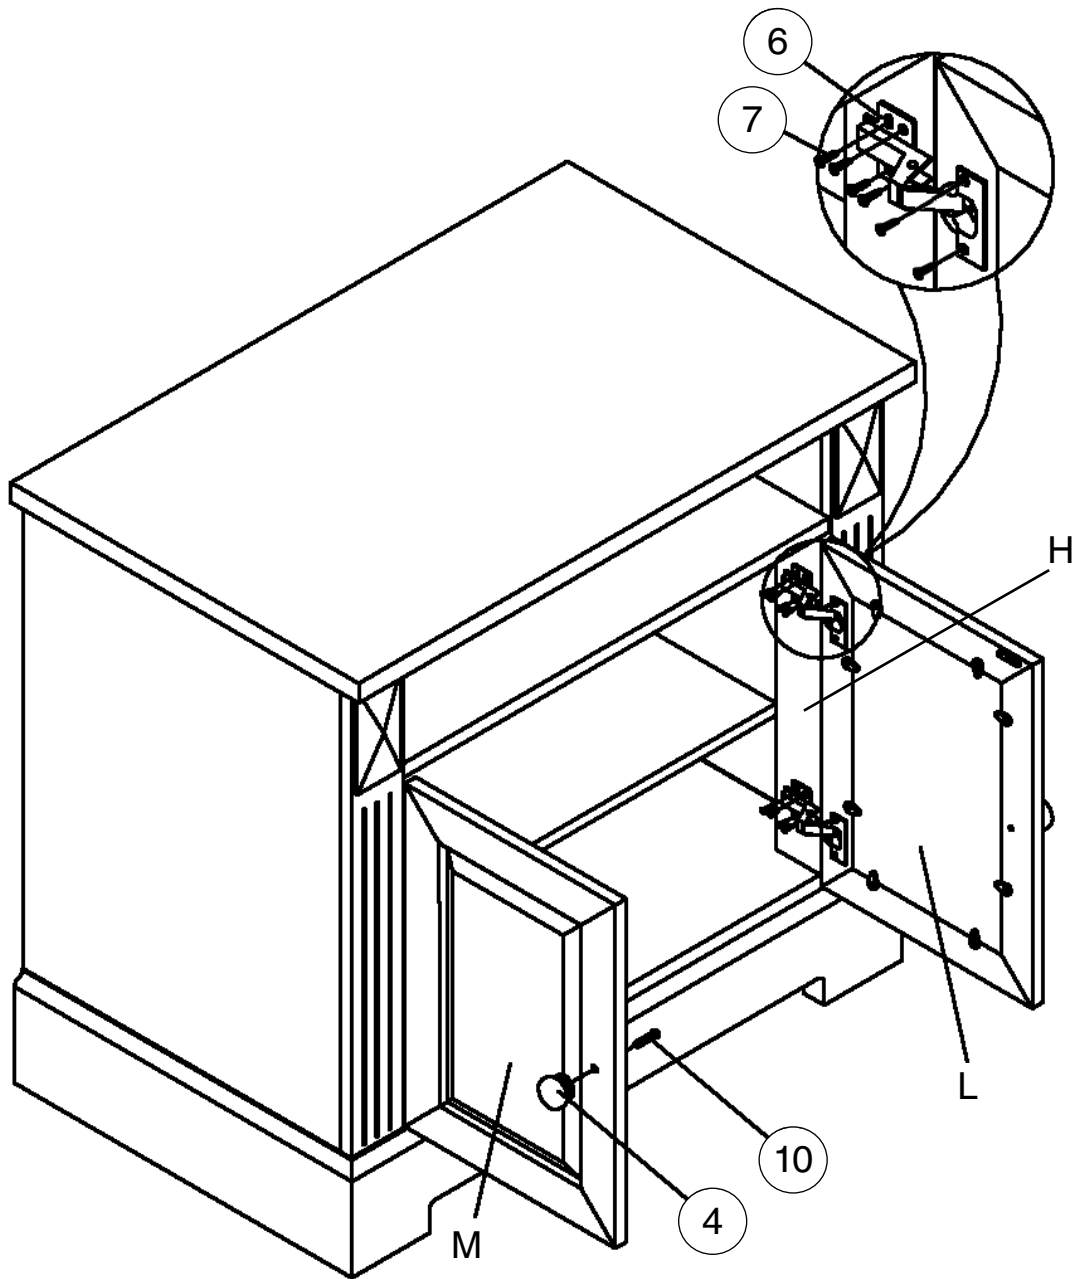


20. ATTACH two Door Hinges (6) to each Door (L & M) using two 16mm Wood Screws (7) for each Door Hinge.
21. ATTACH the Doors to the Door Support Panels (H) using four 16mm Wood Screws (7) for each Door Hinge as shown in the above inset.
22. ATTACH the Door Knobs (4) to the front of the Doors using two 25mm Screws (10) and the supplied tool.

**Fig. 9:**  
**Aligning the Doors**

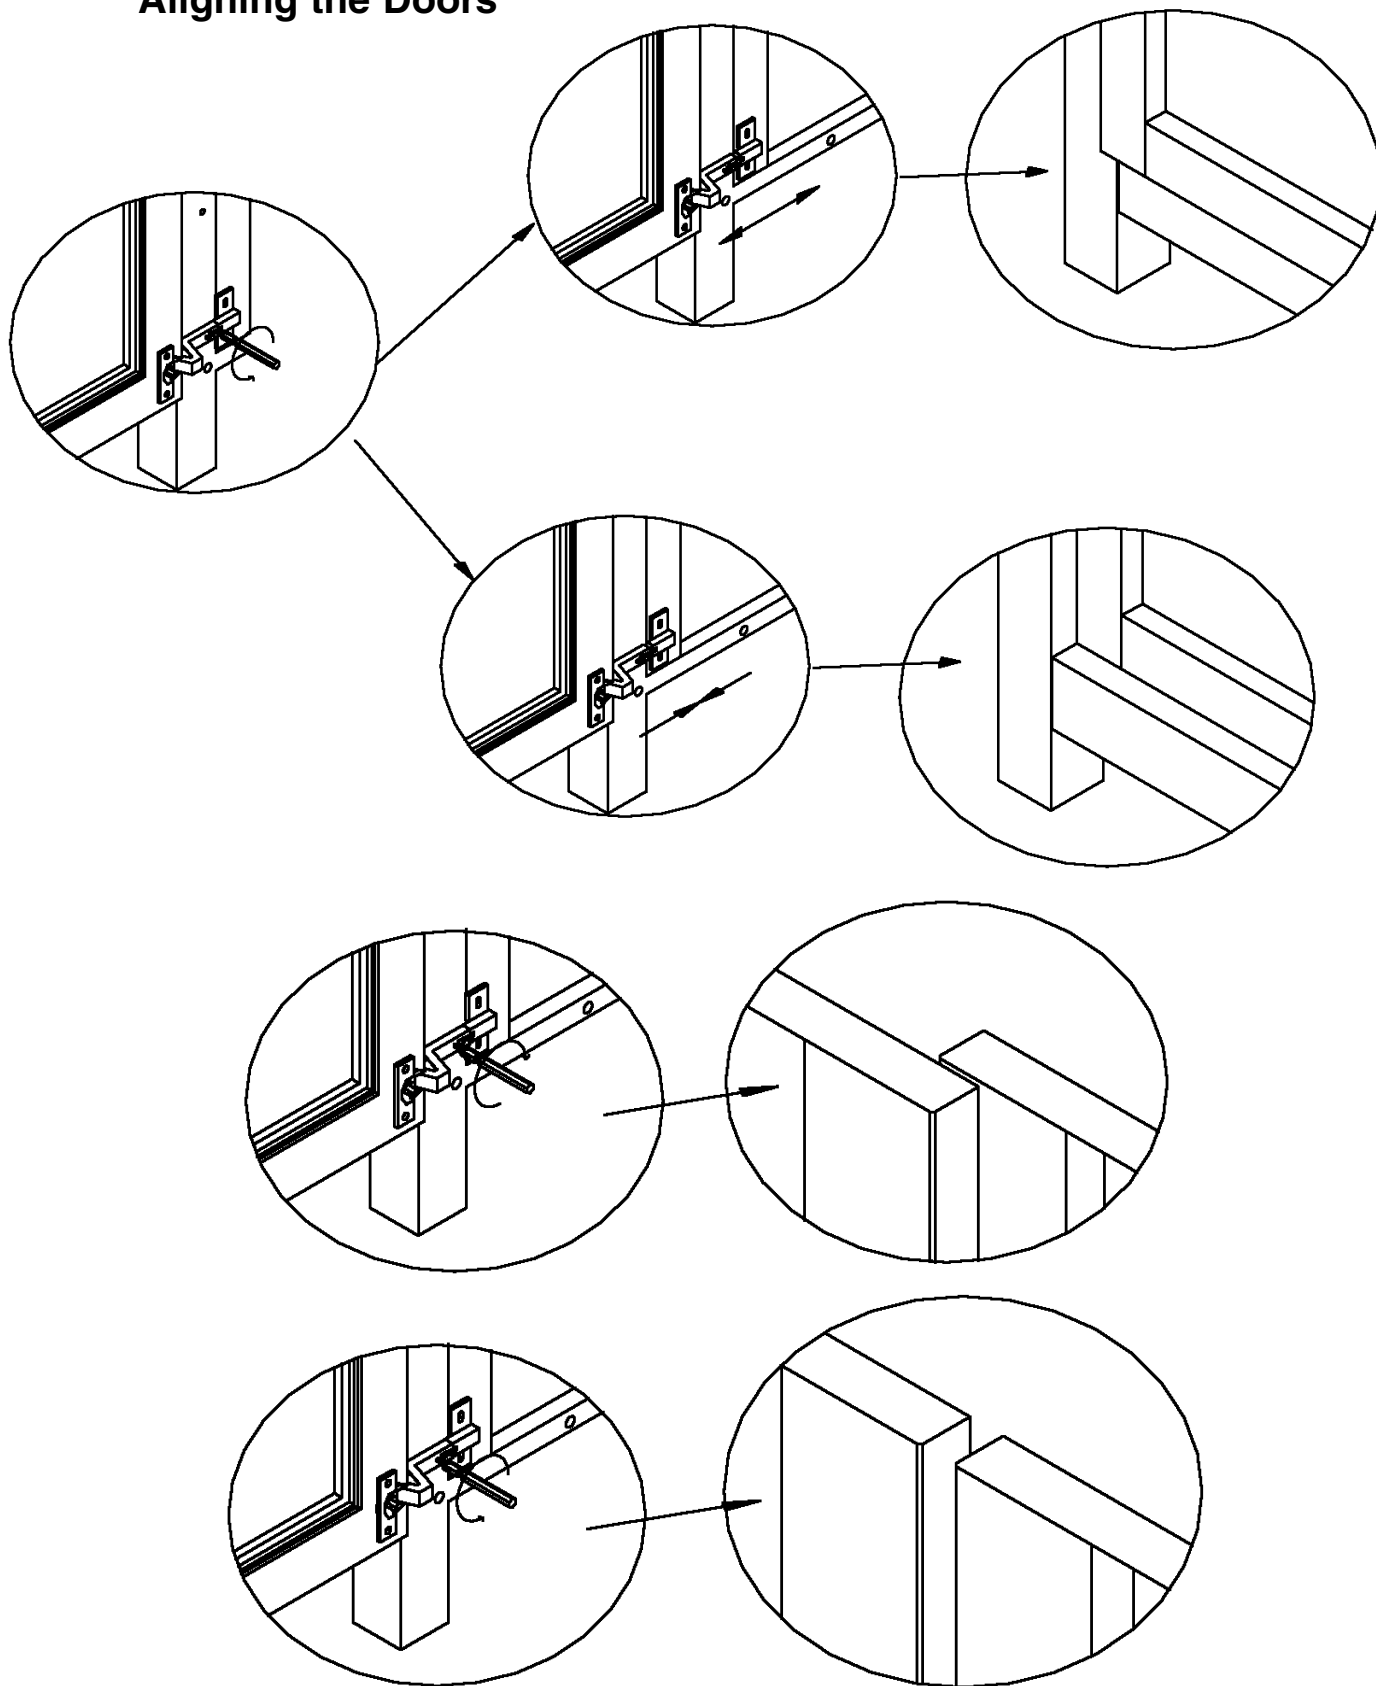

23. Once the cabinet is fully assembled, you can ALIGN the doors (L & M) if needed by adjusting the screws on the insides of each Hinge (6) using the screwdriver tool as shown above.

**Fig. 10:**  
**Interchangeable glass**  
**or wood door panels**

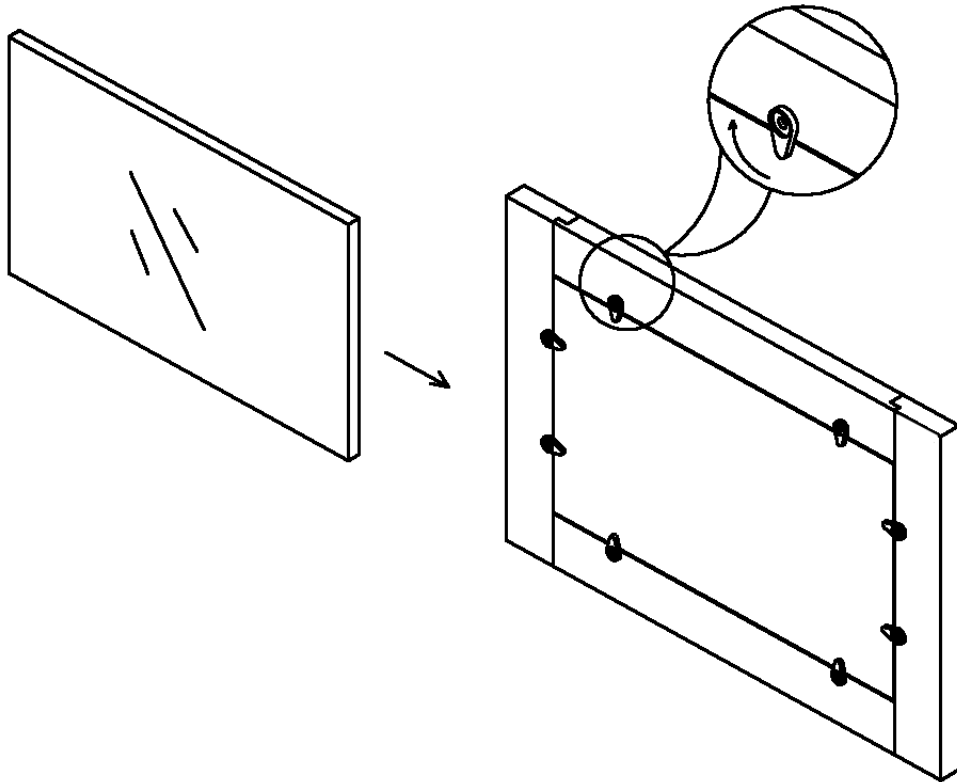

24. This cabinet comes with 2 sets of door panel inserts (solid wood or glass) that can be used. To interchange the door panels, LOOSEN the clips that are used to secure the panel inside the door frame using the screwdriver tool. REMOVE the panel, and PLACE the desired panel insert into the door frame. REPOSITION the clips over the door panel and tighten. BE CAREFUL NOT TO OVER-TIGHTEN THE CLIPS.



## Warranty

### One (1) Year Limited Warranty

All Bell'O International products are warranted, with the exception of glass, to the original purchaser at the time of purchase and for a period of one (1) year thereafter. Glass is warranted to the original purchaser at the time of purchase and for a period of thirty (30) days thereafter. Warranty is only valid in the United States of America.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton. To receive replacement or missing part(s) under this warranty, go to our website at [www.bello.com](http://www.bello.com) or call our **Customer Service Department at 1-888-235-7646**. Please have the model number and part number(s) for reference. You will also need your sales receipt or other proof of purchase. Replacement part(s) will be shipped to you at no charge with Bell'O International assuming all shipping and handling expense.

We warrant to you, the original purchaser, that our furniture and all of its parts and components are free of defects in material or workmanship. "Defects", as used in this warranty, is defined as any imperfections that impair the use of the furniture or product.

Our warranty is expressly limited to the replacement of furniture parts and components. For one (1) year after the date of purchase, Bell'O International will replace any part described on the enclosed furniture parts list that is defective in material or workmanship.

This warranty applies under conditions of normal use. Our furniture products are not intended for outdoor use. The warranty does not cover: 1) defects caused by improper assembly or disassembly; 2) defects caused by shipping, claims for damage during transit to you should be placed immediately by you to the transportation company; 3) defects occurring after purchase due to product modification, intentional damage, accident, misuse, abuse, negligence or exposure to the elements; 4) cosmetic damage and 5) labor or assembly costs.

There are no warranties, express or implied, including without limitation merchantability or fitness for particular use, except as (i) contained herein or (ii) required by applicable law in the state whose law governs (which shall be New Jersey absent controlling law imposing the law of another state in lieu thereof as governing law). All warranties of whatsoever derivation shall be limited to the term set forth above, unless otherwise required by applicable law.

Manufacturer's employees or representatives' ... ORAL OR OTHER WRITTEN STATEMENTS DO NOT CONSTITUTE WARRANTIES, shall not be relied upon by Buyer, and are not a part of the contract for sale or this limited warranty.

Except as provided herein, Bell'O International shall have no liability or responsibility to the purchaser or any other person or entity with respect to any liability, loss or damage caused directly or indirectly by use of the product, including, but not limited to, any incidental or consequential damages. Some states do not allow limitation on how long an implied warranty can last or the exclusion of limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.

**BELL'O INTERNATIONAL CORPORATION, 711 Ginesi Drive, Morganville, NJ 07751-1235**  
**Phone: (732) 972-1333 Fax: (732) 536-6482 Web: [www.bello.com](http://www.bello.com) E-mail: [sales@bello.com](mailto:sales@bello.com)**