

QUICK START GUIDE

Wall oven

 
US CA

FISHER & PAYKEL


Keep this document handy for easy reference.

- For detailed information on the features of your oven, see your 'User guide'.
- Before using your oven, make sure you read the full 'User guide', with special attention to the 'Safety and warnings' section.
- For contact information or if you require service, assistance or replacement parts, see the end of this document or your 'Service & warranty' booklet.

YOUR MODEL

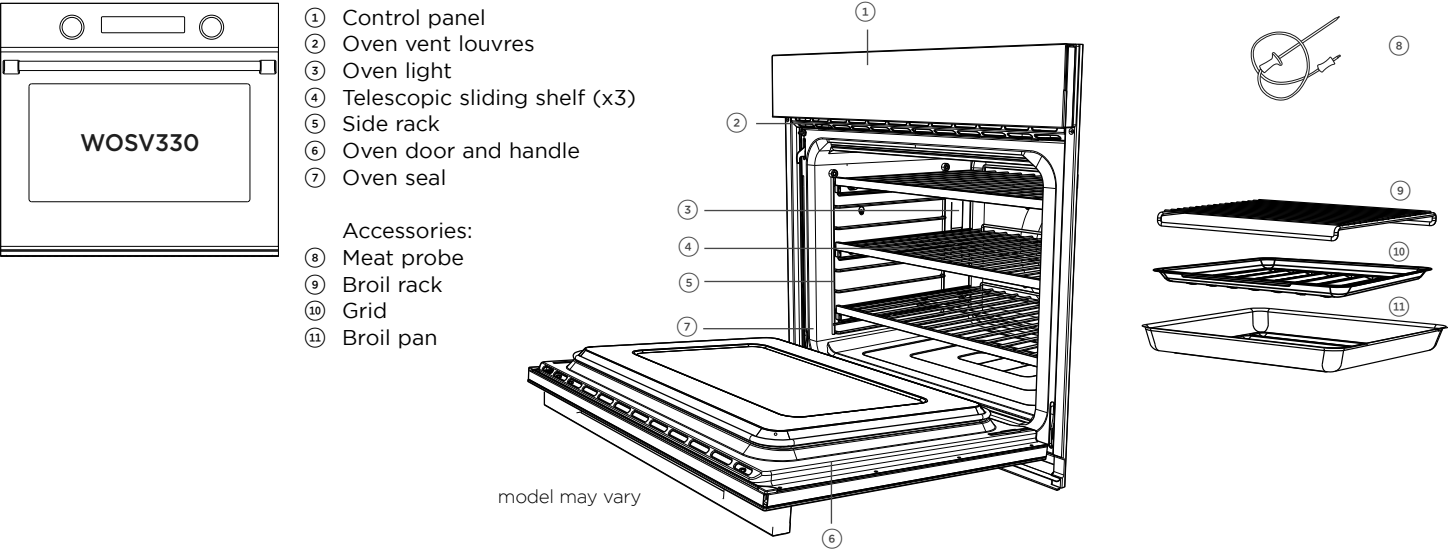


THE CONTROL PANEL

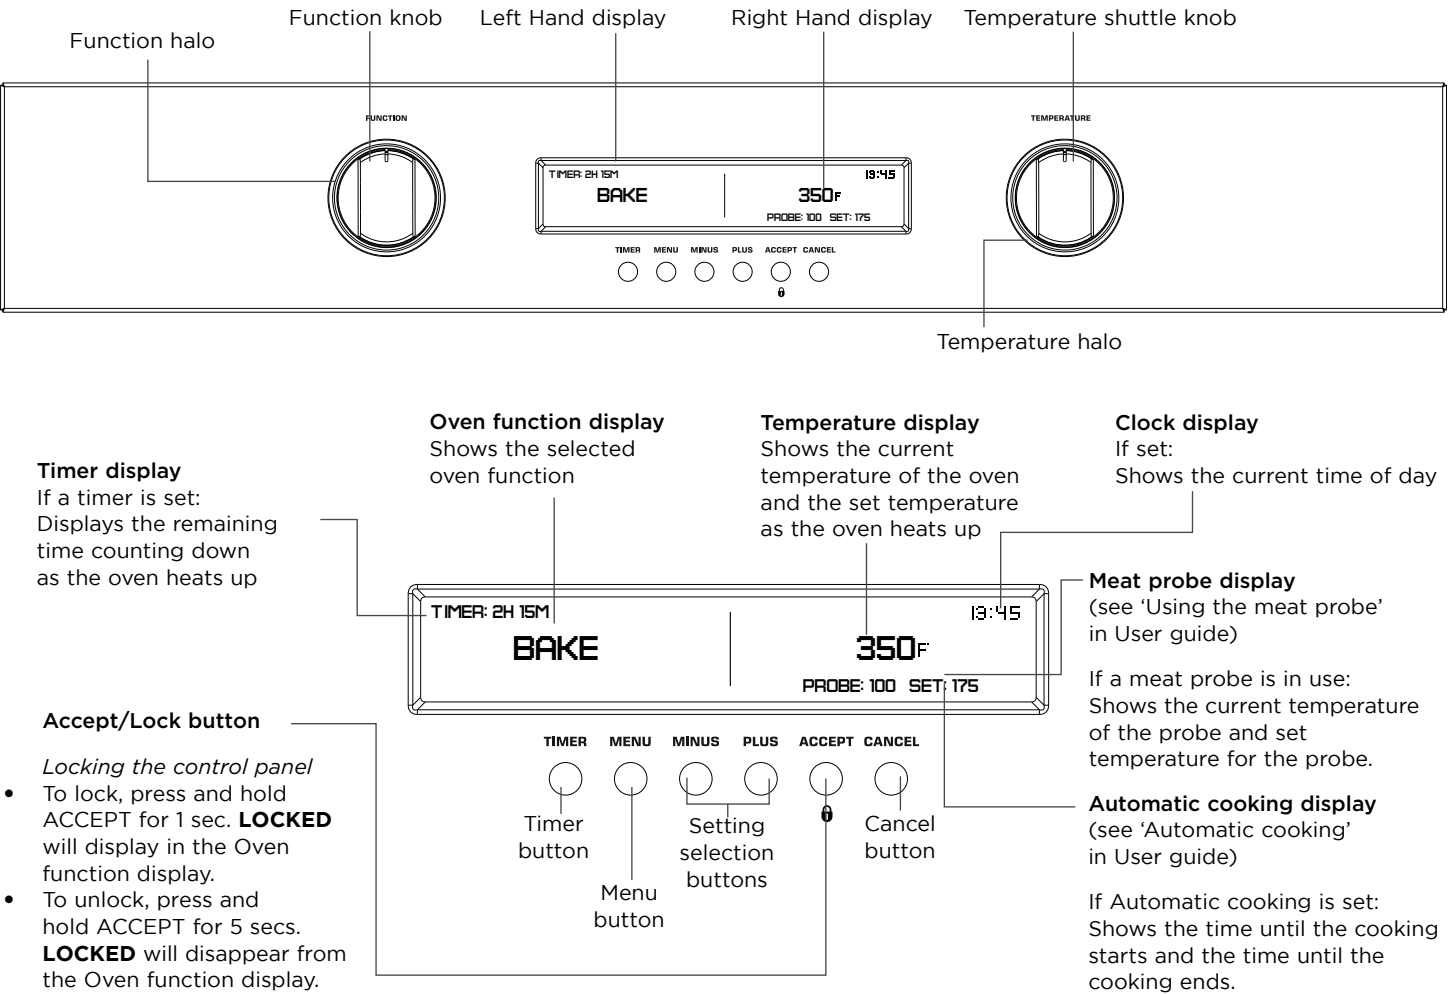 


SETTING THE CLOCK

You set the clock within the user preference menu. To learn more about the user preference menu, refer to your User Guide.
Note: When you first switch your oven on at the wall you will initially be prompted to set the time. If you do not wish to set the time at this stage, press CANCEL to exit the clock setting. If you want to set the clock later, follow the steps under 'To change the time'.

 When the oven is first switched on at the wall

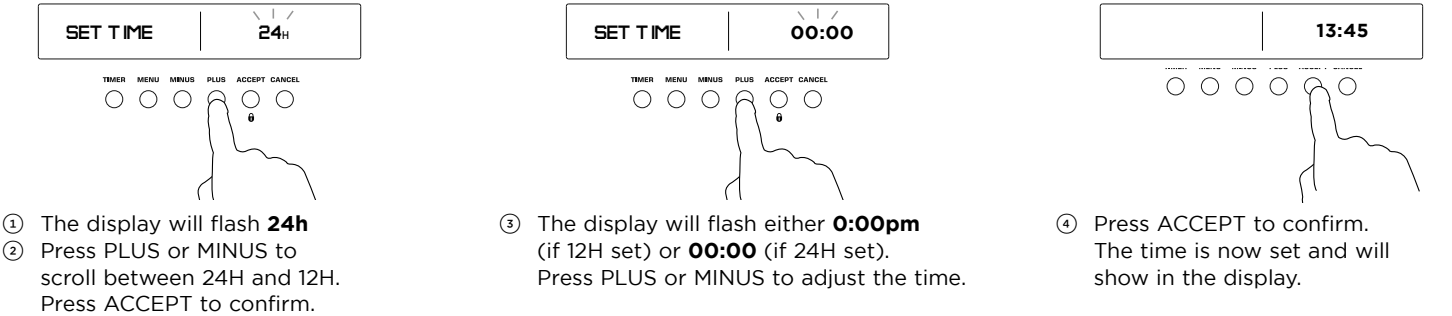

 To change the time (within the user preference menu)

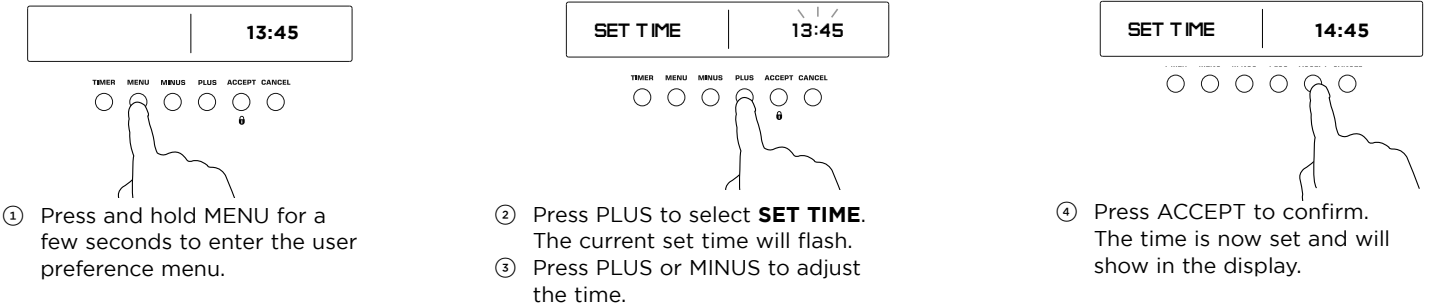


To change the clock settings


In the user preference menu you can also change between 12H and 24H. Refer to your User guide to learn more about this feature.

CONDITION THE OVEN

 It is important to condition your oven before using it for cooking and baking. Conditioning will burn off any manufacturing residues and ensure that you get the best results right from the start.

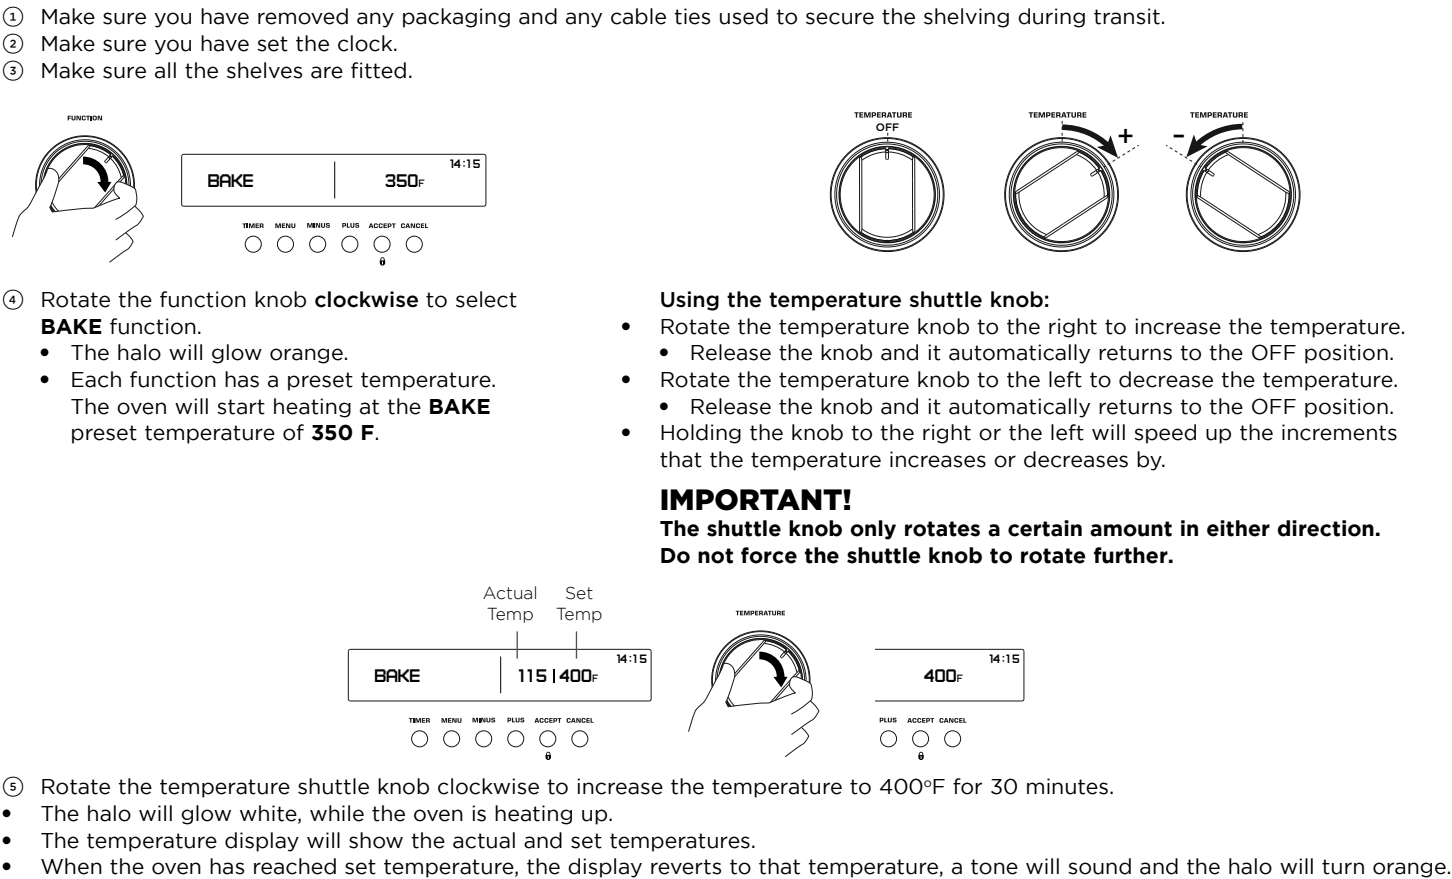

CONDITION THE OVEN (CONTINUED)

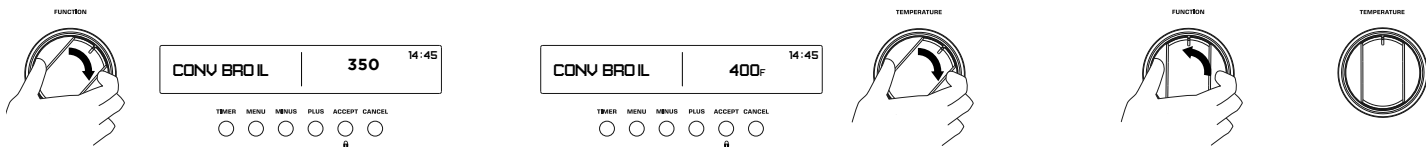 

- ⑥ After 30 minutes is up, select the **CONVBROIL** function.

 - The oven heats at the **CONVBROIL** preset temperature of **350f**.
- ⑦ Set the temperature to 400°F for 5 minutes.

 - The halos will remain orange.
 - The temperature display may show the actual and set temperatures.
- ⑧ After 5 minutes is up, turn the oven function knob counter clockwise back to OFF.

 
 - both halos will go out.

- There will be a distinctive smell and a small amount of smoke during the conditioning of the oven. This is normal, but make sure the kitchen is well ventilated during the conditioning.
- Once cooled, wipe out the oven with a damp cloth and mild detergent, and dry thoroughly.


REPOSITIONING THE SHELVES

Placing the telescopic sliding shelves on the side racks provides **EIGHT** cooking positions to choose from. Refer to the User guide for suggested shelf positions.

Note: generally, the shelf positions in the top of the oven are suitable for broiling. Those in the middle or lower region of the oven are suitable for baking, roasting and casseroles.

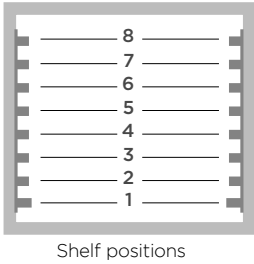

- Always position oven shelves **BEFORE** heating the oven.
- To remove a sliding shelf, grip it by its two front corners (making sure you are gripping the wire shelf and the sliding frame together), tilt upwards and pull it out of the oven.
- To place a sliding shelf in the oven correctly, position it so that the front bar is toward you, as shown.
- Check that the sliding frame is not extended.
- Check the guard rail (as shown) to make sure the shelf is the right way up.
- Position the shelf so that it is level and the rear shelf tags on both sides of the sliding frame rest on the side racks (as shown).
- Then push the sliding shelf all the way to the back of the oven, until the front shelf tags drop into place.
- For your safety, the wire shelves and telescopic sliding frames are built together as one unit and are not separable. This means that when placed properly on the side racks, the slides will prevent the wire shelves from tilting when pulled towards you.
- To prevent the tags from lifting off the side racks, take care to slide the shelves forward horizontally.

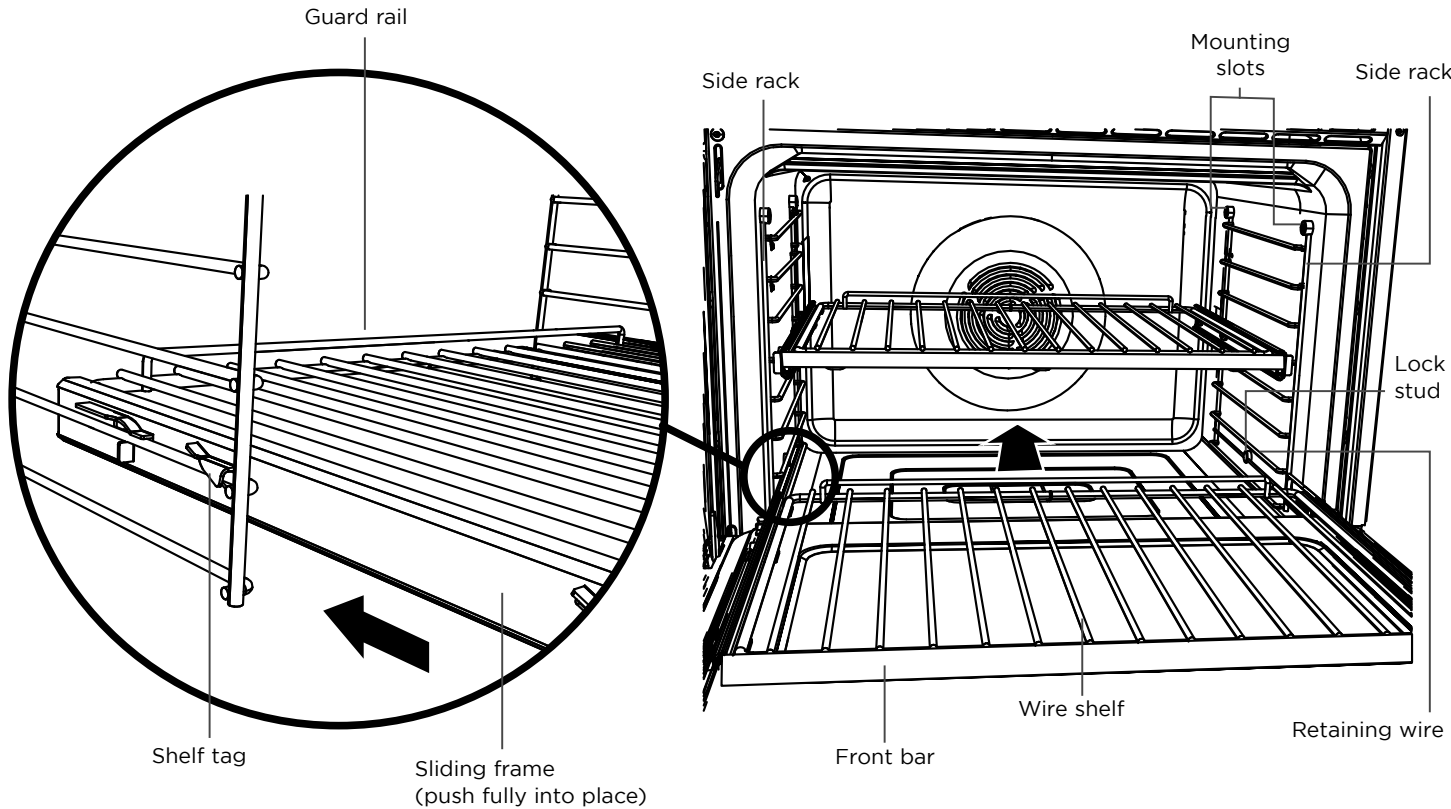 


USING THE TIMER

- You can use the timer at any time, even if you are not using the oven.
- If the time is more than an hour, the display will count down in minutes (**h:m**). If it is less than an hour, it will count down in seconds (**m:s**).
- You can set the timer for up to 23 hours 59 minutes.

IMPORTANT!
The timer does **NOT** turn the oven off.

 To set the timer

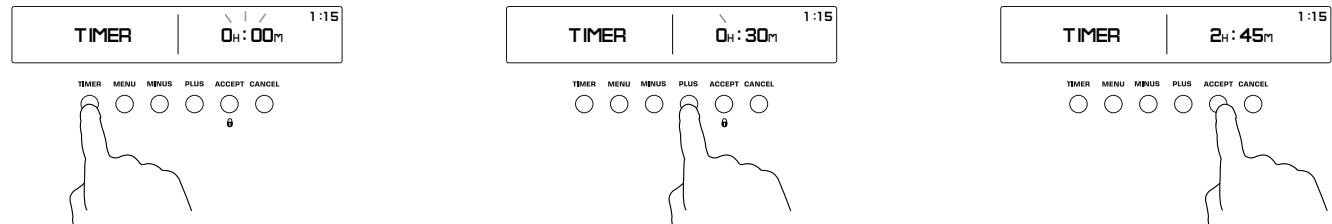

- ① Press **TIMER**. **0h 00m** will flash in the display to indicate the timer is ready to be set.
- ② Press **PLUS** or **MINUS** to adjust the length of the timer.

 - Holding the buttons down will speed up the time adjustments.
- ③ Press **ACCEPT** to confirm. The timer is now set and will begin counting down.

 - The display will revert automatically to the home screen, with the Timer setting in the top left screen.

To modify the timer setting

- Adjusting the timer setting is the same process as setting a new timer.
- Press **TIMER**. The previous timer setting will flash in the display.
 - Press **PLUS** or **MINUS** to modify the length of the timer.
 - Press **ACCEPT** to confirm. The timer is now set and will begin counting down.

To cancel the timer setting

- Press **TIMER**.
- Press and hold **CANCEL** to clear the timer setting.

When the set time is up

- The timer will show **00m**. A tone will sound.
- Press **ACCEPT** or **CANCEL** to stop the tone sounding.

FOR MORE INFORMATION

For detailed information on the features of your oven

➤ see your ‘User guide’

For warranty information

➤ see your ‘Service and warranty’ booklet

If you...

- have any questions or comments
- need a Fisher & Paykel authorized technician to service your product
- need replacement parts or accessories
- want to register your product

➤ see your ‘Service and warranty’ booklet or contact us

USA	toll-free, 24/7	1 888 936 7872
CA	toll-free, 24/7	1 888 936 7872

www.fisherpaykel.com