

The Smile Shutter flow

Imagine a camera smart enough to catch every smile! In Smile Shutter Mode, your Cyber-shot® camera can automatically trip the shutter at just the right instant to catch the perfect expression.



Here's how to put your Cyber-shot® camera in Smile Shutter Mode:

- 1: Touch the "shoot mode" icon on your screen.
- 2: Select "SCN" (scene selection) on the menu.
- 3: Select the "Smile Shutter" icon.



In Smile Shutter Mode, pressing the shutter **halfway down** locks in your focus.



Press the shutter **all the way down**, and the camera starts detecting smiles.



Press the shutter button again, and the camera will stop detecting smiles.

Smile Shutter in Action

In Smile Shutter mode, the camera will take up to 6 pictures – and you can also set your T Series camera to concentrate on one face in a group shot.

