

Insta360 App
Tutorials
User Manual

Insta360 App
教程视频
用户手册

https://www.insta360.com/guide/goutra

Press and hold the lock to remove the Standalone Camera.
长按解锁键的同时取下单机相机

Align the Standalone Camera with the pogo pins when returning it to the Action Pod.
单机相机放回拓展舱时请对准信号触点

Activation / 首次开机

2S

Action Pod / 拓展舱结构

Flip Touchscreen
Indicator Light
Pogo Pins
Shutter Button
Power Button
Quick Button
Lanyard Port
Speaker
Lock
USB-C Port

Standalone Camera / 单机相机结构

Lens
Microphone
Ambient Light Sensor
Standalone Camera Button
Indicator Light
Lanyard Port
Indicator Light
Pogo Pins
Speaker
microSD Card Slot

Landscape and Portrait Modes / 横竖屏切换

Landscape Mode
Portrait Mode

Waterproofing Guidelines / 防水说明

The Action Pod is splashproof. Do not use it underwater.
拓展舱仅防泼溅，不防水，请勿水下使用

The Standalone Camera is waterproof to 10 meters.
单机相机防水 10 米

Action Pod Buttons / 拓展舱按键

Shutter Button (Activates QuickCapture when camera is off)
快门按键 (无需开机即可快速开拍)

Power Button
电源按键

Quick Button (Function can be customized)
自定义按键 (功能可在拓展舱上自定义)

Insta360 GO Ultra

Standalone Camera Buttons / 单机相机按键

Standalone Camera Button (Activates QuickCapture when camera is off)
单机相机按键 (无需开机即可快速开拍)

The function of this button can be customized on the Action Pod.
该按键功能可在拓展舱上自定义

Error
Recording
Charging
Standby

Other Features / 其他功能

Camera Reboot
强制重启相机

Remotely control the Standalone Camera with the Action Pod.
可在拓展舱内远程预览单机相机的拍摄画面、远程控制拍摄模式等

Magnet Pendant / 磁吸挂绳

Remove the sticker to reveal the magnetic surface.
请撕掉贴纸，此面为磁吸面

Rotate the gray area to adjust the shooting angle.
旋转灰色硅胶部分可实现俯仰角度调整

Adjust the length of the lanyard cord.
调节挂绳的长度

Adjust the pendant to the desired angle, then place under your clothes.
调节合适角度后将磁吸挂绳佩戴在衣服里

Landscape and Portrait Modes When Using the Magnet Pendant
佩戴磁吸挂绳时：低头俯视角下如何辨别横竖拍

Landscape Mode
Portrait Mode

Check the position of the Indicator Light and Lens to identify shooting mode.
佩戴磁吸挂绳后可通过指示灯和镜头位置来辨别横竖拍摄模式

Magnet Pendant Safety Cord / 快拆防丢绳

Press the buckle and remove the quick-release anchor.
按压卡扣，将快拆豆取出

Bend the quick-release anchor cord, thread it through the hole in the camera, then secure it.
将快拆豆绳子持至弯曲，穿过孔位后固定

Wrap the cord around a lanyard or strap, and then put the buckle through the loop.
将防丢绳固定在磁吸挂绳或背包带上

Adjust the length of the Magnet Pendant Safety Cord with the slider.
可通过调节扣调整防丢绳的长度

Easy Clip / 简易夹

Adjustable 180° tilt range.
180度可调节倾斜范围，满足多角度使用需求

Attach to a hat to shoot POV footage.
佩戴在帽子上可拍摄第一人称视角

QuickStart Guide
快速入门指南