


KitchenAid®

**Food Processor
Cordless Food Chopper - battery included**

MODELS:

KFCR531BM0 (Black Matte)
KFCR531SE0 (Shaded Palm)

Cordless Food Chopper

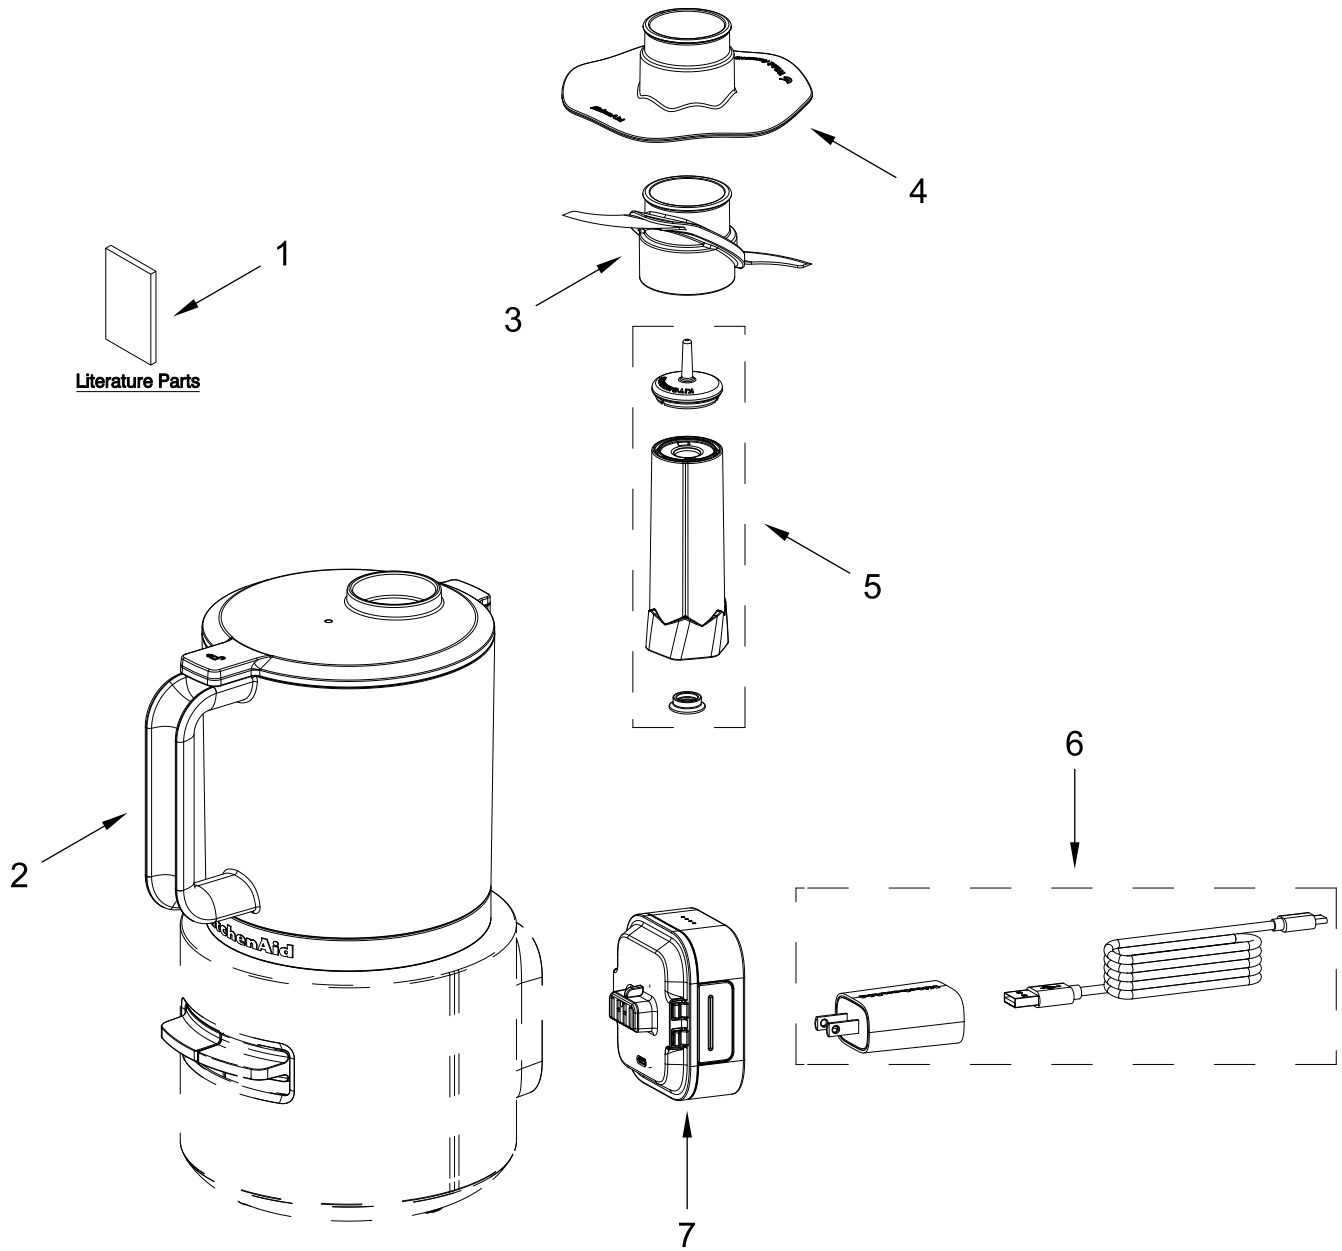

Cordless Food Chopper

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11310454	Blade, Multipurpose	6	W11698092	Power Adaptor + USB Cable
	W11634668	Use & Care Guide	4	W11310460	Blade, Whisking			
2	W11697834	Bowl + Lid	5	W11697841	Adaptor, Shaft	7	W11698095	Battery