


# Quick start guide

1. Plug in the power adapter to DC IN and turn the power on .
2. Insert memory card into the card slot of digital photo frame.
3. Use remote control to navigate on the screen to choose Favorite, Photo, Music, Video, Setup, or Clock icon .

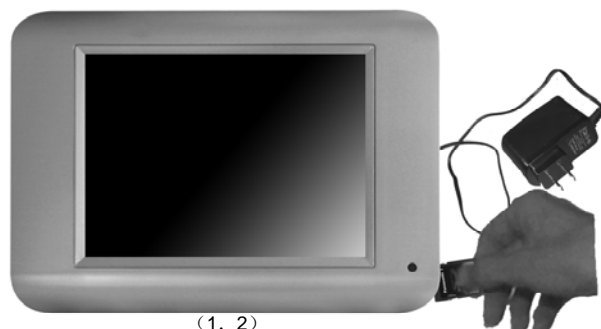

(1, 2)



(3)




(4)




4. Clicking the PHOTO icon will view pictures one by one. Clicking the VIEW icon will show 9 photos on the screen. You can choose one to view by clicking the left and right arrow buttons. There will be a circle on the photo you have selected.
5. Clicking the CLOCK button to enter the view of calendar.



(5)

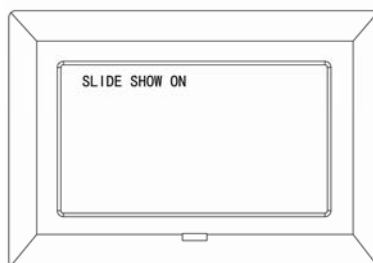

(6)

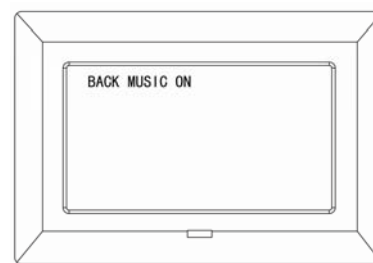


(7)

6. Clicking the SLIDESHOW button starts the slideshow function .
7. Clicking the BACKMUSIC button will allow you to view the slideshow with background music from your memory card .
8. The setup manual can help you set the system, photo, video and clock.



(8)

9. Use the direction key to choose the CLOCK and set the time and date of the clock.

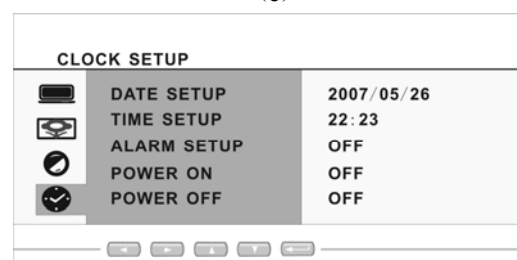

(9)