


Polaroid Now

- A** Shutter Button
- B** Lens
- C** Flash
- D** Viewfinder
- E** Self-timer & Double Exposure*
- F** Film Door Button
- G** Flash ON | OFF Button*
- H** ON | OFF Button
- I** Film Counter LED
- J** Neck Strap Loop
- K** Battery Level Indicator

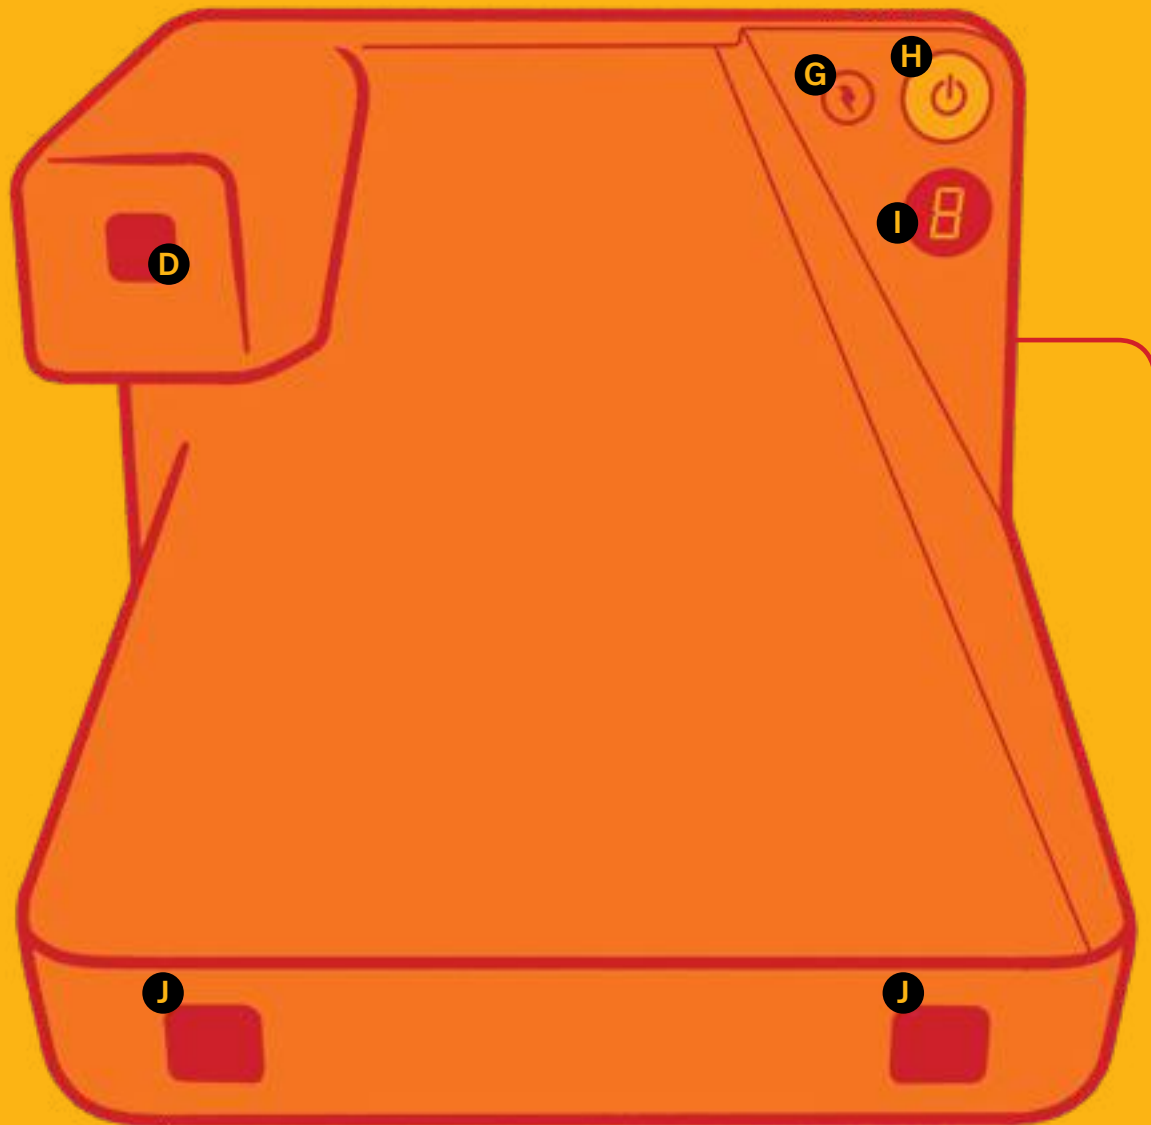

This camera works with

I-TYPE FILM

600 FILM

Have a problem,
or a question you
need answered?

USA/Canada
usa@polaroid.com
+1-212-219-3254

**Contact our
Customer
Support Team**

EU/Rest of World
service@polaroid.com
00800 5770 1500

or visit polaroid.com/help

* Explore more features and download the full manual
at polaroid.com/now-manual

- Battery full
- Battery half full
- Battery low

Made in China for and distributed by Polaroid International B.V., 1013 AP, Amsterdam, The Netherlands. The POLAROID word and logos (including the Polaroid Classic Border Logo) and Polaroid Now are protected trademarks of Polaroid.

© 2022 Polaroid. All Rights Reserved.

Polaroid NOW

- 1 Turn on the Polaroid Now camera by pressing ON/OFF button.
- 2 Open the film door.
- 3 Insert the film pack darkslide up and with the tab facing toward you.
- 4 Close the film door. The darkslide covered by the film shield will eject.
- 5 Remove the darkslide and allow the film shield to roll back in.
- 6 Aim at your subject and press the shutter button. The flash will trigger automatically.
- 7 To shoot without flash, press the flash button before each shot.
- 8 The photo covered by the film shield will eject.
- 9 Don't shake the photo! Place your photo in a dark place or face down on a flat surface.

i-Type Camera

Quick Start Guide

