



VICTROLA

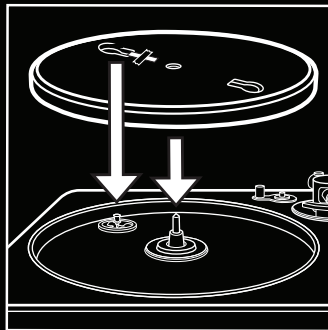


SET THE SLIPMAT ASIDE AND PLACE THE PLATTER ONTO THE TURNTABLE.

ROTATE THE PLATTER UNTIL THE HOLE WITH THE GUIDE STRING IS DIRECTLY OVER THE MOTOR SPINDLE AS SHOWN.

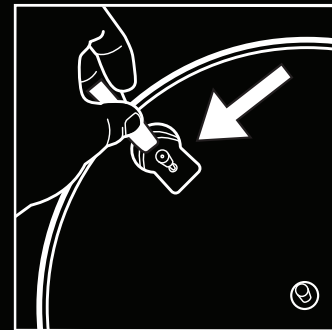


CAREFULLY REMOVE THE TAPED GUIDE STRING AND USE THE STRING TO STRETCH THE BELT OVER THE MOTOR SPINDLE.


ONCE THE BELT IS INSTALLED AROUND THE MOTOR SPINDLE, DISCARD THE GUIDE STRING AND PLACE THE SLIPMAT ON THE PLATTER.

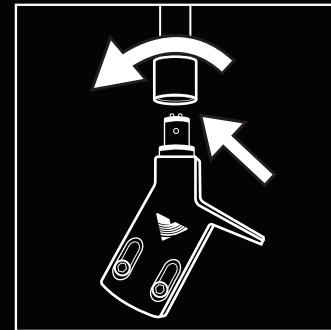

INSERT THE HEADSHELL INTO THE TONEARM AND TIGHTEN THE TONEARM COLLAR COUNTER-CLOCKWISE UNTIL THE HEADSHELL IS SECURE.

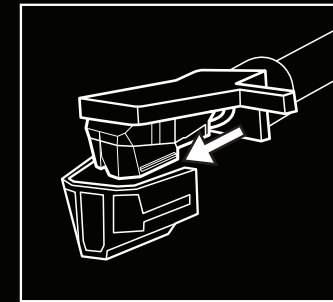


AUDIO-TECHNICA VM95E

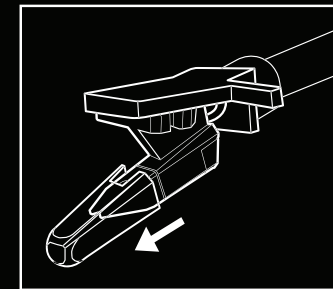

ORTOFON OM 5E


GENTLY PULL THE COVER OFF OF THE CARTRIDGE.

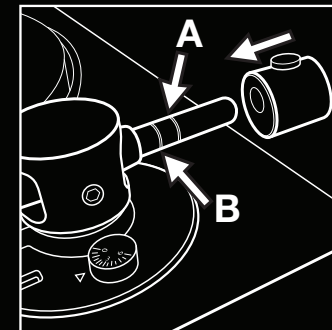

SLIDE THE COUNTERWEIGHT ONTO THE TONEARM UNTIL THE FRONT OF THE COUNTERWEIGHT IS ALIGNED WITH THE CORRESPONDING GROOVE.


GROOVE A:
AUDIO-TECHNICA VM95E
GROOVE B:
ORTOFON OM 5E

Note: Remove the two foam blocks from the tonearm before installing the counterweight.

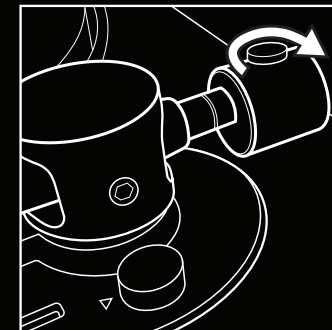


ONCE ALIGNED WITH THE CORRECT GROOVE, TURN THE TOP SCREW CLOCKWISE TO TIGHTEN THE COUNTERWEIGHT.

Note: You may need to adjust the anti-skate if you notice distortion, skipping, or looping during playback.

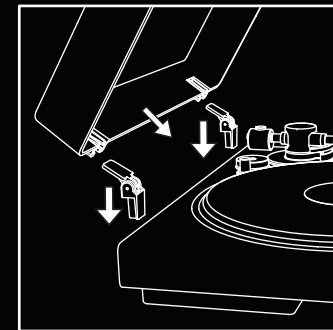

LOCATE THE DUST COVER HINGES AND INSERT THEM INTO THE SLOTS ON THE BACK OF THE TURNTABLE.

INSTALL THE DUST COVER ON THE HINGES.

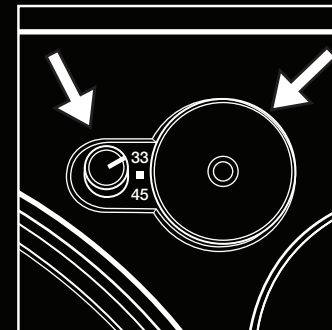

USE THE SPEED SELECTOR KNOB TO SELECT YOUR RECORD SPEED.

PLACE THE 45 RPM ADAPTER ON THE SPINDLE NEXT TO THE SPEED CONTROL TO STORE WHEN NOT IN USE.

OPERATION GUIDE

 POWER ON single press	
SWITCH OUTPUT single press switch between RCA output and Bluetooth output	
AURACAST MODE double press when in Bluetooth mode	
 POWER OFF press and hold (1 sec)	

LED COLOR GUIDE

RCA MODE flashes white (3x) then solid white	
BLUETOOTH MODE Ready To Pair flashing blue Connected solid blue (2 sec) then solid white	
AURACAST MODE Broadcasting solid light blue	

TURNTABLE SETUP

TURNTABLE QUICK START