 


VICTROLA

EN

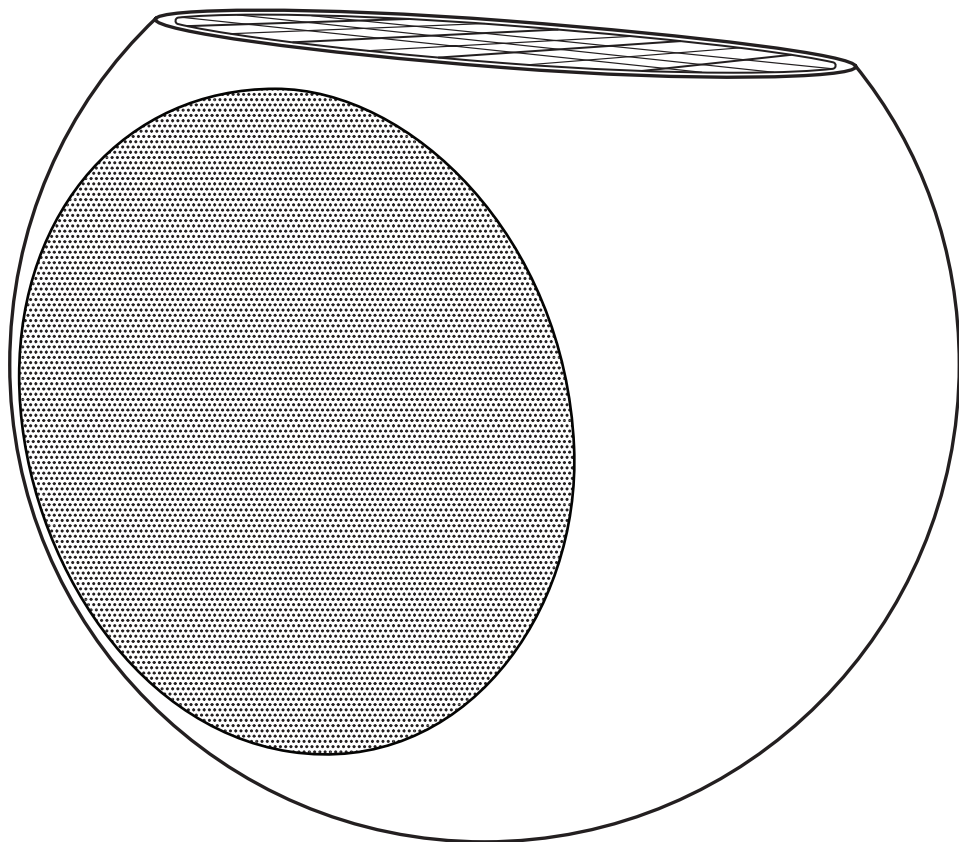

SETUP VIDEO

 


VICTROLA ZEN™

INSTRUCTION MANUAL
VOS-1000

 
IN THE BOX

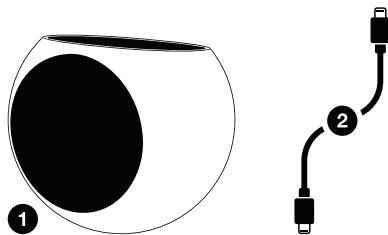


1. Victrola Zen Speaker
2. USB-C Charging Cable
3. Instruction Manual(s)



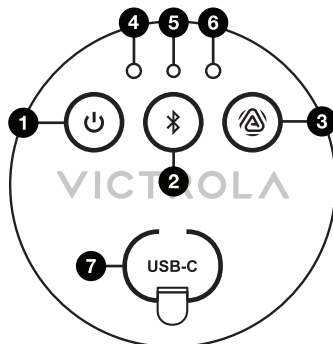

OVERVIEW


1. Power Button
2. Bluetooth Button
3. Auracast Button
4. Power & Battery LED
5. Bluetooth LED
6. Auracast LED
7. USB-C Charging Port




 POWER BUTTON
 PRESS & HOLD POWER ON / OFF
SINGLE PRESS PLAY / PAUSE AUDIO
 PRESS & HOLD FACTORY RESET

 POWER & BATTERY LED	
OFF	NOT CHARGING POWER OFF
FLASHING WHITE	CHARGING POWER ON / OFF BATTERY >10%
SOLID WHITE	NOT CHARGING POWER ON BATTERY >10%
FLASHING RED	CHARGING POWER ON BATTERY <10%
SOLID RED	NOT CHARGING POWER ON BATTERY <10%

 BLUETOOTH® BUTTON
 PRESS & HOLD DISCONNECT DEVICE
SINGLE PRESS ENTER PAIRING

 BLUETOOTH LED	
OFF	BLUETOOTH OFF
FLASHING BLUE	BLUETOOTH PAIRING
SOLID BLUE	BLUETOOTH PAIRED

 AURACAST™ BUTTON
SINGLE PRESS ENABLE / DISABLE AURACAST MODE

 AURACAST LED	
OFF	AURACAST OFF
FLASHING GREEN	AURACAST PAIRING
SOLID GREEN	AURACAST PAIRED

1 CONNECT TO BLUETOOTH

1. Press **POWER BUTTON** to turn speaker on. The **BLUETOOTH LED** will flash blue for Bluetooth pairing mode. If the **BLUETOOTH LED** is not flashing blue, press the **BLUETOOTH BUTTON**.
2. Select **Victrola Zen** on your device's Bluetooth menu.
3. Once paired, the **BLUETOOTH LED** will turn solid blue.

NOTES:

- *Volume is controlled by Bluetooth device.*
- *Single press **POWER BUTTON** during playback to play/pause music.*

2 CONNECT ADDITIONAL SPEAKERS

AURACAST MULTI-SPEAKER MODE

1. Ensure you have successfully paired one speaker to your Bluetooth device, this will become the Host speaker. Additional speakers will become Clients.
2. **Host speaker setup:** Single press the **AURACAST BUTTON** on the Host speaker. The **AURACAST LED** will turn solid green indicating the Host is broadcasting a signal. The **BLUETOOTH LED** will remain solid blue.
3. **Client speaker setup:** Power on an additional speaker and single press the **AURACAST BUTTON**. The **AURACAST LED** will begin flashing green indicating it is searching for a Host broadcast.
4. Once the Client speaker connects to a Host the **AURACAST LED** will turn solid green.
5. Repeat steps 3-4 to connect additional Client speakers to the Host speaker broadcast.

CONNECT TO OTHER VICTROLA AURACAST BROADCAST:

- *To connect to an Auracast broadcast from a different Victrola Auracast-enabled product, follow directions from other product to enable Auracast broadcast then follow steps 3-4 above to auto-connect.*
- *Victrola Zen speakers can only connect to Auracast broadcasts from other Victrola Auracast-enabled products. Visit victrola.com/auracast to learn more.*

POWERING OFF (PRESS AND HOLD POWER BUTTON FOR 1 SECOND):

- *To power on and off multiple speakers at the same time, see wireless wake mode (Section 3).*

FUTURE USE:

- *When powering back on, speaker will return to last used mode. If speakers were previously connected in Auracast multi-speaker mode, it is best to power on the Host speaker first to ensure clients will see the Host broadcast when powered back on.*

CHARGING:

- **Solar:** *For optimal performance, ensure speaker is under direct sunlight*
- **USB-C:** *Connect USB-C power to back of speaker. (USB-C to USB-C cable included)*
- **Warning:** *Ensure USB-C flap is closed when not charging to maintain IP65 rating*

3

WIRELESS WAKE MODE

POWER ON/OFF MULTIPLE SPEAKERS AT THE SAME TIME

1. To enable, while the speaker is ON, quick press POWER BUTTON five (5) times. The POWER LED will flash white 3 times.
2. Repeat step 1 for any additional speakers.
3. Once enabled on multiple speakers, powering on any Zen speaker will send a signal to power on any nearby speakers within range.
4. To disable, while the speaker is ON, quick press POWER BUTTON five (5) times. The POWER LED will flash red 3 times.

NOTES:

- *Battery will drain quicker when mode is enabled, recommended only when device is kept in an area with sunlight.*
- *Mode is automatically disabled if battery drops below 10%*

FACTORY RESET

While the speaker is ON, press and hold POWER BUTTON for 10 seconds to factory reset device and forget previously paired devices. All LEDs will turn on together and then off together, and the speaker will power back on. Factory reset disables Wireless Wake mode.

TROUBLESHOOTING

BLUETOOTH

- The wireless range for an optimal Bluetooth connection is within 50ft (15m).
- If you are unable to pair to the speaker, ensure the speaker is in Bluetooth pairing mode (Bluetooth LED flashing blue) and not Auracast pairing mode (Auracast LED flashing green).

AURACAST MULTI-SPEAKER MODE

- The wireless range for an optimal Auracast connection will vary based on environment but can reach over 215ft (65m) in ideal conditions. Move Client speaker closer to Host if Auracast does not pair within 5-10 seconds.
- If a Host speaker becomes disconnected from Bluetooth it will begin searching for a Bluetooth device to restore the broadcast and connected Client speakers will remain connected to the Host.
- If a speaker is not connected to a Bluetooth device and then enters Auracast mode, speaker will automatically become a Client speaker and will connect to/receive audio from a nearby Auracast broadcast only.
- Only one speaker should be connected to a Bluetooth device in Auracast mode (the Host), the other speakers (Clients) will connect to the Host broadcast.
- A Client speaker in Auracast mode can only play music from an Auracast broadcast. To exit, press the Auracast or Bluetooth button to connect to a Bluetooth device.

CHARGING

- Fully charging the battery on solar power alone will vary depending on location and weather conditions. Solar panel charges best in direct sunlight but can charge in non-direct sunlight, such as cloudy weather. Confirm speaker is charging when the Power LED is flashing white.
- Battery life will vary depending on operation. Loud music with heavy bass will drain the battery faster than spoken word audio.

CAUTION

The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in a fire. Do not dispose device in standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal. Danger of explosion if battery is incorrectly replaced. Replace only with the same or an equivalent type.

SPECIFICATIONS

DIMENSIONS	12.76" W x 12.71" D x 10.63" H
.	324mm W x 319mm D x 270mm H
WEIGHT	8.71 lbs / 3.95 kg
BATTERY	7.2V / 2,450 mAh lithium battery
BATTERY LIFE	Up to 30 hours (50% volume)
	Up to 10 Hours (100% volume)
	<i>*Depends on sunlight exposure and audio content played.</i>
USB-C INPUT	5.0V 2.0A
USB-C CHARGE TIME	4-5Hours
SOLAR PANEL INPUT	4.5W
OPERATING TEMPERATURE RANGE	32°–113°F / 0°–45°C
WATER/DUST IP RATING	IP65
BLUETOOTH VERSION	5.4
BLUETOOTH PROFILE	A2DP, AVRCP, HFP

INCLUDED:

Victrola Zen Speaker, USB-C Charging Cable, Instruction Manual(s)

V01-072225

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The Auracast™ word mark and logos are trademarks owned by the Bluetooth SIG. Any use of such marks by Innovative Technology Electronics, LLC is under license. Other trademarks and trade names are those of their respective owners.

Made in China.

This product has been manufactured and sold under the responsibility of Innovative Technology Electronics, LLC. Victrola is a trademark used under license by Innovative Technology Electronics, LLC.

SAFETY WARNINGS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near large bodies of water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as naked flames, lighted candles, radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel, to reduce the risk of electric shock. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

CAUTION: The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in a fire. Do not dispose device in standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal.

Do not expose the battery to an extremely high temperature or an extremely low air pressure environment. These can result in an explosion or the leakage of flammable liquid or gas.

FCC & IC WARNINGS

FCC STATEMENTS

Caution: the user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules and Innovation, Science and Economic Development Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC & IC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

DÉCLARATION D'IC SUR L'EXPOSITION AUX RADIATIONS:

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20cm entre l'antenne et votre corps. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

WEEE AND CE STATEMENTS

Declaration of Conformity

This device complies with the essential requirements and other relevant provisions of below:



1. RED directive: 2014/53/EU
2. Low voltage directive: 2014/35/EU
3. ROHS directive: 2011/65/EU

You can download the complete EU conformity declaration from www.victrola.com/eudoc

The New Recast WEEE Directive (DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE)).



1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service.



Intended Use

This audio device is only intended for playing circuit boards. Any further use is considered improper. It is only suitable for use in dry interiors. The device is not intended for commercial use, but exclusively for use in private households. Any other use or modification of the device is not intended and is strictly prohibited. No liability can be assumed for damage caused by improper use or incorrect operation.

This device can be used by children from the age of 8 and by persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge if they are supervised or have been instructed in the safe use of the device and understand the resulting dangers. Children are not allowed to play with the device. Cleaning and user maintenance must not be carried out by children unless they are older than 8 years and supervised. Also keep the packaging film away from children. There is a risk of suffocation.

Children younger than 8 years are to be kept away from the device and the connection cable.

LIMITED WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics, LLC.

United States

For detailed information about our warranty policy and limitations visit victrola.com/pages/warranty

Canada and US Territories

The Warranty on this product shall comply with applicable law when sold to a consumer in Canada or a US Territory. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

If assistance from the dealer from which it was purchased is not possible, you may contact our customer service for warranty assistance at victrola.com/contact.

Outside the U.S., Canada, and US Territories

The Warranty on this product shall comply with applicable law when sold to a consumer outside of the United States, Canada, and US Territories. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

CUSTOMER SUPPORT

VICTROLA.COM/PAGES/CUSTOMER-CARE

support@victrola.com
(877)483-2497

EU Importer:

Innovative Technology Electronics, LLC
Ionweg 3, 4706 RB Roosendaal, NL
NL827772956

Italy

NITAL S.p.A

Via vittime di piazza fontana 54
10024 Moncalieri (Torino), Italy

EU authorized representative:

REP Europe GmbH
Prinzenallee 7, 4th floor 40549
Düsseldorf, Nordrhein-Westfalen, Germany

www.victrola.com/importer

