

# SETTING UP THE SYSTEM

1. Download and install the eufy app, then sign up for an account.




2. Press and hold the power button for 3 seconds to power on the Smart Display.

3. Connect the Smart Display to a Wi-Fi network.


4. Sign in with your eufy account.

5. Follow the on-screen instructions to complete the setup.


## OVERVIEW

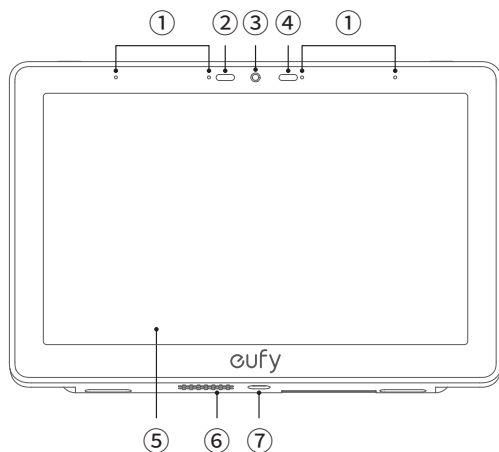

- ① Microphones
- ② Proximity Sensor
- ③ Low Battery Indicator Light
- ④ Light Sensor
- ⑤ Touchscreen
- ⑥ Speaker
- ⑦ Charging Pins

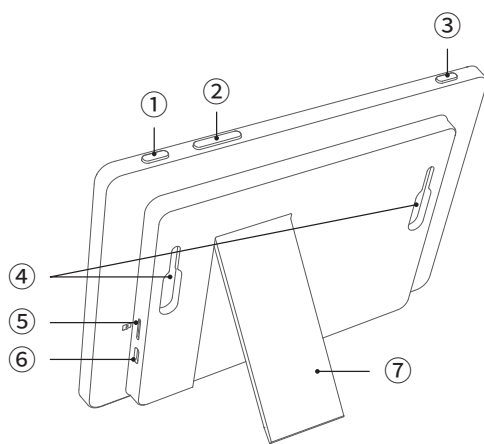


- ① Power Button
- ② Volume Up / Down Button
- ③ Alarm Button
- ④ Mount Slots
- ⑤ MicroSD Card Slot
- ⑥ Charging Port
- ⑦ Folding Bracket

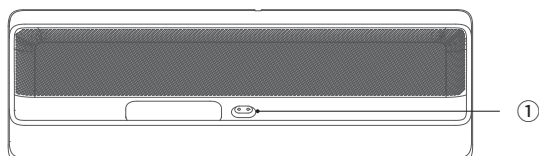

### Charging Dock


- ① Charging Pins
- ② Power Port

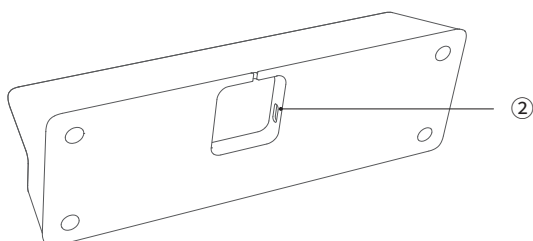

# WALL MOUNT

## Adjust the Wall Mount Position with the Bubble Level


Adjust the position of the wall mount with the bubble level before you stick it to the wall or drill holes on the wall.

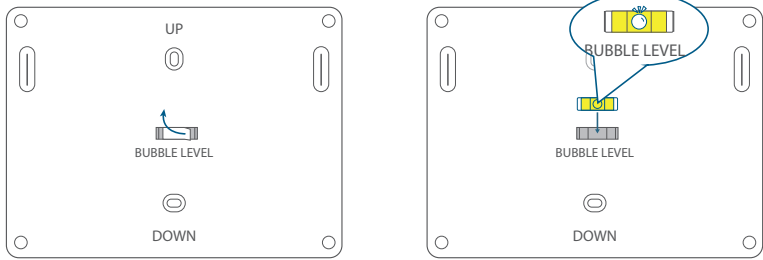

①

②

## Option 1: 3M Stickers

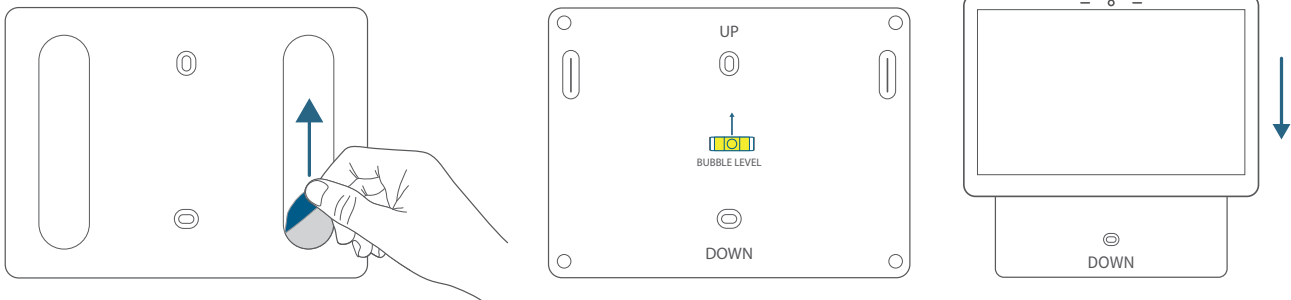


①

②

③

## Option 2: Anchors and Screws

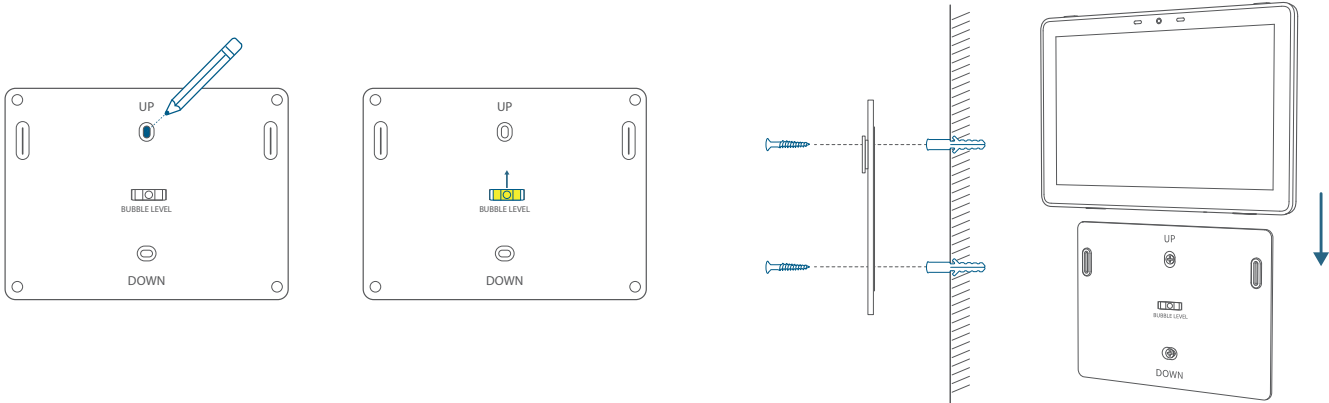

①


②

③


Fix the Cable Holder

Use the cable holder if necessary. Fix the cable holder with the 3M sticker or an expansion screw.

1

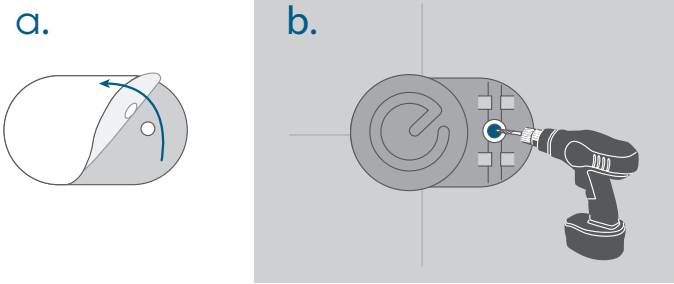

2

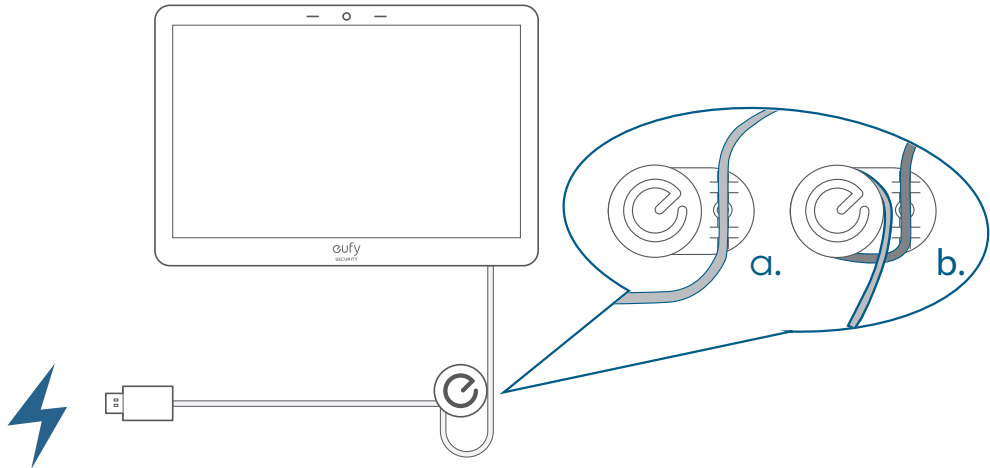

# SPECIFICATIONS

|               |                       |                                                                    |
|---------------|-----------------------|--------------------------------------------------------------------|
| Items         | Parameters            | eufy Smart Display E10                                             |
| Mechanical    | Dimensions            | 5.47"H x 7.91"W x 0.65"D (139mm x 201mm x 16.5mm)                  |
| LCD Display   | Size                  | 8 inch LCD                                                         |
|               | Resolution            | 1280(RGB) x 800 pixels                                             |
|               | Brightness            | 250 cd/m <sup>2</sup>                                              |
|               | RGB Color             | 24bit, 16.7 Million Colors                                         |
| Touchscreen   | Type                  | Capacitive glass multi-touch                                       |
| Network       | WiFi                  | Support 2.4GHz/5GHz Wi-Fi6                                         |
| Flash Memory  | Internal Storage      | 8GB EMMC Flash                                                     |
|               | External storage      | Supports up to 512GB microSD card                                  |
| LED Indicator | Low Battery Indicator | Red Ring LED                                                       |
| Speaker/Siren | 2.5W x 1              | 65-decibel siren at a distance of 3 meters (10 feet)               |
| Microphone    | MEMS x 4              | 4 MEMS (Micro-Electro-Mechanical System)                           |
| Battery       | Model T87A0           | Rechargeable Lithium Ion available 4900mAh Rated for over 24 hours |
|               | Pass-Through Charging | Supports long-term charging without damaging battery life          |
| Power Supply  | DC                    | 5V DC 2000mA CC, Input 100-240VAC 50/60Hz Adpater                  |