

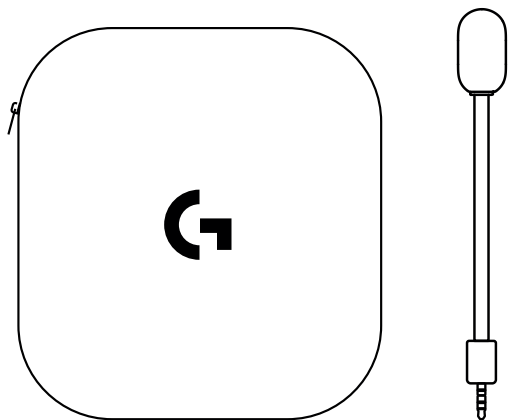
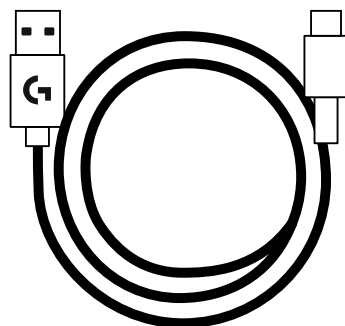
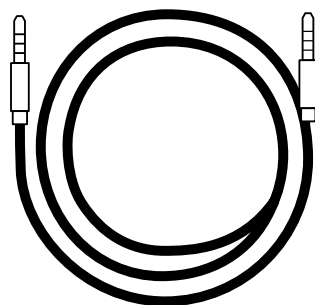
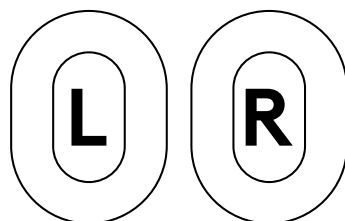


PRO X3 LIGHTSPEED

SETUP GUIDE | GUIDE D'INSTALLATION

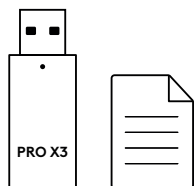



logitech

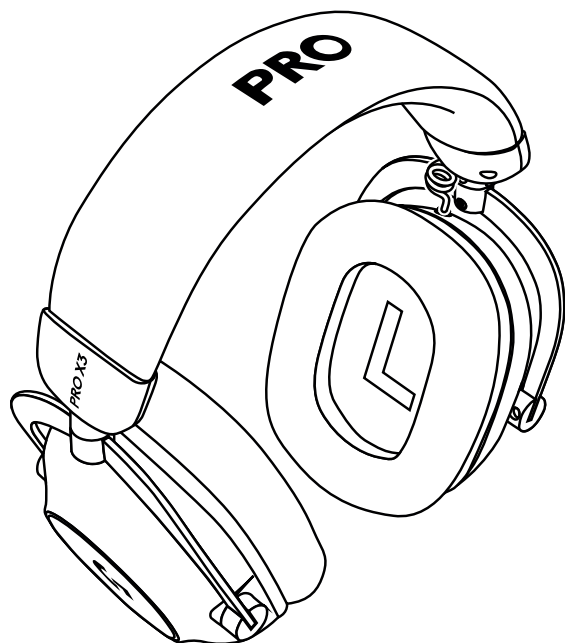

ENGLISH	3
FRANÇAIS.	17
ESPAÑOL	31
PORTUGUÊS	45

BUTTON CONTROLS AND LED INDICATORS

1. Power Switch with integrated LED Status Indicator
2. Volume Roller
3. Microphone mute toggle
 - Microphone is active when red is not visible
 - Microphone is muted when red is visible
4. USB-C Charging Port
5. *Bluetooth*[®]/LIGHTSPEED button
6. AUX port
7. Microphone port

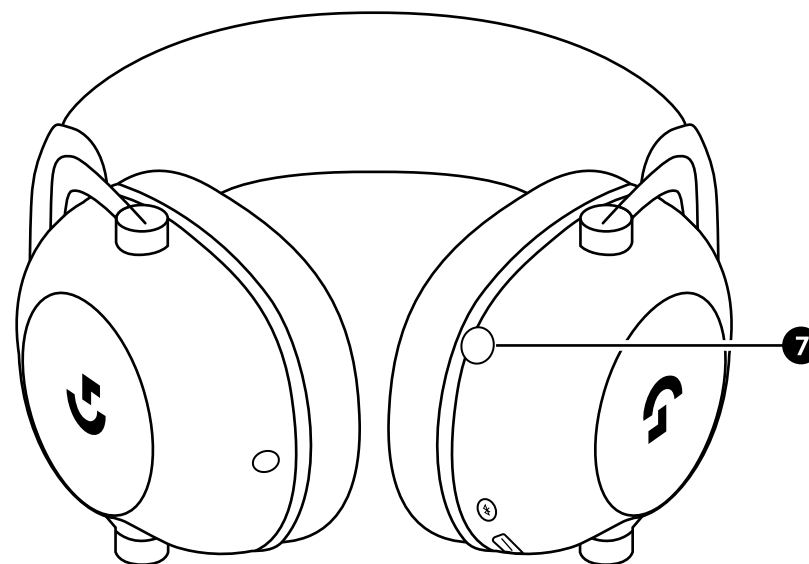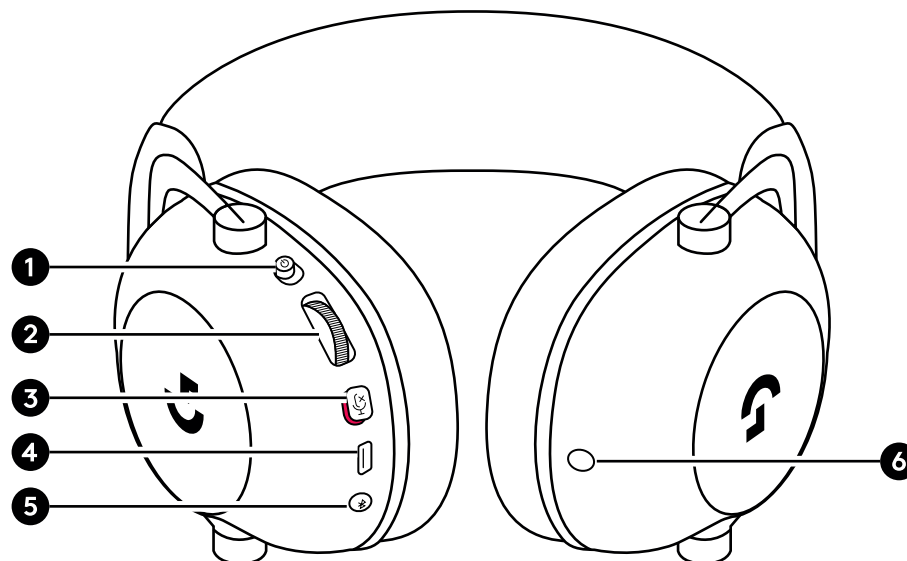


LED Status Indicator:	
Status	Case
○ 5 sec.	LIGHTSPEED
● 5 sec.	Bluetooth [®]
	Blinking - searching for connection
	DFU - GREEN and RED alternating until update is complete

Battery Status:	
Status	Case
● 5 sec.	GREEN 5 sec - battery $\geq$ 30%
● 5 sec.	RED 5 sec - battery (16-30%)
	Battery $\geq$ 15%
	Battery charging


LIGHTSPEED

Connect to your PC, Mac, Switch, or PlayStation 5 or 4 with LIGHTSPEED Wireless Technology.


1. Insert the mic boom completely into headset.
 - For optimal voice pickup, place foam ball approximately two fingers' width from the corner of your mouth.

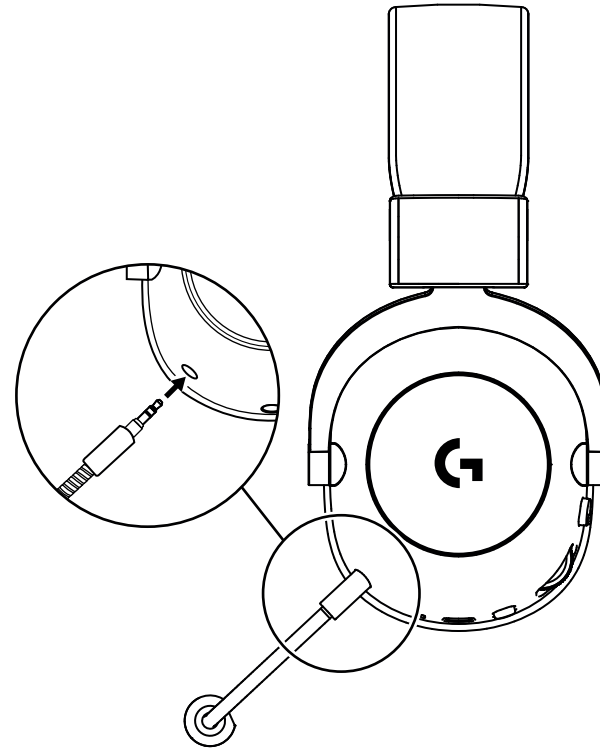


2. Insert LIGHTSPEED receiver into the USB port of your device.

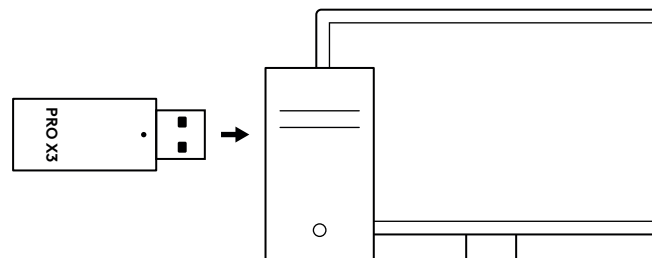

3. Switch headset to the "ON" position.

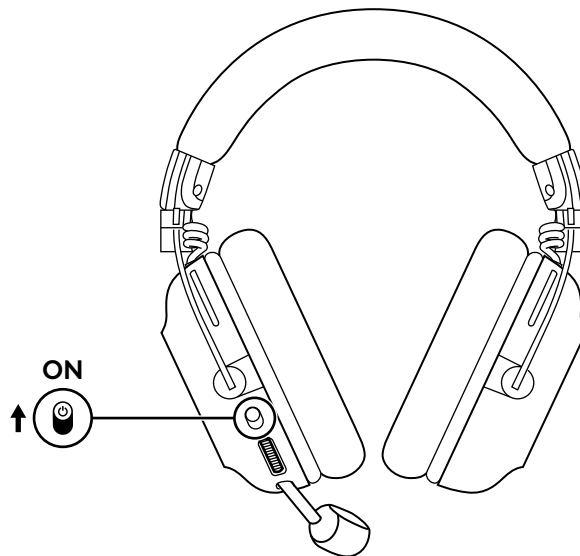


4. The LED displays battery level indication and solid white once connected to LIGHTSPEED for 5 seconds.

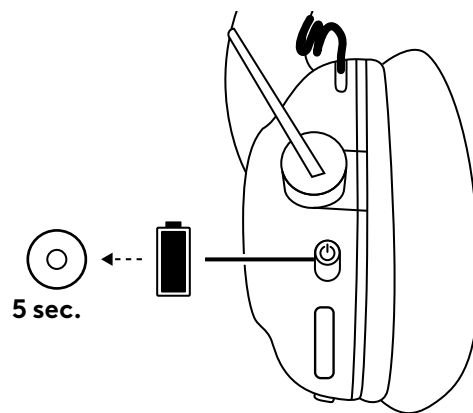

G HUB & DTS

To make adjustments to audio EQ, sidetone, and more, download G HUB on compatible devices:

1. For PC/Mac visit logitechG.com/ghub

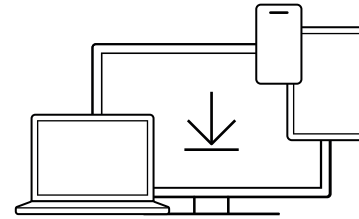

G HUB
logitechG.com/ghub

2. For mobile devices visit logitechG.com/appdownload

Logitech G
Mobile




logitechG.com/appdownload

BLUETOOTH®

To pair to a new *Bluetooth*® compatible device.

1. Switch the headset to the "ON" position.
2. Quickly press the *Bluetooth*® button for 1 second to enter *Bluetooth*® mode.
3. To enter pairing mode, hold the *Bluetooth*® button for 3 seconds (the LED will begin to blink blue).
4. On your preferred device, go to *Bluetooth*® settings and select PRO X3 to pair the headset.
5. The LED displays solid blue once connected to *Bluetooth*® for 5 seconds.

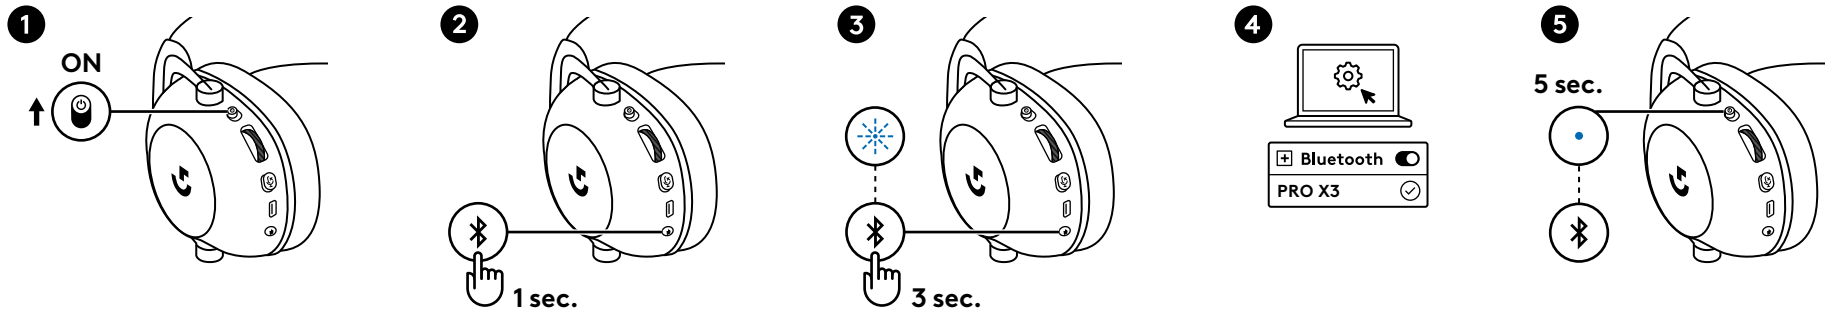


SWITCH BETWEEN LIGHTSPEED AND *BLUETOOTH*®

The headset can either be in LIGHTSPEED mode or *Bluetooth*® mode.

To switch:


Quickly Press the *Bluetooth*®/LIGHTSPEED button for 1 second to switch between LIGHTSPEED and *Bluetooth*®.

- The LED displays white for LIGHTSPEED
- The LED displays blue for *Bluetooth*®

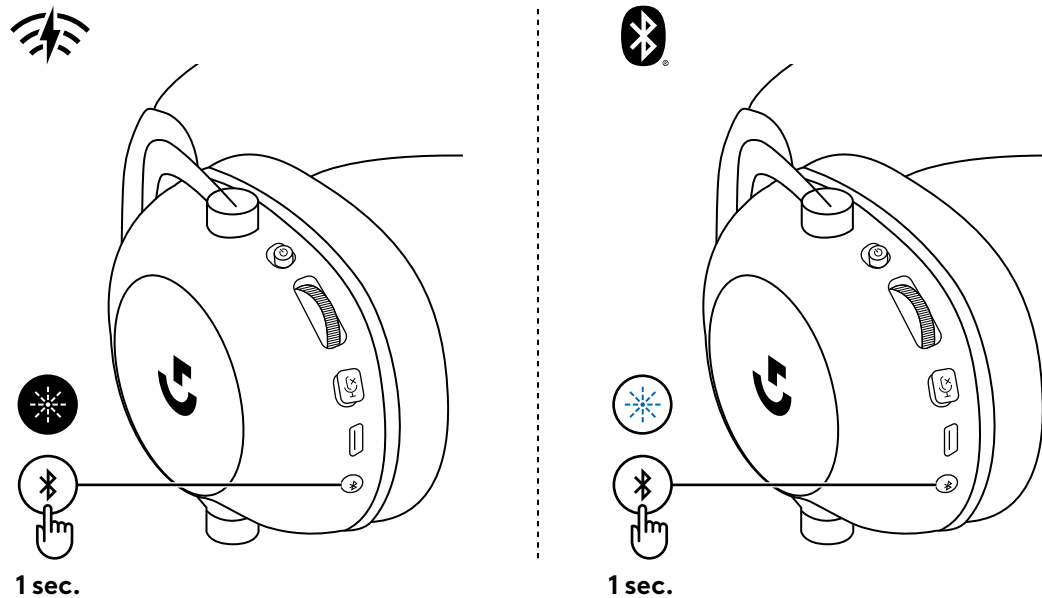

USING THE HEADSET IN WIRED MODE


1. Power off headset (Headset must be powered off to operate in wired mode).

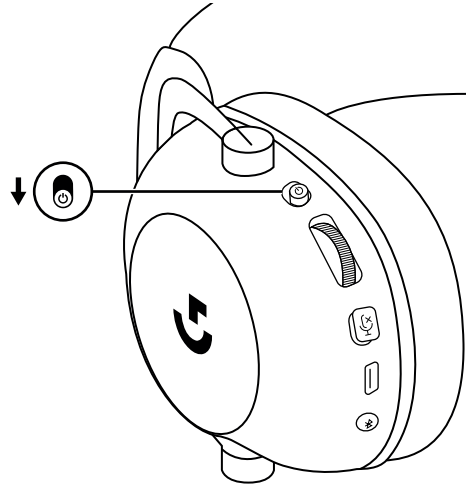


2. Plug the included 3.5 mm cable into the 3.5 mm jack on the headset

Note:

Do not plug 3.5 mm cable into the headset microphone jack.

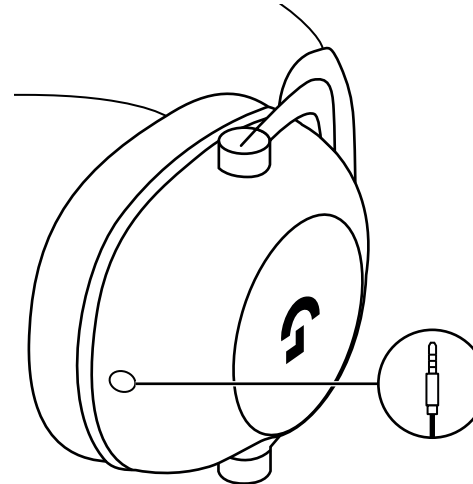


3. Plug the other end of the included 3.5mm cable into the 3.5mm jack on the audio source device.

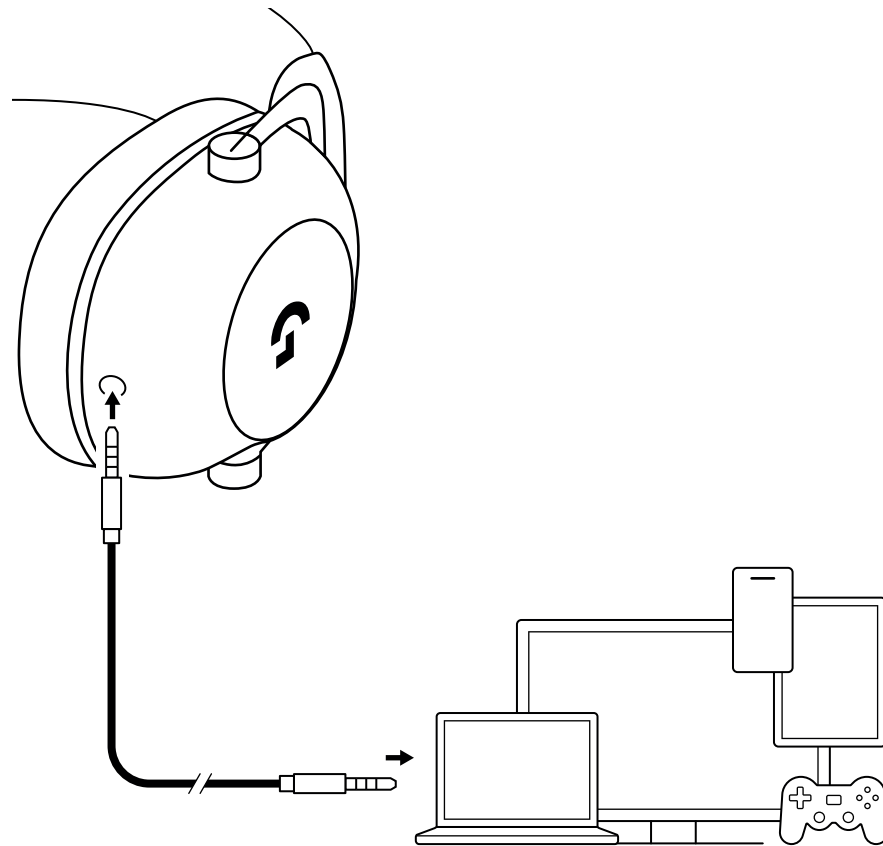


HOW TO MUX IN AN AUX SOURCE

1. Place headset into LIGHTSPEED mode
(Headset must be in LIGHTSPEED mode to MUX).

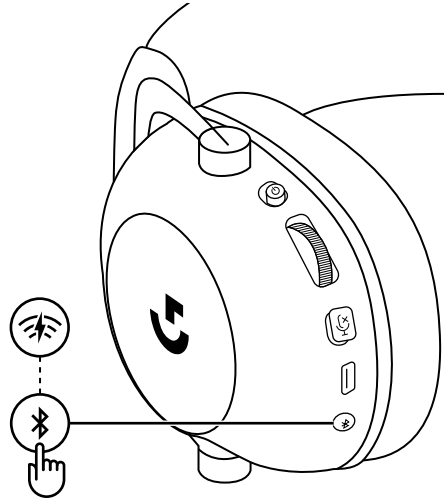


2. Plug one end of the included 3.5mm cable into the 3.5mm port of the LIGHTSPEED wireless adapter.

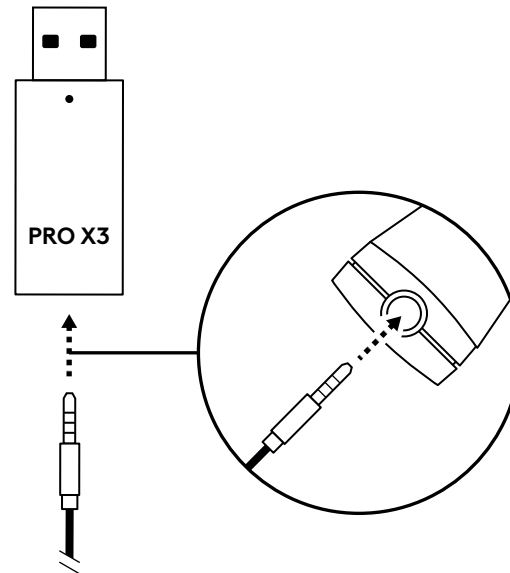

3. Plug the other end of the included 3.5 mm cable into the 3.5 mm port of the audio source you'd like to MUX into the wireless signal.


Note:

The MUXed source will stay at a constant volume, whereas the wireless signal can be volume adjusted with the volume wheel.

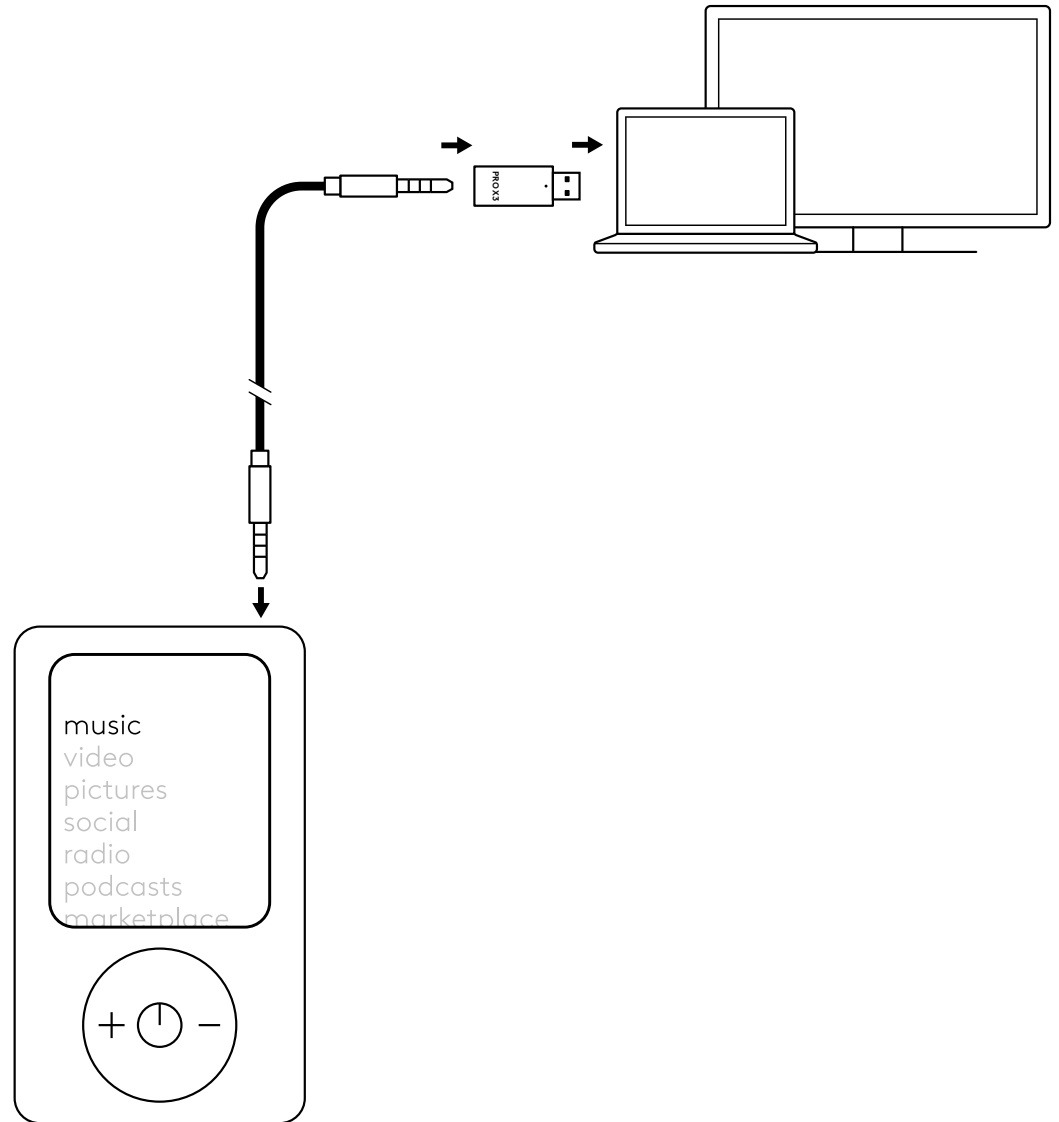


FACTORY RESET

To reset the firmware to Out-of-Box (OOB) settings, users must perform an "Extra long press 10 seconds on the *Bluetooth* button." Users will see 2 white blinks and then the headset will reboot.

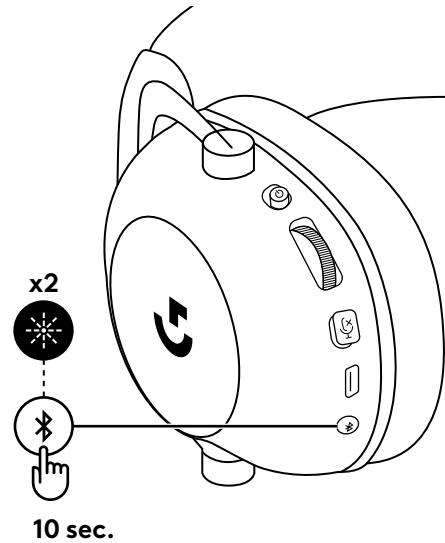


PAIR NEW LIGHTSPEED RECEIVER


1. Turn headset ON in LIGHTSPEED mode.

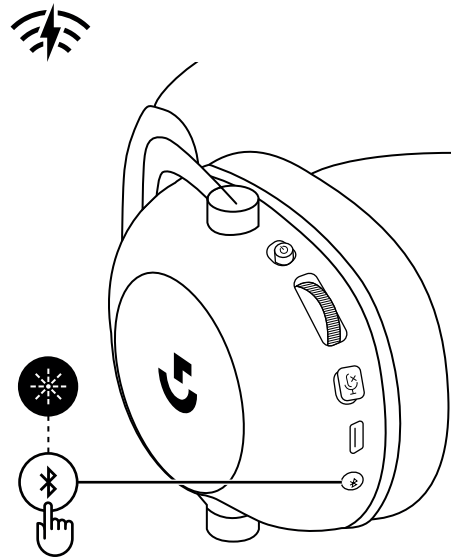

 
2. Plug in LIGHTSPEED receiver to host device
(if already plugged in, un-plug and re-plug in).



1. Remove left earpad cushion.
2. Use a paperclip to long press the headset pairing button.

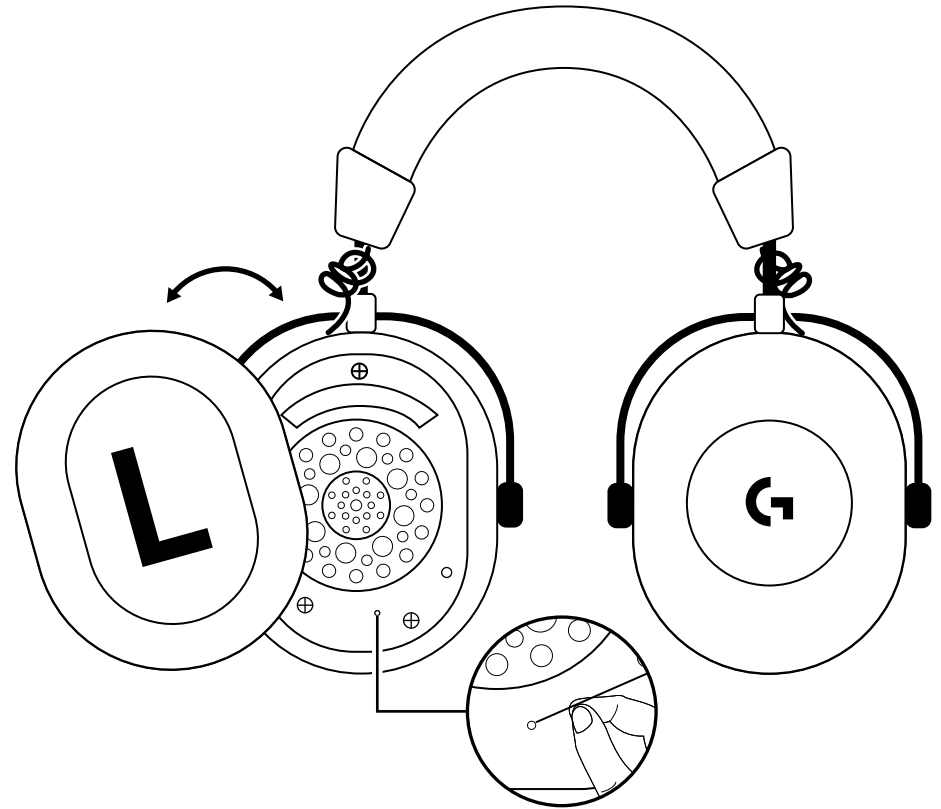

3. Use a paperclip to press the LIGHTSPEED receiver pairing button.

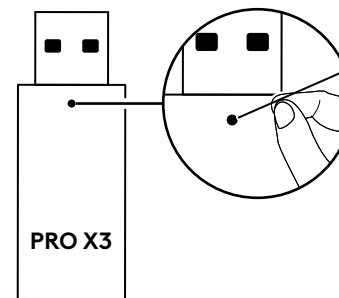

SPARE PARTS AND BATTERY REMOVAL

SPARE PARTS

- Velour Earpads
- Leatherette Earpads
- Charging Cable
- LIGHTSPEED Receiver
- 3.5 mm AUX Cable
- Carrying Pouch

RECYCLING

We encourage you to resell or donate working products. Otherwise, batteries, electronic and electrical equipment should not be disposed of with household waste. Wherever possible, they should be segregated and brought to an appropriate collection point to enable recycling and avoid potential impacts on the environment and human health. For more information, contact your local authorities or place of purchase, or visit www.logitech.com/recycling

QUESTIONS?

logitechG.com/support/PROX3

BATTERY REMOVAL

