 


G316 X

8k Wired Mechanical Gaming Keyboard - 75
Clavier gaming mécanique filaire 8k - 75

SETUP GUIDE | GUIDE D'INSTALLATION

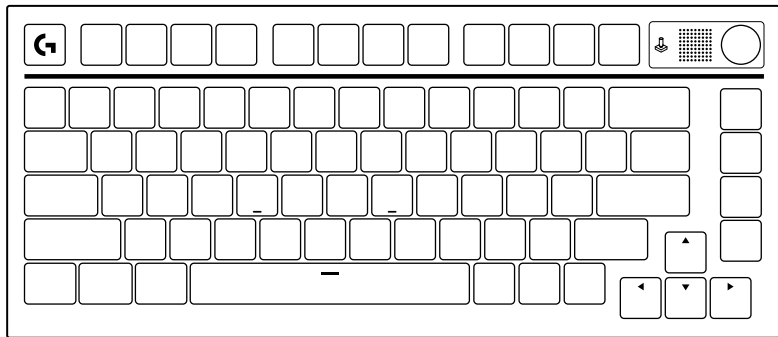



ENGLISH 3


FRANÇAIS. 9

ESPAÑOL15

PORTUGUÊS21


KEYBOARD BRIEF INTRODUCTION

 - 1 Dot-matrix LED display
- 2 Media knob
- 3 Game Mode switch
- 4 *USB-C* port
- 5 Swappable feet
- 6 Per-key RGB
 - Each key has RGB backlighting
- 7 Light bar

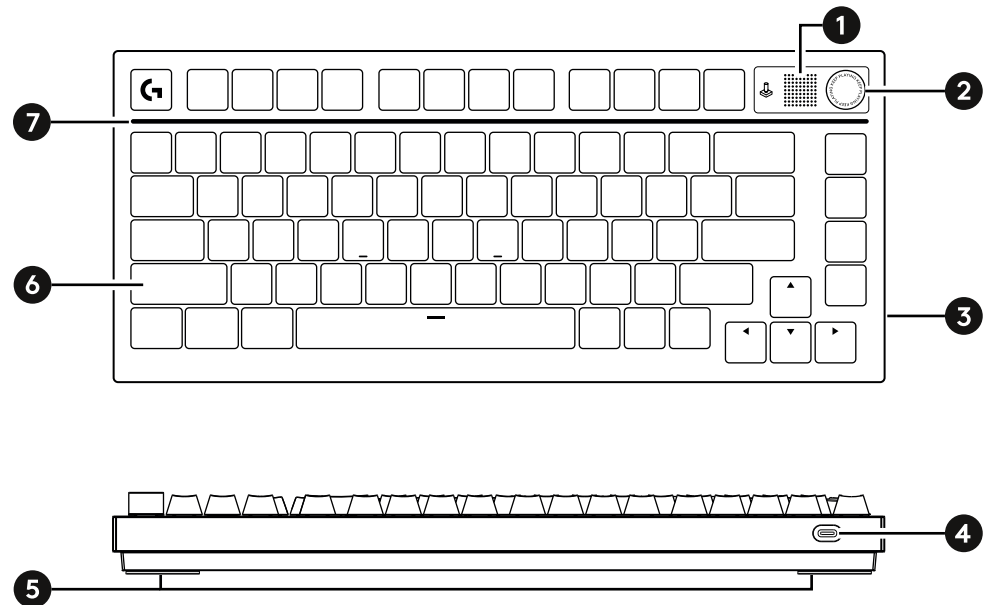


SETTING UP

 USB-C port connected with PC and Keyboard.

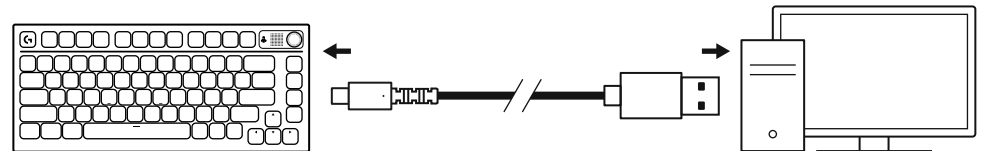

G HUB DOWNLOAD

Download and install G HUB software to your PC/Mac to personalize RGB lighting, create macros, and customize your keyboard with KEYCONTROL. Learn more at logitechG.com/ghub

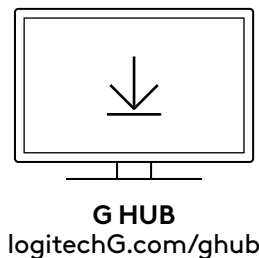


INTRODUCTION OF MEDIA KNOB AND DISPLAY

Media Knob Instructions:

The media knob supports four adjustment modes: volume, keyboard brightness, report rate, and media control.

Mode Switching: Press and hold the knob for 1.5 seconds to start mode selection. Rotate to select a desired mode, and then press to confirm the selection.

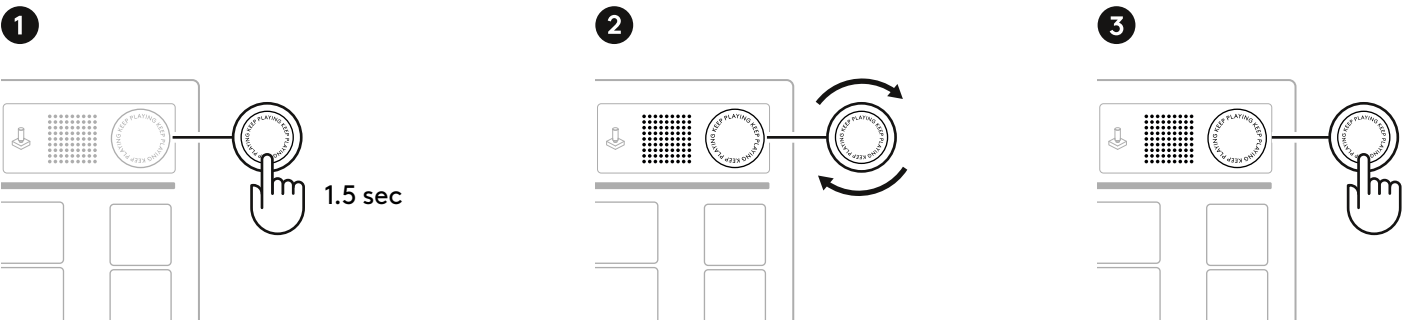

Function Adjustment:

Volume Mode: Rotate to adjust volume; press to mute or unmute.			
Volume mode	Volume up	Volume down	Volume mute or unmute

Brightness Mode:

Rotate to adjust brightness levels; press to confirm.

					
Brightness mode	level 0 off	level 1 25%	level 2 50%	level 3 75%	level 4 100%

Report Rate Mode:

Rotate to adjust report rate levels; press to confirm.


				
Report rate mode	Report rate 1 kHz	Report rate 2 kHz	Report rate 4 kHz	Report rate 8 kHz

Music Mode:


Rotate to switch tracks; press to play/pause.

			
Music mode	Next track	Previous track	Play or pause

Num Lock:

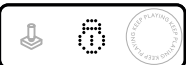
	
On	Off

Caps Lock:

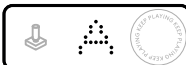	
On	Off


GAME MODE SWITCH

With Game Mode activated, it disables the *Windows* key by default to prevent accidental presses during gaming. You can manage which keys are disabled for different games within the Logitech G HUB software.

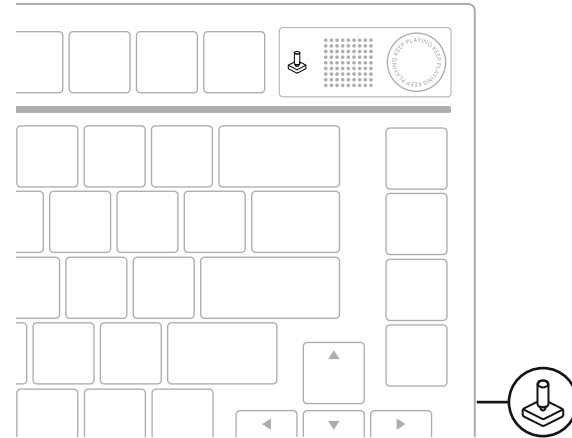


SWAPPABLE FEET

The feet can be installed in either orientation to achieve tilting angles of 4° or 8° respectively.

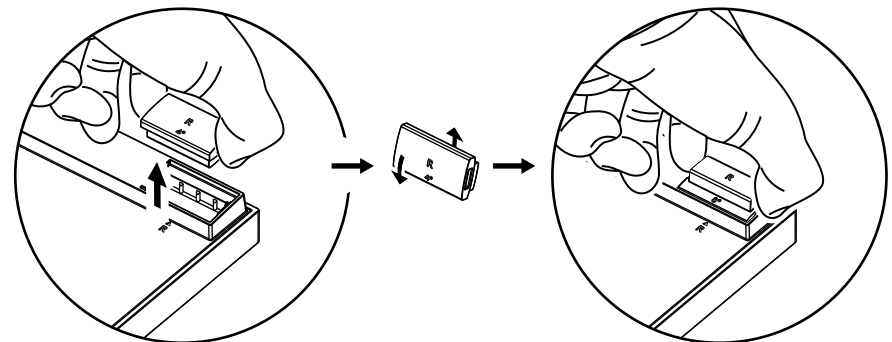

7 FN-BASED SHORTCUTS

While holding the Fn key, press F1 or any of the F7-F12 keys to perform the following functions:

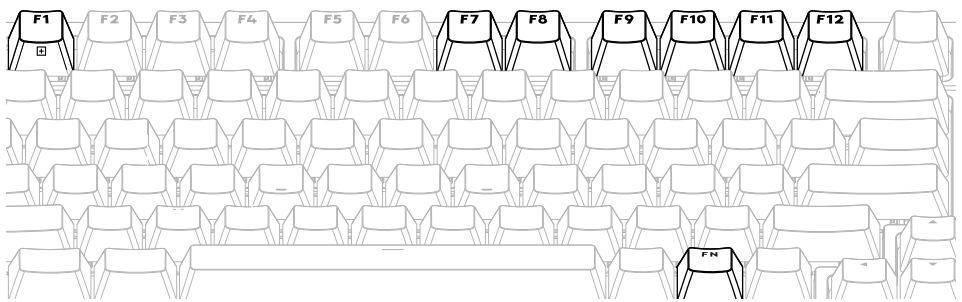

FN + F1	Customize Hotkeys for all Keys
FN + F7	Select Profile 1
FN + F8	Select Profile 2
FN + F9	Page Up
FN + F10	Page Down
FN + F11	Insert
FN + F12	Screenshot

DISCLAIMER

The keycaps and switches of this keyboard are hot-swappable.

We recommend using a keycap or switch puller (not included). Please ensure installation in the correct direction to avoid damage.

To achieve an 8 kHz reporting rate, it is recommended to use the data cable included in the product packaging to directly connect the keyboard to your computer. If a USB adapter is required, please ensure it supports USB 2.0 High-Speed (480 Mbps) or USB 3.0 and above (5 Gbps or higher) transfer rates. Failure to do so may result in insufficient support for 8 kHz data transmission, which could affect the user experience.