

Kirby V530[®] Signature Series[®]

Premium Upright Vacuum



PERFORMANCE

Exceptional
cleaning efficiency



QUALITY

Superior craftsmanship
utilizing premium materials




RELIABILITY

Built to last

Owner's Manual

KIRBY[®]

For over 110 years, Kirby® has defined excellence in floor care, designing home cleaning systems renowned for deep-cleaning performance, exceptional durability, and unmatched quality. The NEW Kirby Signature Series® builds on that legacy, delivering the powerful care trusted

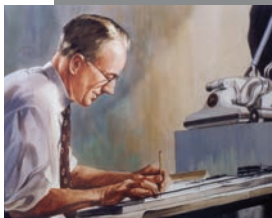

by millions of families, now reimagined with refined features and modern styling engineered to exceed the expectations of today's customer.

Thank You.

Thank you for your purchase, and welcome to the Kirby® Family.

Since 1914, Kirby has helped families care for the homes and people they love through exceptional cleaning performance. The Kirby Signature Series® is built on that legacy, delivering the powerful performance and trusted reliability that have defined Kirby for generations.

Your Kirby Signature Series included a Quick Start Guide, which is a great resource for initial set up and functionality. The Owner's Manual expands on these key points and includes maintenance recommendations, troubleshooting tips, and more. If you have additional questions, our product specialists are standing by to assist at **216-529-6177** or **consumer@kirby.com**. For How-To Videos, Frequently Asked Questions, and more, visit **kirby.com**.

To register your Kirby Signature Series and activate your limited warranty, visit **kirby.com/pages/register-signature-series**. Consider opting into marketing emails for product news, cleaning tips, and valuable coupons for Genuine Kirby aftermarket products and accessories.

IMPORTANT SAFETY INSTRUCTIONS

Overview of Safety Guidelines and Your Responsibilities

- Your safety and the safety of others depend on you thoroughly reading and understanding this Owner's Manual.
- Most vacuum-related incidents are caused by failure to observe basic safety rules or precautions. You must be alert to potential hazards.
- The Kirby Company cannot anticipate every possible circumstance that might involve a potential hazard. Therefore, the warnings in the Owner's Manual may not be all-inclusive. If a tool, procedure, work method, or operating technique that is not specifically recommended by The Kirby Company is used, you must ensure that the product will not be damaged or be made unsafe by the operation, maintenance, or repair procedures that you choose.
- This vacuum is intended for household use only.

WARNING – To reduce the risk of fire, electric shock, or injury:

- ALWAYS unplug before cleaning or servicing.
- NEVER leave appliance unattended when plugged in.
- NEVER use outdoors or on wet surfaces.
- NEVER use with damaged power cord or plug. If appliance is not working as it should; has been dropped, damaged, or left outdoors; or has been dropped into water, return it to a Kirby® Authorized Service Center for qualified inspection.
- NEVER run appliance over cord, pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- KEEP cord away from heated surfaces.
- NEVER unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- NEVER handle plug or appliance with wet hands.
- Use only as described in the Owner's Manual. Use only Kirby-recommended attachments.
- DO NOT put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, or anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- NEVER use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- DO NOT allow to be used as a toy. Close attention is necessary when used by or near children.
- DO NOT pick up anything with your Kirby vacuum that is burning or smoking, such as cigarettes, matches, or hot ashes.
- DO NOT use without the dust bag and/or filters correctly in place.
- Avoid picking up sharp objects.
- Always turn off this appliance before connecting or disconnecting accessories to the hose.
- Risk of injury. Hose contains electrical wires, do not cut. Brush roll may start unexpectedly. Unplug the unit before cleaning or servicing.
- This appliance should only be used with the power cord provided with the appliance.

Polarization

This vacuum has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.



If you have any product questions, issues, or difficulty using the Kirby, do not return the unit to your retailer or call the retailer for questions. Instead, contact The Kirby Company as our product specialists are standing by to assist; visit kirby.com to chat with a specialist or call **216-529-6177**.

SAVE THESE INSTRUCTIONS

What's Included with Your Kirby V530® and Key Touchpoints

- | | |
|------------------------------------|--|
| 1 Multi-Surface Power Nozzle | 16 Stretch Hose |
| 2 LumiGuide LED | 17 Power Cord |
| 3 Anti-Skid Bumper | Included Attachments |
| 4 Power Nozzle Release Pedal | 18 Upholstery Tool |
| 5 Power Nozzle Height Adjust Pedal | 19 Crevice Tool |
| 6 Height Adjust Indicator | 20 Duster Brush |
| 7 Filter Access Door | 21 Accessory Bag |
| 8 Filter Access Button | 22 Turbo Air Brush (optional) |
| 9 Filter Bag Access Door | 23 PureAir® HEPA Filter Bag
(installed, 3 extra included) |
| 10 Filter Bag Access Button | 24 Pre-motor Filter/Holder |
| 11 Cleaning Control Interface | 25 Pre-motor Filter |
| 12 4-Speed AirFlow® Control Dial | 26 PureAir® HEPA System Filter (installed) |
| 13 3-Way Power Switch | |
| 14 Control Handle | |
| 15 Carry Handle | |



Product Specifications – Kirby V530®

Model Name	Kirby V530 Signature Series® Upright Vacuum
Model Number	V530CB
Unit Color	Carbon Black
Filtration Type	PureAir® Dual HEPA Filtration
Full System Filtration	HEPA – Full System Hospital Grade ASTM F3150 Independently Certified
Primary Nozzle	Multi-Surface Power Nozzle
Primary Nozzle Width	13.5 inches
Warranty	8-Year Limited Warranty ²
Nozzle Height Settings	6
Bag Volume	.95 gal (3.6L)
Suction Motor	1200 W
Brush Motor	250 W
Airflow (motor rating)	131 CFM
Brush Speed (free spin)	8900 RPM
Sound Level	66 dBA
Voltage	120 V
Frequency	60 Hz
Current Draw	12 A
Cord Length	32 ft
Total Cleaning Radius	40 ft
Includes:	Multi-Surface Power Nozzle Crevice Tool Duster Brush Upholstery Tool Accessory Bag Extra 3-pack PureAir HEPA Filter Bags
Main Unit Weight	12.1 lbs.

² Limited warranty coverage: eight (8) years on the unit motor and labor; five (5) years on all other parts and labor. For complete warranty details, please visit kirby.com/pages/signature-warranty.

Meet your Kirby Signature Series®

Category-Leading Cleaning Efficiency¹

Deep-cleaning performance that restores the look and feel of your floors. Restores texture and appearance while helping extend the life of carpets, rugs, and upholstered surfaces. To achieve category leading cleaning efficiency, set the Multi Surface Power Nozzle to the lowest height setting (level 1) and set the 4-Speed AirFlow Control Dial to the highest setting (level 4).

8-Year Limited Warranty²

Premium performance backed for years to come. Built to be dependable, not disposable. Our limited warranty and nationwide network of Kirby Authorized Service Centers provide added confidence and support throughout ownership.

Glide Control System

Effortless control, wherever you clean. Smooth, precise handling makes it easy to navigate around furniture and tight spaces.

4-Speed AirFlow® Control

The right level of power for every job. Customized power to let you quickly adjust suction to match the surface and cleaning job at hand.

6-Level Height Adjust

Precise cleaning for every surface. Six cleaning levels let you optimize the cleaning position for different carpet types and floor surfaces.

Performance Display Panel

Maintain performance standards with indicator reminders for service requirements, bag full, and filter replacement.

PureAir® Dual-HEPA Filtration

Cleaner air starts with a vacuum engineered to outclean. Dual-HEPA filtration captures fine dust and allergens, helping deliver cleaner, fresher air.

Onboard Stretch Hose with Magnetic Connect

Convenient above-floor cleaning, always within reach. The onboard Stretch Hose is ready when you need it, while the magnetic Hose dock provides quick, secure storage between uses.

High-Quality Construction and Materials

Crafted for lasting performance. Premium materials and durable construction are engineered to deliver reliable cleaning performance and years of dependable use.

Quick-Release Cord Hooks

Effortlessly start your cleaning job with Kirby's quick-release system. Cord hooks make cleanup and storage quick and convenient.

40-foot Cleaning Radius

More reach. Fewer interruptions. A 40-foot cleaning radius provides extended reach for whole-home and above-floor cleaning while reducing the need to switch outlets.

Premium Accessories

Standard and optional accessories to tackle any cleaning job and expand upon Kirby's versatility.

Trusted Brand

More than 110 years of cleaning expertise. For over a century, Kirby has been dedicated to floor care, backed by an American-based support team and a nationwide network of Kirby Authorized Service Centers.

¹ Per ASTM F608 testing. For full testing details, please visit kirby.com/pages/cleaning-efficiency.

² Limited warranty coverage: eight (8) years on the unit motor and labor; five (5) years on all other parts and labor. For complete warranty details, please visit kirby.com/pages/signature-warranty.

Getting Started

Set Up

- 1 Insert the unit into the Multi-Surface Power Nozzle until you hear a “click”.
- 2 Insert the Handle into the Handle Port until you hear a “click”.
- 3 Your Kirby V530® comes with a Kirby PureAir® Filter Bag already installed. Open the Filter Bag Access Door to confirm installation of the Filter Bag.
- 4 Plug the unit in, and you’re ready for the ultimate clean!



EXPERT FLOORCARE TIP:

Your Kirby has an integrated Cord Clip on the back of the Handle for additional convenience.



Operating Instructions

Powering On Your Kirby

Locate the 3-Way Power Switch on the front of the Handle.

- 1 The top position will power off the unit.
- 2 The middle position will power on the unit; ideal for vacuuming hard floors or using in Hose-mode (see page 9.)
- 3 The down position will keep the unit's power on AND activate the brush roll; necessary for deep cleaning carpet and rugs.



Operating Instructions

Vacuuming Carpet

- 1 Press down on the Power Nozzle Release Pedal to release the Multi-Surface Power Nozzle from locked position.
- 2 Press the 3-Way Power Switch on the Handle to the down position to power on the unit and turn on the brush roll.
- 3 Press down on the Power Nozzle Height Adjust Pedal to customize your height setting.



EXPERT FLOORCARE TIP:

Your Kirby has 6 height settings; 1 is the lowest and 6 is the highest. While vacuuming, adjust the cleaning level until you reach the lowest height setting that still allows the vacuum to move comfortably.



EXPERT FLOORCARE TIP:

If the vacuum feels hard to push, cycle through the height settings to increase the height by a level.



Operating Instructions

Vacuuming Hard Floors

- 1 To vacuum hard floors, press the 3-Way Power Switch to the middle position to power on the unit and deactivate the brush roll.

EXPERT FLOORCARE TIP:
When the unit is powered on and the Kirby® logo on the Nozzle is NOT illuminated, this is the correct setting for vacuuming hard floors.



- 2 Press down on the Power Nozzle Height Adjust Pedal to adjust the Nozzle height to “1” (lowest) position.



Operating Instructions

Using the Stretch Hose and Attachments

The onboard Stretch Hose makes it easy to clean furniture, stairs, and other above-the-floor areas.

- 1 Lock Handle in vertical position with Nozzle. Power on your Kirby in the middle position.

EXPERT FLOORCARE TIP:

If your unit is powered on with the brush roll activated, the brush roll will automatically deactivate when you remove the end of the Stretch Hose from its dock.



- 2 Remove the end of the Stretch Hose from its dock, select your preferred cleaning tool, and connect it to the end of the Stretch Hose.

CAUTION – Over-stretching the Hose may cause the unit to tip over. To prevent damage to your vacuum and avoid potential injury, keep one hand on the Handle for additional stability.

EXPERT FLOORCARE TIP:

The Hose Port manually rotates to allow for extended reach



- 3 Storing the Stretch Hose

When you're done using the Stretch Hose, rotate the Hose Port back to the 10 o'clock position and insert the end of the Hose into its dock.

The Magnetic Hose Connect will keep the Stretch Hose snug to the unit for convenient storage.



Accessory Guide

Accessory	Purpose	Best Use
① Crevice Tool	Tight spaces	Baseboards, corners
② Upholstery Tool	Fabrics	Sofas, chairs
③ Duster Brush	Delicate surfaces	Shelves, blinds
④ Turbo Air Brush (optional)	Dirt and pet hair removal	Furniture, stairs



4-Speed Airflow® Control Dial

The Cleaning Control Interface features the 4-Speed AirFlow® Control Dial that lets you customize the suction power for any cleaning task.

Your Kirby has 4 airflow settings.

Setting ① (dial turned left) is lowest and is best for delicate cleaning.


Setting ④ (dial turned right) is highest and provides maximum power.



Performance Indicators

Cleaning Control Interface

The Cleaning Control Interface includes 3 Performance Indicators and a RESET button that illuminate only when necessary.

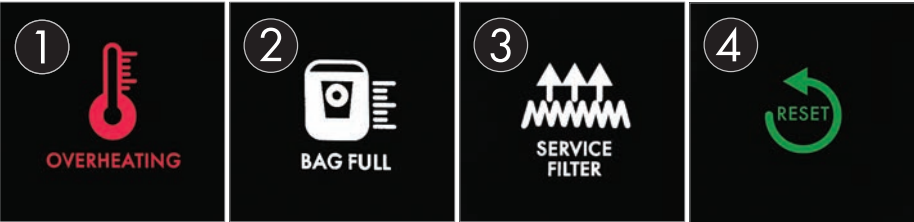

Symbol	Meaning	Action
1 Overheating	Main motor overheated Nozzle motor overheated	Check for clog Check filters (pre-motor, system filter) Check bag Check for tangle in brush roll
2 Bag Full	(1) Full bag (2) Airflow restriction	(1) Check for full Filter Bag—replace Bag (2) Check for clog
3 Filter Indicator	Filter has reached end of life	Replace filter (see troubleshooting guide)
4 Filter Reset	Resets timer for Filter indicator	Replace System Filter/Press and hold RESET button for 2 seconds

Changing your PureAir® HEPA Filter Bag

- 1 Pull the Filter Bag Access Button to remove Filter Bag Access Door.
- 2 Locate and pull shuttle release tab and pivot shuttle down.
- 3 Grip seal tab and pull to seal the Filter Bag.
- 4 Grip the Filter Bag collar and pull to remove from shuttle.




5 Discard sealed Filter Bag.

6 Insert a new Filter Bag by sliding collar into shuttle.

7 Rotate shuttle up until it clicks into place.

8 Close the Filter Bag Access Door.

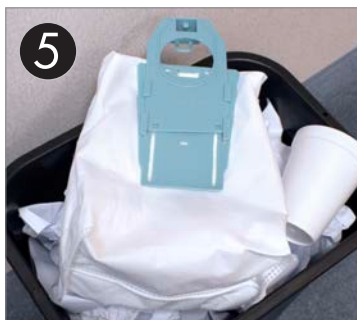


Checking your Pre-motor Filter

- 1 Pull the Filter Bag Access Button to remove Filter Bag Access Door.
- 2 Remove the Pre-motor Filter by pulling on the holder tab.
- 3 Wash the Pre-motor Filter or install a new one.
- 4 Once the Pre-motor Filter is completely dry, place back into Filter Holder and insert back into the unit.



Changing your PureAir® HEPA System Filter

- 1 Press Filter Access Button to remove the Filter Access Door.
- 2 Remove and dispose of System Filter.
- 3 Install new System Filter.
- 4 Insert Filter Access Door.

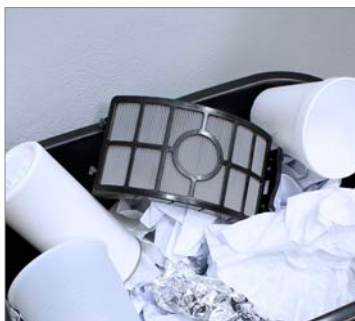

Troubleshooting Guide

Power off and unplug unit before performing any troubleshooting.
If the problem persists, contact your Kirby Authorized Service Center.

Issue	Possible Cause	Solution
Loss of suction	(1) Full bag (2) Dirty Pre-motor or System Filters (3) Airflow obstruction (4) Bag door open	(1) Replace bag (2) Inspect and replace pre-motor and/or system filters (3) Check for clog (4) Close and latch bag door
Brush roll not rotating	(1) Obstruction (2) Main unit connection to nozzle (3) 3-Way Power Switch is not in correct position (4) Hose not inserted fully into port	(1) Remove clog (2) Verify main unit is properly inserted into nozzle until "click" is heard (3) Toggle brush roll on with 3-way power switch (4) Verify hose is completely inserted into port
Vacuum won't start	(1) Power issue (2) Handle connection to main body (3) Main power switch is off (4) Cord worn, cut, or broken	(1) Use another outlet (1) Remove cover over power cord in main unit and verify cord is properly plugged into main unit (2) Verify handle is properly installed in main body until "click" is heard (3) Is 3-way power switch in ON position (4) Replace cord
Unusual noise	(1) Blockage (2) Other	(1) Inspect hose (1) Replace nozzle (1) Turn off unit and inspect for clogs or unusual debris (2) If problem persists, contact Kirby Authorized Service Center
Overheating indicator illuminated	Main motor overheated Nozzle motor overheated	Check for clog Check filters (pre-motor, system filter) Check bag
Bag Full indicator illuminated	(1) Full bag (2) Airflow restriction (3) Certain attachment tools	(1) Check for full bag—replace bag (2) Check for clog (3) This is normal, bag full indicator should turn off when accessory is removed

Issue	Possible Cause	Solution
Service Filter indicator illuminated	System Filter has reached end of life	Replace System Filter. 1. Turn off unit 2. Unplug from outlet 3. Remove filter cover 4. Remove filter 5. Replace with new filter 6. Reinstall filter cover 7. Plug vacuum in 8. Power vacuum on 9. Place finger on filter reset indicator and hold for 2 seconds . Filter indicator will flash and turn off.
Early System Filter replacement	If you want to replace system filter BEFORE the Service Filter indicator is illuminated, there is an alternate way to reset the Filter Reset indicator	1. Place finger on Service Filter indicator and hold for 5 seconds . Filter Reset will illuminate. 2. Turn off unit 3. Unplug from outlet 4. Remove filter cover 5. Remove filter 6. Replace with new filter 7. Reinstall filter cover 8. Plug vacuum in 9. Power vacuum on 10. Place finger on filter reset indicator and hold for 2 seconds. Filter indicator will flash and turn off.
Bag door won't close	(1) Bag is not installed properly (2) Bag is not installed	(1) Ensure bag is installed properly until a "click" is heard. Bag collar does not "click" into bag shuttle. Bag collar slides into bag shuttle and rotated up to spout—will "click" when properly installed. (2) Bag door cannot be closed if a bag is not installed. Install bag in unit
Unit won't stand up	Main unit not in locked position on nozzle	Make sure unit is facing forward, then rotate completely upright until audible "click" is heard in the nozzle.
Nozzle height adjust not working	Nozzle is in locked position and raised off floor	Ensure nozzle is completely on floor when using height adjust
Vacuum picks up moveable rugs or is too difficult to push nozzle on carpet	(1) Incorrect nozzle height setting (2) Too much suction	(1) Adjust nozzle height to a higher setting (2) Use airflow control dial to reduce suction

Maintenance & Care

Monthly

☒ **Inspect brush roll**

- Warning: disconnect vacuum from power (unplug) and turn off before servicing brush roll
- Removing tangled hair use scissors or (optional) detangling tool along the guide track in the brush roll to trim away threads or hairs that have accumulated on the brush roll

☒ **Check filter bag to monitor fill-level. Bag Full indicator will appear when Filter bag needs changed**

☒ **Clean Pre-motor Filter**

- Your vacuum is equipped with a reusable pre-motor foam filter designed to trap large debris and protect the motor. While a new filter is included with replacement bags, you can wash and reuse the existing filter to maintain peak performance.
- Washing instructions
 1. Tap away loose debris to dislodge any loose dust, hair, or large particles
 2. Rinse the filter under lukewarm running water. Do not use dish soaps, detergents, or chemical cleaners as they can degrade the polymer structure
 3. Squeeze out excess water. Do not wring, twist, or stretch the filter.
 4. Air dry completely on a towel or drying rack in a well-ventilated area. Allow it to air dry for at least 24 hours. Do not use a hair dryer, clothes dryer, or place it on a radiator to speed up drying.
 5. Ensure the filter is completely dry to the touch. Inspect it for tears or damage. If intact, install the filter back into the pre-motor filter door, close and latch the pre-filter door reinstall the dust bag, and close the bag door.
- Never operate the vacuum cleaner with a wet or damp filter. Doing so can cause permanent damage to the motor and void your warranty.

☒ **Wipe down interior bag chamber**

☒ **General cleaning of unit/control panel cover/Kirby logo**

☒ **Inspect hose for holes, tears, or general damage**

Annually

☒ **Change system filter: This filter is NOT washable or reusable. It must be thrown away and replaced.**

☒ **Inspect bag door seal to make sure they are still installed properly, are not dry/brittle/cracked (they shouldn't ever be), etc.**

Limited Factory Warranty

From the best, you expect the best. That’s why The Kirby Company is pleased to offer a warranty that reflects the quality, reliability, and durability of your Kirby® vacuum. Subject to the exclusions and limitations listed in the complete Limited Warranty, which can be found at **kirby.com**, Kirby warrants to you that your vacuum shall be free from defects in material and workmanship under ordinary household use as follows:

- **For eight years from date of purchase**, a Kirby Authorized Service Center will repair or replace a defective unit motor at no cost, labor charges included.
- **For five years from date of purchase**, a Kirby Authorized Service Center will repair or replace defective parts, excluding expendable components, at no cost, labor charges included.

For a complimentary copy of the entire Limited Factory Warranty, please call **216-529-6177**, email **consumer@kirby.com**, or write to The Kirby Company at 1920 West 114th Street, Cleveland, Ohio 44102.

Consumer Relations

If you have any product questions, issues, or difficulty using the Kirby, do not return the unit to your retailer or call them for questions. Instead, contact The Kirby Company as our product specialists are standing by to assist; visit **kirby.com** to chat with a specialist, email **consumer@kirby.com**, or call **216-529-6177**.

Certified by:	Kirby Model and Optional Accessories
<div> CONFORMS TO UL STD. 1017</div>	Kirby V530: V530CB – Carbon Black

Storage

- **Store in an upright position:** Always store the vacuum cleaner standing upright on a flat, stable surface to prevent tipping, damage, or strain on internal components.
- **Keep in a clean, dry area:** Store indoors in a cool, dry location, away from moisture, direct sunlight, and extreme temperatures to protect electrical and plastic parts.


Kirby V530[®]

Signature Series[®]

Category-
Leading
Cleaning
Efficiency¹



8-Year
Limited
Warranty²

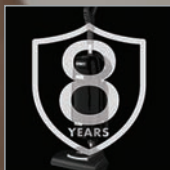

PureAir[®]
Dual-HEPA
Filtration



¹ Per ASTM F608 testing. For full testing details, please visit kirby.com/pages/cleaning-efficiency.

² Limited warranty coverage: eight (8) years on the unit motor and labor; five (5) years on all other parts and labor. For complete warranty details, please visit kirby.com/pages/signature-warranty.

Genuine Kirby Supplies

Only use Genuine Kirby bags, filters, parts, and accessories to maintain optimal performance. Genuine Kirby supplies can be purchased from Kirby Authorized Service Centers, at kirby.com, or by calling our product specialist team at **216-529-6177**.