

AUGEN PRIZM

Portable Digital Music Player

Quick Start Guide

Version: V4.0W

GETTING STARTED

- Attach the player to your computers USB connector with the provided USB cable
- Set the power switch to the “**ON**” position to charge the player, otherwise, the player cannot be charged.
- Very important: The MENU button is the ENTER or SELECT button and the arrow buttons are the scrolling buttons as well as track skip and fast forward and rewind. Scroll with the ARROW buttons and choose function by hitting the MENU button. Center button is PLAY.

As soon as the device is connected to your computer, a pop-up window will appear on your computer screen offering choices. This screen will vary depending on what programs your computer has available. Select the choice that makes the most sense for what you want to do.

- If you want to move a music file into your PRIZM PLAYER choose open folder. Open up the folder that contains the music files in your computer and simply drag and drop the files into the PRIZM folder.
- If you want to move photos to the PRIZM PLAYER open up the folder that contains your photos and drag and drop the selected photos into the PRIZM folder.
- Disconnect from your computers USB connector

To move files from your PRIZM player to your computer, simply reverse this process and move items from PRIZM folder to your desktop or selected folder

To play the files in your PRIZM PLAYER:

- Slide POWER SWITCH to ON position
- Attach headphones to mini plug jack on bottom of unit

- With the ARROW & MENU BUTTONS, select function desired such as music and press MENU BUTTON
- When player screen is visible scroll with ARROW buttons to desired track and press center PLAY button to begin playback of desired track
- Volume is adjusted by pressing VOL button and then the ARROW RIGHT button to increase volume or ARROW LEFT button to decrease volume
- To re-charge the unit, simply attach USB cable to the unit and your computer and slide the POWER BUTTON to the on position. Charging is complete when battery icon appears to be “full”.
- To watch and record movies into your player the included conversion software must be used please see the user manual
- When device is in “sleep time” mode, press and hold the center PLAY button until unit turns on

NOTE-It is very important to disconnect any USB device properly in order to prevent loss of data or possible damage. An icon will appear on the task bar. Click the icon to access a dialog box that allows you to safely disconnect the device. Note that the appearance of the icon will vary, depending upon what operating system is configured on your computer.

AUGEN

WWW.AUGENUS.COM