



Miele HEPA Filter

Typically changed once per year (or after 50 hours of vacuum use)



Miele Active Air Clean Charcoal Filter

Typically changed once per year (or after 50 hours of vacuum use)



Installing a Miele HEPA Filter or Miele Active Air Clean Charcoal Filter



Remove old HEPA Filter.



Write a year from today's date
on new HEPA Filter.

You will now know when your
HEPA filter requires replacing
again.



Insert new HEPA Filter
into vacuum.

Installing a Miele Super Air Clean Filter



Open filter frame (that came included with your vacuum).



Insert new Super Air Clean Filter that came with your box of bags.



Close filter frame .




Insert filter frame inside your vacuum .

Installing a Miele Exhaust Filter



Open Exhaust Filter compartment.

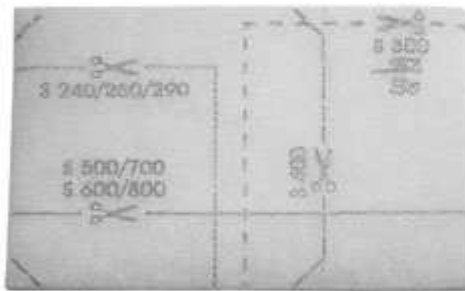

Cut Exhaust Filter (that came in your box of bags) to fit your vacuum Exhaust Filter compartment.



Insert Exhaust Filter inside compartment and close.