


READ THIS FIRST

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)


- Press the "FM/AM" button.
- Press the "XM" button.
- Press the Tune ▶ button until the source you want is displayed.
- Press Preset 6 to select the source

*if available

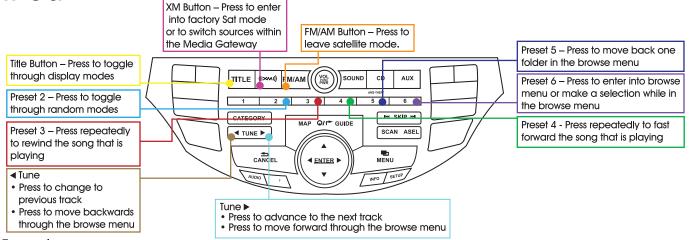

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

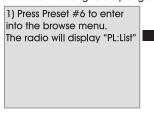

2) Press the Tune ▶ Button until radio displays "AR:Artist".Press Peset #6 to select. Radio will display "AR:All". All browsing menus are displayed in alphetical order.

3) Press the Tune ▶ Button until radio displays "AR:Francis Scott Key" Press Preset #6 to select Radio will display "AL:All". All browsing menus are displayed in alphabetical order.

4) Press the Tune ▶ Button until radio displays
"AL:Patriot Hits Vol.1"
Press Preset #6 to select
Radio will display "TR:All".
All browsing menus are
displayed in alphabetical order.

5) Press the Tune ▶ Button until radio displays "TR:Star-Spangled Banner" Press Preset #6 to select Song will begin to play and the display will show track info.

Honda Accord 2007-2008




READ THIS FIRST

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "FM/AM" button.
- Press the "XM" button.
- Press the Tune button until the source you want is displayed.
- Press Preset 6 to select the source

*if available

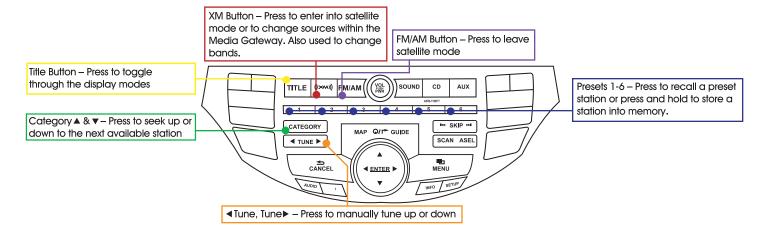

HD RADIO EXAMPLE

To select an HD radio station.

Press "Category ▲" or "Category ▼" to get to desired station, Radio will auto lock onto an HD station if available example: 92.5 HD1 MHZ When locked onto a station. press"Category A " to access multi-cast HD stations (if available). example: 92.5 HD2 MHZ

To store a radio station into preset memory. To recall a station stored into preset memory.

1) Tune to the desired station using the "Category A" or "Category ▼" button Press and hold (for two seconds) the preset button (1-6) where you wish to store the preset. A confirmation beep will be heard when preset has been successfully saved.

1Press the preset button (1-6) that corresponds to the preset you wish to recall.

(Actual Radio Appearance may differ from representation.)