

# NISSAN

Frontier, Versa, Xterra



## iPod

**\*\*READ THIS FIRST\*\***

### Changing Sources (iPod, HD Radio, \*Satellite Radio, AUX)

- Press the "Radio" button until "Sat" is displayed.
- Press the "Seek ▲" button until the source you want is displayed.
- Press the "Tune ▼" button to select the source.

\*if available

Radio Button - Press to enter into Sat mode or to switch modes within the Media Gateway


Display Button – Press to toggle through display modes.

Seek ▲

- Press to advance to the next track
- Press to advance to the next option in the browse menu

Seek ▼

- Press to go back to the previous track
- Press to go back to the previous option in the browse menu

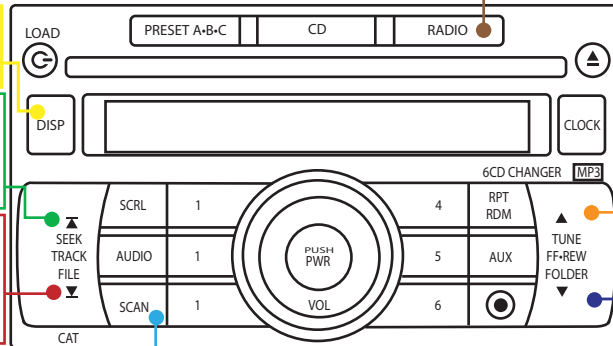

Tune ▲

- Press to go back one step while in the browse menu

Tune ▼

- Press to enter into the browse menu
- Press to make a selection while in the browse menu

Scan

- Press to exit browse menu
- Press while listening to iPod to toggle through random modes.

### Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

1) Press the Tune ▼ button to enter into the Browse menu. The radio will display "PL:List"

2) Press the Seek ▲ button until radio displays "AR:Artist". Press the Tune ▼ button to select. Radio will display "AR:All"

3) Press the Seek ▲ button until radio displays "AR:Francis Scott Key". Press the Tune ▼ button to select. Radio will display "AL:All".

4) Press the Seek ▲ button until radio displays "AL:Patriot Hits Vol.1". Press the Tune ▼ button to select. Radio will display "TR:All".

7) Press the Seek ▲ button until radio displays "TR:Star-Spangled Banner". Press the Tune ▼ button to select. Song will begin to play and the display will show track info.

(Actual Radio Appearance may differ from representation.)

QR026

# NISSAN

Frontier, Versa, Xterra



**\*\*READ THIS FIRST\*\***

## Changing Sources (iPod, HD Radio, \*Satellite Radio, AUX)

- Press the "Radio" button until "Sat" is displayed.
- Press the "Seek ▲" button until the source you want is displayed.
- Press the "Tune ▼" button to select the source.

\*if available

Radio Button - FM/AM/SAT button – Press to enter into sat mode or to switch modes within the media gateway


Display – press to toggle through display modes

Seek ▲  
• Press to seek up to the next available station  
• Press to move forward through the preset menu

Seek ▼  
• Press to seek down to the next available station  
• Press to move backwards through the preset menu

Tune ▲  
• Press to manually tune up  
• Press to store presets while in the preset menu

Tune ▼  
• Press to manually tune down  
• Press to recall presets while in the preset menu

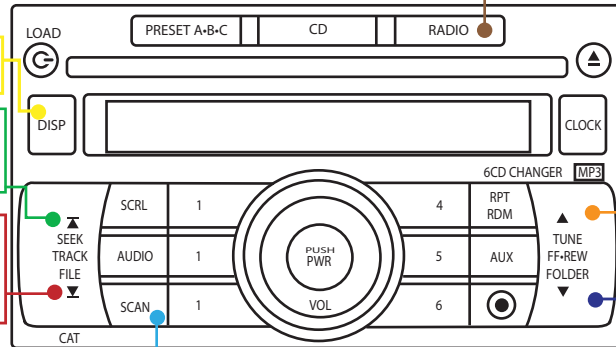

Scan – Press to enter/exit the browse menu.

## HD RADIO EXAMPLE

To select an HD radio station.

Press the 'SEEK ▲' button to get to the desired station. The Radio will auto lock on to an HD Radio Station if available example: 92.5 HD1 MHZ  
When locked into an HD Radio Station, press the 'SEEK ▲' button up to access multi-cast HD Station(s). (if available) example: 92.5 HD2 MHZ

To store a radio station into preset memory.

Press the "Scan" button to enter the Preset Menu. Press the "Seek ▲" button until the location you want is displayed. Press the "Tune ▲" button to store the preset. Radio will display "PR Saved"

To recall a station stored into preset memory.

Press the "Scan" button to enter the preset menu. Press the "Seek ▲" button until the preset you want to recall is displayed. Press the "Tune ▼" button to recall the preset.

(Actual Radio Appearance may differ from representation.)