


# DG 240 W

C6N0AV003W

tav. 1  
cat. 18.C3940

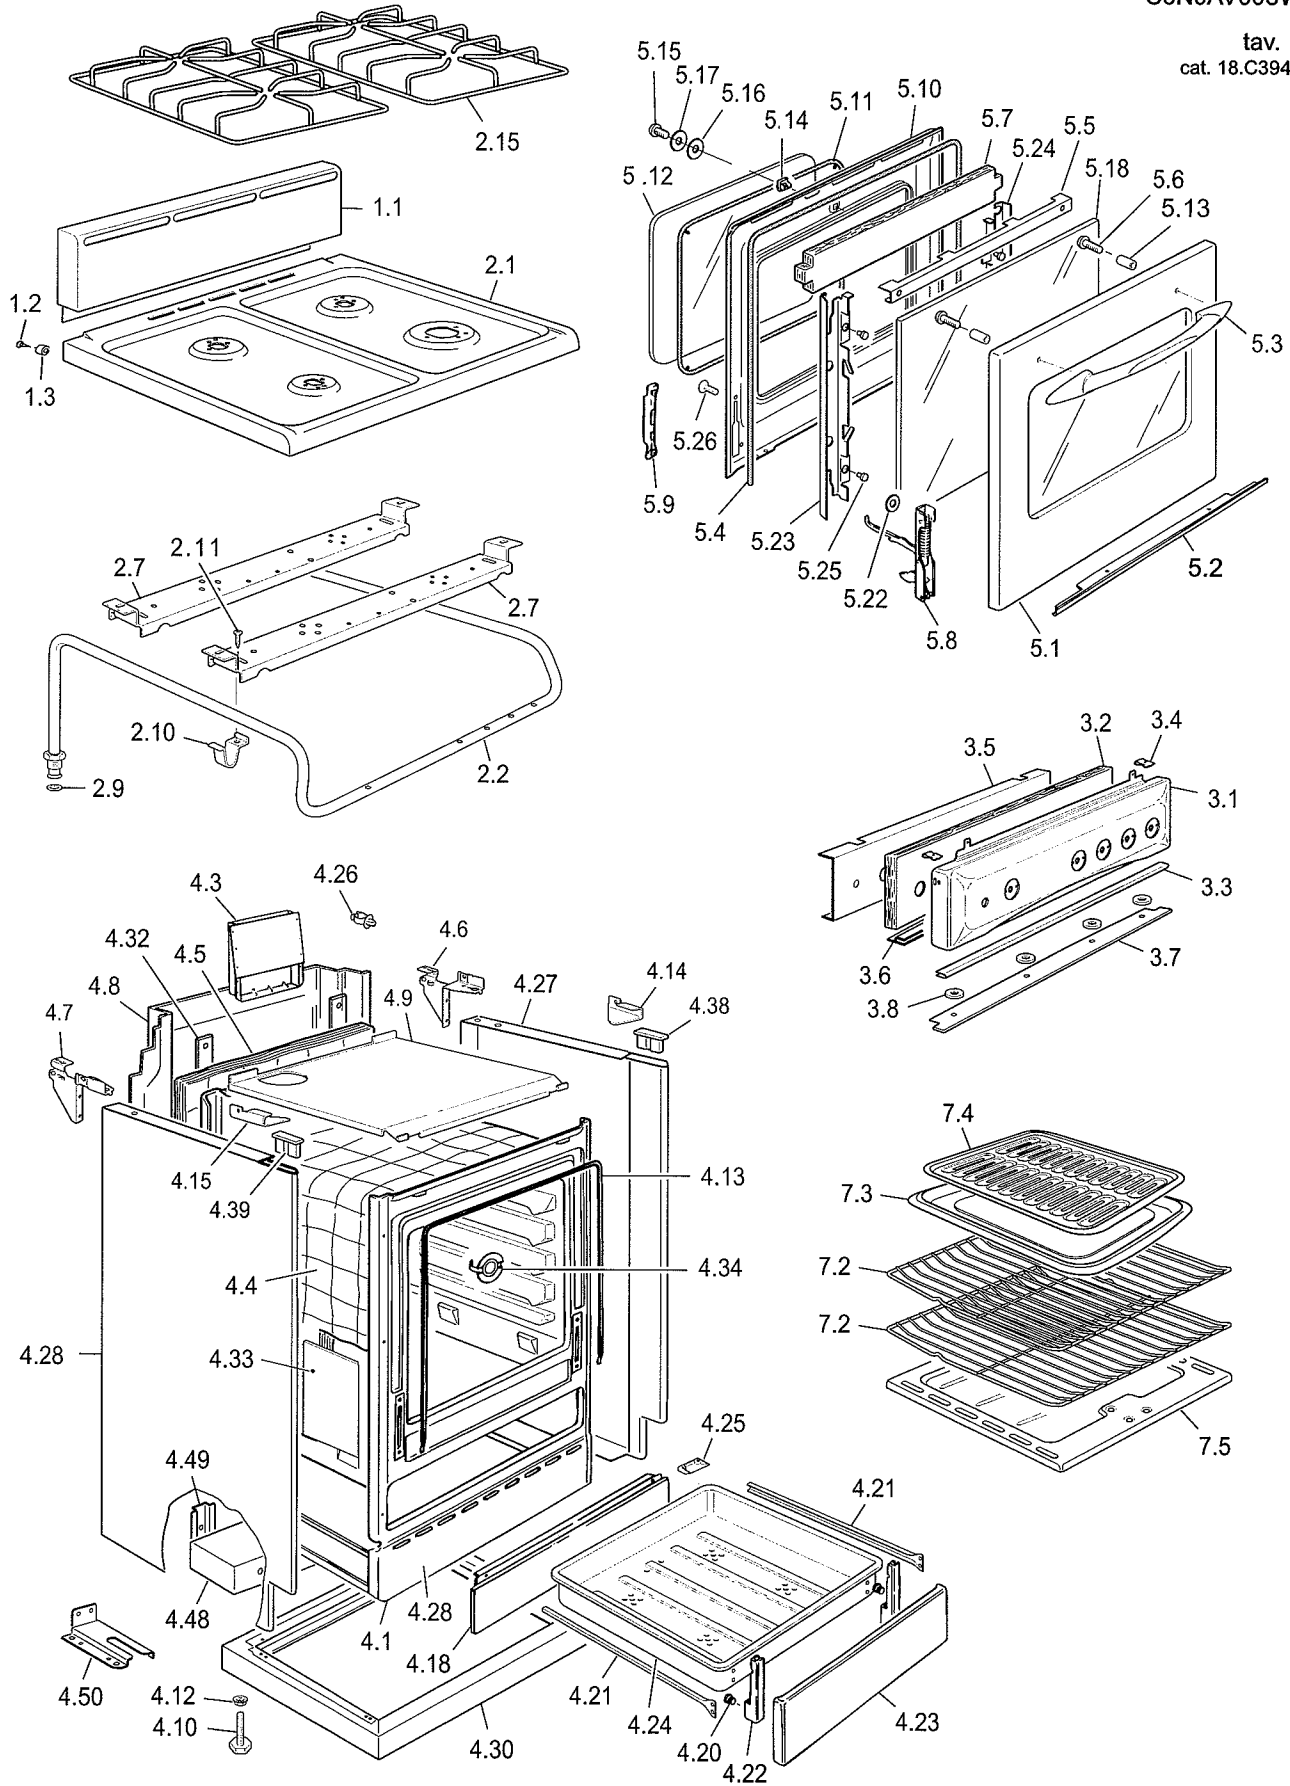



REF.	CODE	DESCRIPTION
<u>1.1</u> <del>2</del>	103940035	Rear trim
1.2	001201	Screw
1.3	040031003	Plug
<u>2.1</u> <del>2</del>	3316N406W	Cooktop
2.2	3426N40005	Manifold
2.7	51B6N01	Burners support
2.9	053024.1	Gasket
2.10	094254	Fixing plate
2.11 <del>6</del>	001227	Screw
<u>2.15</u> <del>6</del>	217620	Pan-support
3.1	35C6N311AV	Control panel
3.2	030164.1	Control panel insulation
3.3	053111	Seal
3.4	213007	Clip
3.5	4116N06	Insulation support
3.6	053109	Control panel seal
3.7	51B6N02	Deflector
3.8	003066	Spacer
4.1	4506N1GG14	Oven frame
4.3	46A6N05Z	Funnel
4.4	030159	Oven insulation
4.5	030160	Rear insulation
4.6	094354DX	Rear right coupler
4.7	094354SX	Rear left coupler
4.8	4116N05	Rear panel
4.9	4216101Z	Upper shelter
4.10 <i>same</i>	103854	Shim
4.12 <i>same</i>	214056	Nut shim
<u>4.13</u> <del>S</del>	053039	Seal
4.14	094333DX	Front right coupler
4.15	094333SX	Front left coupler
4.18	103160035	Base panel
4.20	040012	Buffer
4.21	094075	Drawer rail
4.22	094138	Drawer fixing bracket
4.23	39E66013	Drawer front panel
4.24	39K6101Y	Drawer
4.25	081073	Drawer stopper
4.26	531533	Tube retainer
4.27	36C6ND13	Right side panel
4.28	36C6NS13	Left side panel
4.30	68061010	Plinth
4.32	4219604Z	Rear insulation support
4.33	58BN601	Hinge protection
4.34	035097	Rotisserie hole plug
4.38	081083035	Right stopper
4.39	081084035	Left stopper
4.48	103326	Balance weight
4.49	213016	Balance weight bracket
4.50 <i>same</i>	094495	Anti-tip stability device

REF.	CODE	DESCRIPTION
<u>5.1</u> <del>3</del>	0312452	Door glass
5.2	083262035	Lower door trim
<u>5.3</u> <del>3</del>	037211035	Door handle
<u>5.4</u> <del>5</del>	053112	Door seal
5.5	51B6119	Handle bar
5.6	001071	Screw M5x16
5.7	030163.1	Door insulation
<u>5.8</u> <del>5</del>	053096	Door hinge male
<u>5.9</u> <del>5</del>	063066	Door hinge female
5.10	373FF704K	Door panel
<u>5.11</u> <del>5</del>	053084	Gasket
5.12	0311000.1T	Inner glass
5.13	085095	Door handle sleeve
5.14	214021	Nut
5.15	001214	Screw
5.16	003035	Washer
5.17	103205	Washer
5.18	0312439	Third glass
5.23	51BFG03	Right inner glass support
5.24	51BFG02	Left inner glass support
5.25	040056	Third glass rubber
<u>7.2</u> <del>10</del>	217623	Oven shelf
<u>7.3</u> <del>5</del>	48B6105K	Broiling pan tray
<u>7.4</u> <del>5</del>	48E6104K	Pastry plate
7.5	47EN604K	Oven floor

REF.	CODE	DESCRIPTION
<u>6.1</u> <sup>15</sup>	218G446323	Burner knob
6.4	106240	Tap - Ø 0.27 A
=	106241	Tap - Ø 0.32 SR
=	106242	Tap - Ø 0.42 R
6.5	001233	Tap fixing screw
6.6	094382	Tap bracket
6.8A <sup>Screw</sup>	215465	A burner-cup
6.8SR	215466	SR burner-cup
6.8UR	215467	UR burner-cup
6.9	068111001	UR burner head
=	068110001	SR burner head
=	068109001	A burner head
6.10A	216129080	A burner-cap (Black)
6.10SR	216130080	SR burner-cap (Black)
6.10UR	216131080	UR burner-cap (Black)
6.12	101290	Injector - Ø 0.90 - AUX
=	101292	Injector - Ø 0.55 - AUX
=	101225	Injector - Ø 1.18 - SR
=	101293	Injector - Ø 0.72 - SR
=	101226	Injector - Ø 1.55 - R
=	101275	Injector - Ø 1.09- R
6.14	053024.1	Elbow gasket
6.16	103841	Gas pressure regulator 1/2" NG
6.19	029600	A inlet pipe
6.20	029602	SR inlet pipe left
6.21	029601	SR inlet pipe right
6.22	029603	R inlet pipe
6.27	3426N001	Extension pipe
6.29	067033	Connection
<u>8.1</u> <sup>15</sup>	218G446323	Oven knob
<u>8.7</u> <sup>6</sup>	215474	Oven burner
8.8	101070	Broil burner injector - Ø 1.46
=	101128	Broil burner injector - Ø 0.88
8.9	101207	Oven burner injector - Ø 1.80
=	101143	Oven burner injector - Ø 1.09
<u>8.10</u> <sup>1</sup>	215475	Broil burner
8.11	029802	Oven inlet pipe
8.13	001248	Screw
8.19	4216N02Z.1	Oven burner protection
8.20	4216N01Z	Oven burner support
8.21 <sup>Screw</sup>	066150	Thermostat
8.22	094503	Bracket
8.23	053045	Gasket
8.25	067036	Oven elbow
8.26	067035	Broil elbow
8.27	094513	Elbow support
8.28	029803	Broil inlet pipe
8.31 <sup>Screw</sup>	084040	Oven igniter with wire
8.32 <sup>Screw</sup>	084041	Broil igniter with wire
8.37	107055	Oven thermocouple - L=1200
8.38	107056	Broil thermocouple - L=1000
8.40	213015	Clip
8.41	003067	Washer

REF.	CODE	DESCRIPTION
11.1 <sup>Screw</sup>	072005	Lamp holder
11.2 <sup>Screw</sup>	073013005	Lamp - 15 W
11.5	082072	6 Burners ignition coil
11.6	094413	Burners ignition coil bracket
11.7 <sup>Screw</sup>	035094	Igniter spring
11.8	084028	Igniter - L = 250 mm
=	084029	Igniter - L = 630 mm
11.9 <sup>Screw</sup>	103526080	Push-button switch
11.10 <sup>Screw</sup>	103576035	Boss switch Rold
11.11 <sup>Screw</sup>	077029	Switch
11.13	041210	Earth plate
11.14	054104	Cord
11.16	1131554	Wiring
11.18	103851	Ignition switches
11.19	035080	Spring
11.20	003039	Retaining ring
11.21	003038	Washer
11.32 <sup>Screw</sup>	051067	Terminal block
-	1102688	Users operating instructions
-	1102689	Installation instructions