

# KENWOOD

GPS NAVIGATION SYSTEM

## DNX SERIES

DNX6960

DNX6160

DNX6020EX

DNX6460BT

DNX5160

MONITOR WITH DVD RECEIVER

## DDX SERIES

DDX616

DDX6046BT

DDX516

## INSTRUCTION MANUAL



**Take the time to read through this instruction manual.**

**Familiarity with installation and operation procedures will help you obtain the best performance from your new GPS Navigation System/DVD Receiver.**

### For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your Kenwood dealer for information or service on the product.

Model DNX6960/DNX6160/DNX6020EX/DNX6460BT/DNX5160/DDX616/DDX6046BT/DDX516

Serial number \_\_\_\_\_

**US Residents Only**

**Register Online**

Register your Kenwood product at  
**[www.Kenwoodusa.com](http://www.Kenwoodusa.com)**

# Contents

<b>Before Use</b>	<b>4</b>
<b>Notes</b>	<b>5</b>
<b>How to read this manual</b>	<b>8</b>

<b>Functions of the buttons on the front panel</b>	<b>10</b>
<b>Getting Started</b>	<b>12</b>
How to Display the Navigation Screen	12
How to Select the Source	12
How to Set a Medium / a Device	13
<b>Basic Operation</b>	<b>14</b>
How to Display the Source Control Screen	14
How to Display Top Menu Screen	15
Operation on the Playback Screen of Visual Sources	16
How to Display the Easy Control Screen	17

<b>Watching DVD/Video CD</b>	<b>18</b>
Playback Screen	18
Easy Control Screen	18
Source Control Screen	19
DVD-VIDEO Disc Menu	20
DVD-VR Menu Control	21
Video CD Zoom Control	22
<b>Music Disc/ Audio File Listening &amp; Video File/ Picture File Watching</b>	<b>23</b>
Source Control Screen	23
List Select	24
USB Device Select	25
Link Search (Audio file in USB)	26
Playback Screen (Video file, Picture file)	26
Easy Control Screen (Video file, Picture file)	27
Picture Control	27
Movie Menu Control	28
<b>iPod Control</b>	<b>29</b>
Playback Screen	29
Easy Control Screen	29
Source Control Screen	30
iPod List	31
Link Search (Music file)	31

<b>Initial Setup</b>	<b>90</b>
----------------------	-----------

<b>Radio Listening</b>	<b>32</b>
Source Control Screen	32
Preset Select	33
Auto Memory	33
Manual Memory	34
Radio Text	34
Set Station Name	35
Traffic Information	
(North American sales area only)	35
Search by Program Type	
(North American sales area only)	36
<b>SIRIUS/XM Control (North American sales area only)</b>	<b>37</b>
Source Control Screen	37
Channel Search	38
Channel Memory	38
Direct Channel Search	39
<b>HD Radio™ Control</b>	<b>40</b>
Source Control Screen	40
Auto Memory	41
Manual Memory	41
Receive mode	42
Direct Search	42
iTunes Tagging (HD Radio™ Tagging)	43
<b>Bluetooth Audio Control (DNX5160/DDX516)</b>	<b>44</b>
Before Use	44
Source Control Screen	44
<b>Other Functions</b>	<b>45</b>
Character Entry	45
Muting Audio Volume upon Reception of Phone Call	45
<b>Screen Control</b>	<b>46</b>
Screen Control	46

**Hands-Free Phoning 47**

Before Use	47
Downloading the Phonebook	47
Receiving a Call	48
During a Call	48
Call Waiting	48
Making a Call	49
Calling by Phonebook	50
Calling by Entering a Phone Number	50
Making a Call Using Call Records	51
Calling by Voice Recognition	51
Controlling Tone-based Services	52
Setting Up the Hands-Free Phone	53
Voice Registration	54
Key Word Voice Registration	55
Phone Number Preset	56
SMS (Short Message Service)	57

**Audio Control 59**

Audio Control Menu	59
Audio Control	59
Equalizer Control	60
Tone Setup	60
Zone Control	61

**Remote Controller 83**

Battery installation	83
Remote Controller mode switch	84
Common operations (AUD mode)	84
DVD/VCD (DVD mode)	85
MUSIC CD/Audio file/Video file/ Picture file (AUD mode)	87
Radio (AUD mode)	87
iPod (AUD mode)	88
USB (AUD mode)	88
NAV (NAV mode) (RC-DV331 only)	89

**Setup Menu 62**

How to Display SETUP Menu Screen	62
DivX Setup (DNX6460BT/DDX6046BT)	63
Software Information	63
User Interface	64
Language Setting	64
Touch Panel Adjustment	65
Clock Setup	65
Security Indicator Setup	66
Setup Memory	66
Entering Background	67
Panel Color Coordinate	68
Screen Adjustment	69
Registering Bluetooth Unit	70
Registering Bluetooth Unit PIN Code	71
Bluetooth Unit Connection	72
Bluetooth Hands-Free/Audio Output Setup	72
AV Input Setup	73
AV Interface Setup	73
Navigation Setup	74
Speaker Setup	75
DVD Setup	76
DVD Language Setup	77
DVD Parental Level Setup	77
Disc Setup	78
USB Setup	79
iPod Setup	79
SIRIUS Parental Code Setup	80
SIRIUS Parental Lock Setup	81
SIRIUS Parental Lock Channel Select	81

**Initial Setup 90****Status bar Indicator items 91****DVD Language Codes 92****Help? Troubleshooting 93****Help? Error 94****Specifications 96**

# Before Use


## ▲WARNING

### To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.

### How to reset your unit

- If the unit or the connected unit fails to operate properly, press the Reset button. The unit returns to factory settings when the Reset button is pressed.
- Remove the USB device before pressing the Reset button. Pressing the Reset button with the USB device installed can damage the data contained in the USB device. For how to remove the USB device, see <How to Set a Medium / a Device> (page 13).
- When the unit is turned on after pressing the Reset button, the Initial SETUP screen is displayed. (page 90)

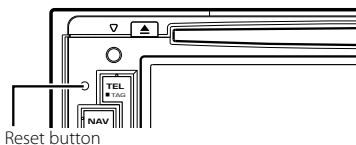

### Cleaning the unit

If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth.

If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.



- Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase characters.

### Lens fogging

 
When you turn on the car heater in cold weather, dew or condensation may form on the lens in the disc player of the unit. Called lens fogging, this condensation on the lens may not allow discs to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a while, consult your Kenwood dealer.

### Handling discs

- Do not touch the recording surface of the disc.
- Do not stick tape etc. on the disc, or use a disc with tape stuck on it.
- Do not use disc type accessories.
- Clean from the center of the disc and move outward.
- When removing discs from this unit, pull them out horizontally.
- If the disc center hole or outside rim has burrs, use the disc only after removing the burrs with a ballpoint pen etc.

### Discs that cannot be used

- Discs that are not round cannot be used.



- Discs with coloring on the recording surface or discs that are dirty cannot be used.

- This unit can only play the CDs with   

This unit may not correctly play discs which do not have the mark.

- You cannot play a disc that has not been finalized. (For the finalization process refer to your writing software, and your recorder instruction manual.)
- If you try to load a 3-inch-disc with its adapter into the unit, the adapter might separate from the disc and damage the unit.

### Other notes

- If you experience problems during installation, consult your Kenwood dealer.
- When you purchase optional accessories, check with your Kenwood dealer to make sure that they work with your model and in your area.
- Characters that conform to ISO 8859-1 can be displayed.
- The RDS or RBDS feature won't work where the service is not supported by any broadcasting station.

### Protecting the monitor

To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with the sharp tip.

# Notes

## List of playable discs

Disc types	Standard	Support	Remark	
DVD	DVD Video	○		
	DVD Audio	×		
	DVD-VR	○	Not compatible with CPRM.	
	DVD-R	○	MP3/WMA/AAC/WAV/ JPEG/MPEG/DivX*	
	DVD-RW	○	Playback	
	DVD+R	○	Multi-border/Multisession/ (Playback depends on authoring conditions)	
	DVD+RW	○	Compatible with 8-cm (3 inch) discs	
	DVD-R DL (Dual layer)	○		
	DVD+R DL (Double layer)	○	Only video format	
	DVD-RAM	×		
	CD	Music CD	○	CD-TEXT/8-cm (3 inch) discs supported.
CD-ROM		○	MP3/WMA/AAC/WAV/ JPEG/DivX* playback.	
CD-R		○	Multisession supported	
CD-RW		○	Packet write not supported.	
DTS-CD		○		
Video CD (VCD)		○		
Super video CD		×		
Photo CD		×		
CD-EXTRA		△	Only music CD session can be played.	
HDCD		△	Sound quality of normal CD music	
CCCD		×		
Others		Dualdisc	×	
		Super audio CD	△	Only CD layer can be played.

\*DivX Playable models : DNX6460BT and DDX6046BT

- : Playback is possible.
- △ : Playback is partly possible.
- ×
- × : Playback is impossible.



- DNX6460BT/DDX6046BT :  
When buying DRM enabled contents, check the Registration Code in the <DivX Setup> (page 63). Registration Code changes each time a file with the displayed Registration Code is played to protect against copying.

## Use of "DualDisc"

When playing a "DualDisc" on this unit, the surface of the disc that is not played may be scratched while the disc is inserted or ejected. Since the music CD surface does not conform to the CD standard, playback may be impossible.

(A "DualDisc" is a disc with one surface containing DVD standard signals and the other surface containing music CD signals.)

## About Audio files

### • Playable Audio file

AAC-LC (.m4a), MP3 (.mp3), WMA (.wma), Linear PCM (WAV) (.wav)



- If music of normal CD and other playback systems are recorded in the same disc, only the playback system recorded at the first setout is played.

### • Acceptable media

CD-R/RW/ROM, DVD±R/RW, mass-storage-class USB device, iPod with KCA-iP301V

### • Playable disc file format

ISO 9660 Level 1/2, Joliet, Romeo, Long file name.


### • Playable USB device file system

FAT16, FAT32

Although the audio files are compiled with the standards listed above, the play maybe impossible depending on the types or conditions of media or device.

### • Playing order of the Audio file

In the example of folder/file tree shown below, the files are played in the order from ① to ⑩.

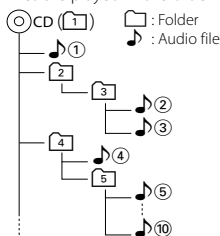

An online manual about audio files is put on the site, [www.kenwood.com/cs/ce/audiofile/](http://www.kenwood.com/cs/ce/audiofile/). On this online manual, detailed information and notes which are not written in this manual are provided. Make sure to read through the online manual as well.

## About Video files

### • Acceptable video files

MPEG1, MPEG2,  
DivX (DNX6460BT/DDX6046BT)

### • Extensions

mpg, mpeg, m1v, m2v, divx, div, avi

### • Acceptable media

CD-R/RW/ROM, DVD±R/RW, mass-storage-class USB device, iPod with KCA-iP301V

Acceptable discs, disc formats, USB device file system, file and folder names and playing order are the same as those for audio files. See <About Audio files>.

Next page ►

## About Picture files

### • Acceptable picture files

JPEG

### • Extensions

jpg, jpeg

### • Acceptable media

CD-R/RW/ROM, DVD±R/RW, mass-storage-class  
USB device

Acceptable discs, disc formats, USB device file system, file and folder names and playing order are the same as those for audio files. See <About Audio files>.

## iPod/iPhone that can be connected to this unit

Made for

- iPod nano (1st generation)
- iPod nano (2nd generation)
- iPod nano (3rd generation)
- iPod nano (4th generation)
- iPod nano (5th generation)
- iPod with video
- iPod classic
- iPod touch (1st generation)
- iPod touch (2nd generation)

Works with



**iPhone**  
4GB 8GB 16GB



**iPhone 3G**  
8GB 16GB



**iPhone 3GS**  
16GB 32GB

- Update iPod/iPhone software to the latest version.
- You can control an iPod/iPhone from this unit by connecting an iPod/iPhone (commercial product) with Dock connector using an optional accessory iPod connection cable (KCA-iP301V). The word "iPod" appearing in this manual indicates the iPod/iPhone connected with the KCA-iP301V (optional accessory).
- By connecting your iPod/iPhone to this unit with an optional accessory iPod connection cable (KCA-iP301V), you can supply power to your iPod/iPhone as well as charge it while playing music. However, the power of this unit must be on.



- If you start playback after connecting the iPod, the music that has been played by the iPod is played first.  
In this case, "RESUMING" is displayed without displaying a folder name, etc. Changing the browse item will display a correct title, etc.
- When the iPod is connected to this unit, "KENWOOD" or "✓" is displayed on the iPod to indicate that you cannot operate the iPod.

## About USB device

- In this manual, the word "USB device" is used for flash memories and digital audio players which have USB terminals.
- When the USB device is connected to this unit, it can be charged up provided that this unit is powered.
- Install the USB device in the place where it will not prevent you from driving your vehicle properly.
- You cannot connect a USB device via a USB hub and Multi Card Reader.
- Take backups of the audio files used with this unit. The files can be erased depending on the operating conditions of the USB device.  
We shall have no compensation for any damage arising out of erasure of the stored data.
- No USB device comes with this unit. You need to purchase a commercially available USB device.
- When connecting the USB device, usage of the CA-U1EX (option) is recommended.  
Normal playback is not guaranteed when a cable other than the USB compatible cable is used. Connecting a cable whose total length is longer than 5 m can result in abnormal playback.

## Navigation units that can be connected to this unit (DDX series only)

- KNA-G610
- KNA-G630

Update the navigation software to the latest version. For how to update the software, refer to the instruction manual of the navigation unit.  
For the latest information on connectable navigation units, access [www.kenwood.com/cs/ce/](http://www.kenwood.com/cs/ce/).

## About Satellite Radio tuner

This unit supports Satellite Radio tuners which are released by SIRIUS and XM.

Optional accessories below are necessary for connection.

SIRIUS tuner : Conversion cable CA-SR20V

XM tuner : XM interface Box KCA-XM100V

Refer to the instruction manual of Satellite radio tuner.

## HD Radio™ that can be connected to this unit

- KTC-HR300
- KTC-HR200


When you connect an HD Radio, Tuner features of the unit are disabled and changed to HD Radio tuner features.

## Bluetooth unit that can be connected to this unit (DNX5160/DDX516)




 
 
- KCA-BT200

## Region codes in the world

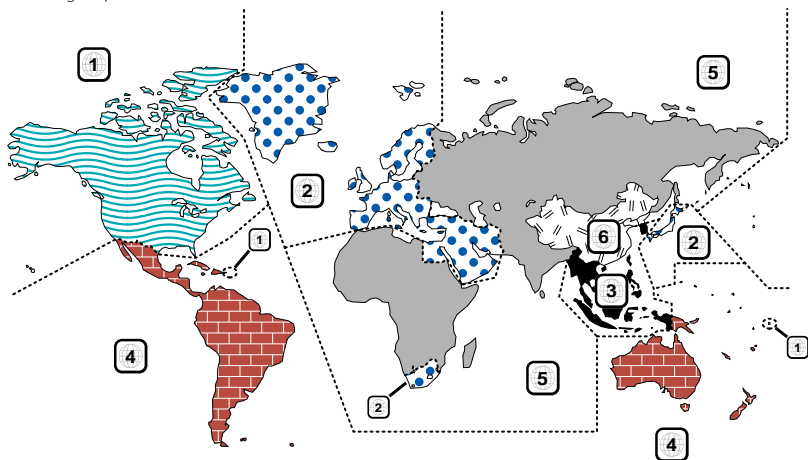The DVD players are given a region code according to the country or area it is marketed, as shown in the following map.



## DVD disc marks

Symbol	Description
	Indicates a region number. The discs with this mark can be played with any DVD player.
	Indicates the number of audio languages recorded. Up to 8 languages can be recorded in a movie. You can select a favorite language.
	Indicates the number of subtitled languages recorded. Up to 32 languages can be recorded.
	If a DVD disc has scenes shot from multiple angles, you can select a favorite angle.
	Indicates the type of screen for the image. The left mark indicates that a wide image picture (16:9) is displayed on a standard TV set screen (4:3) with a black band at both the top and bottom of the screen (letter box).

## Operation regulatory marks

With this DVD, some functions of this unit such as the play function may be restricted depending on the location where the DVD is playing. In this case, the following marks will appear on the screen. For more information, refer to the disc manual.



## Discs with limited period of use

Do not leave discs with a limited period of use in this unit. If you load an already expired disc, you may not be able to remove it from this unit.

# How to read this manual

This manual uses illustrations to explain its operations.


The displays and panels shown in this manual are examples used to provide clear explanations of the operations.

For this reason, they may be different from the actual displays or panels used, or some display patterns may be different.

## Selecting a screen item

Select and choose an item on the screen. Select the item by touching the button on the screen.

## Short Press

Press the button, denoted by .

## Change in the screen

With each operation, the screen changes in the order shown here.

▼ : Continues to the next line.  
● : Ends here.

## Continue to the next page

The instruction continues to the next page. Make sure to flip the page for the rest of the instruction.

## Source Control Screen

Switches to the source control screen to use various functions.

### 1 Display the Source Control Screen

See <How to Display the Source Control Screen>.

### 2 Operation on the Source Control screen



[FM] Switches to the FM1/2/3 band.

[AM] Switches to the AM band.

[◀◀], [▶▶] Tunes in a station.  
Use the [SEEK] to change the frequency switching.

### Multi Function



[CRSC]   Turns the CRSC function On or Off.

[SEEK] Switches the Seek mode.  
The mode is switched in the following order

Display	Setting
"AUTO1"	Tunes in a station with good reception automatically.
"AUTO2"	Tunes in stations in memory one after another.
"MANU"	Switches to the next frequency manually.

### 3 Store in memory



Continue to touch until the memory number appears.


 Next page 


The above operation example with the mark differs from the actual operation.

### Function Icon


Icons representing available functions are shown below.


 DVD-VIDEO: Function of DVD-VIDEO playback.


 DVD-VR: Function of DVD-VR playback.


 Video CD: Function of Video CD playback.


 CD: Function of CD (CD-DA) playback.


 Audio File: Function of Audio File playback.


 MPEG: Function of MPEG file playback.


 DivX: Function of DivX file playback.


 JPEG: Function of JPEG file playback.

 Disc: Function of Disc (DVD, CD) media.

 USB: Function of USB device.

 FM: Function of FM reception.

 SIRIUS: Function of SIRIUS source.

 XM: Function of XM source.

### About the model groups

If different functions are used in different model groups, the model groups are described as shown below.

Names of models included in each model group are as follows:


#### DNX series

DNX6960, DNX6160, DNX6020EX, DNX6460BT, DNX5160

#### DDX series

DDX616, DDX6046BT, DDX516

### Press 2 seconds or more

Press the button, denoted by  **2sec.**, for 2 seconds or more.

Indicates to press and hold down the button until operation starts or the screen changes. The left example indicates to press the button for 2 seconds.

### Other marks



Important precautions are described to prevent injuries etc.



Special instructions, supplementary explanations, limitations, and reference pages are described.




General precautions and reference pages are shown on the item.



The initial value of each setup is shown.

# Functions of the buttons on the front panel

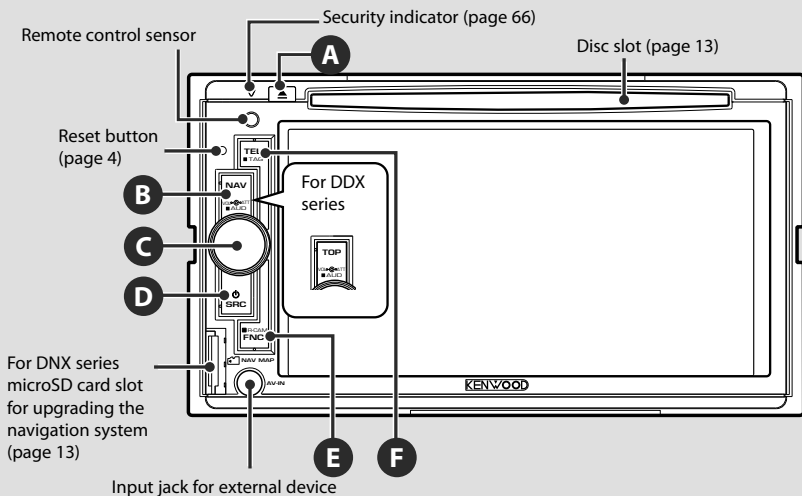

**1 sec.** : Press for more than 1 second

**A** Ejects the disc.

**B** **DNX series**

Displays the navigation screen.

When the navigation screen has already been displayed, it switches to the currently selected source screen.

**DDX series**

Displays the Top Menu screen. → 16

**C** Volume adjustment. (Turn the knob either way.)  
Attenuation of the volume On/Off. (Press the knob.)

**1 sec.** Displays Tone Control screen.\*1 → 60

**D** Turns the power On.  
Displays the Source Select screen. → 12

**1 sec.** Turns the power Off.



\*1 The display may not switch to Tone Control screen in some conditions.

**E** **DNX series**  
**DDX series with navigation unit**

- While watching the playback screen of a visual source  
 Displays the Easy Control screen. → 17
  - While watching the navigation screen  
 Displays the Screen Control screen. → 46
  - While watching the screen other than the above  
 Screen Switching function On/Off. → 11
- 1 sec.** Rear view display On/Off.\*2



\*2 The function of the [FNC] button can be changed to the display off function. See <User Interface> (page 64).

**DDX series without navigation unit**


- While watching the playback screen of a visual source  
 Displays the Easy Control screen. → 17
- 1 sec.** Rear view display On/Off.\*2

**F** Hands Free control screen On/Off.

- 1 sec.** Keep the tag data of the currently listening music of HD Radio™.

**Screen Switching Function**


Switching between the navigation screen and the source control screen with one touch operation.

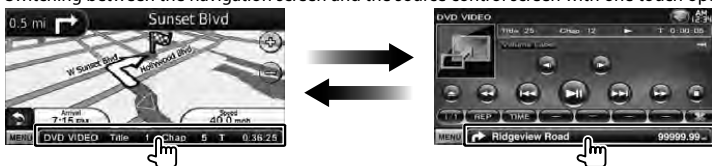

- For DDX series  
 Screen Switching function can be activated when an optional navigation system is connected to this unit.

**Connecting an external device to AV-IN jack**


Use of the optional cable CA-C3AV is recommended for connecting an external player. When connecting, make sure to attach the ferritic core supplied with this unit to prevent electromagnetic noise. If the ferritic core may scratch the vehicle, wrap it with the cushion sheet (Accessory of this unit).

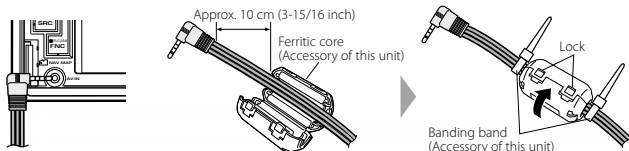

# Getting Started


## How to Display the Navigation Screen

### DNX series

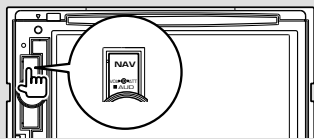

The navigation screen appears.

### DDX series

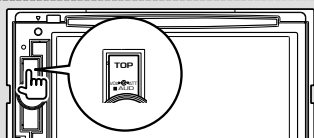

The navigation screen appears.



- For how to set up and use the navigation function, see the Navigation Instruction Manual.




- For DDX series  
An optional navigation system needs to be connected.  
See <Navigation unit that can be connected to this unit> (page 6) for connectable navigation units.

## How to Select the Source

Sources can be selected from the Source Select screen.

### Source Select screen

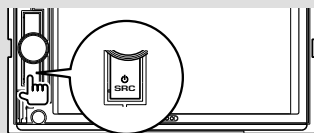

The **Source Select** screen appears.

Touch the icon of the source.

Use  $\blacktriangle$  or  $\blacktriangledown$  to turn the page.

For how to operate each source, see the following pages.


- DVD-VIDEO/ DVD-VR/ Video CD disc  $\rightarrow$  Page 18
- CD  $\rightarrow$  Page 23
- Audio file/ Video file/ Picture file disc  $\rightarrow$  Page 23
- iPod  $\rightarrow$  Page 29
- USB  $\rightarrow$  Page 23
- TUNER  $\rightarrow$  Page 32
- SIRIUS/ XM  $\rightarrow$  Page 37
- HD RADIO  $\rightarrow$  Page 40
- Bluetooth  $\rightarrow$  Page 44



- For Disc media, iPod, and USB, the input is switched to the source as the media or the device is set.


## How to Set a Medium / a Device

### ■ Disc media

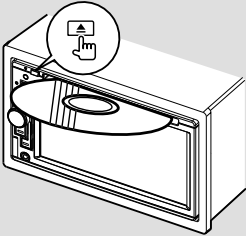


If a disc is already inserted, it is ejected by pressing the [▲] button.

### ■ iPod

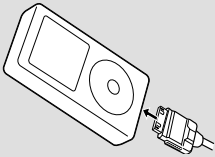

To disconnect the iPod, stop the playback by touching the [▶||] button on the source control screen, and then disconnect the iPod. See <Source Control Screen> (page 30).

### ■ USB device

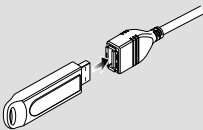

To disconnect the USB device, touch the [▲] button on the source control screen, and then disconnect the USB device. See <Source Control Screen> (page 23).




- The playback starts automatically after setting the media or the device.

## DNX series

### ■ microSD card

This microSD card slot is used to upgrade the Navigation System.

For how to upgrade the Navigation System, refer to the instruction manual of the navigation system.

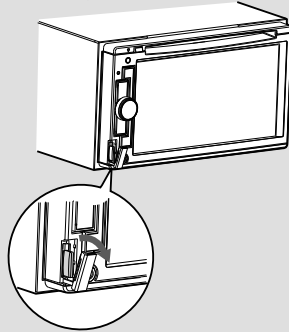

#### Inserting the microSD card

Hold the microSD card with the label side facing left and the notched section up, and insert it into the slot until it clicks.

#### Removing the microSD card

Push the microSD card until it clicks and then remove your finger from the card. The card pops up so that you can pull it out with your fingers.

# Basic Operation

## How to Display the Source Control Screen

On the Source Control screen you can find all the control buttons for the selected source.

### Source Control screen



- For how to use each button, see the operation pages of each source.

### How to display the Source Control screen

## DNX-series

### DDX series with navigation unit

- While watching the navigation screen




The **Source Control** screen appears.



- The screen will return to the navigation screen by touching the same part of the Source Control screen.

## DDX-series

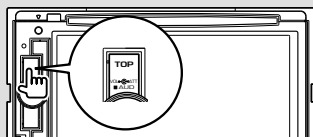

The **Source Control** screen appears.

- While watching the Easy Control screen



The **Source Control** screen appears.

## How to Display Top Menu Screen

Top Menu screen is the entrance to all the functions. You can enter source operation screen as well as various setup menu from this screen.

### Top Menu screen



### How to display the Top Menu screen



Touch the [MENU] button on any screen.

The **Top Menu screen** appears.



- For DDX series  
Pressing the [TOP] button on the front panel also displays the Top Menu screen.

### Buttons on the Top Menu screen

- [NAV ] Switches to the navigation screen.
- [SRC ] Switches to the source control screen of the selected source. The icon of this button changes according to the selected source.
- [TEL ] Switches to the Hands Free Main screen. (page 62)
- [NAV SETUP ] Displays Navigation SETUP screen. (DNX series and DDX series with navigation unit only)  
Refer to the navigation instruction manual for setting up the navigation system.
- [SRC SETUP ] Displays SETUP Menu screen. (page 62)
- [TEL SETUP ] Displays Hands Free SETUP screen. (page 53)
- [ SRC SELECT] Displays Source Select screen. (page 12)
- [] Displays Audio Control Menu screen. (page 59)
- [] Changes the screen skin each time it is pressed. (DNX6960 only)

The buttons listed below are common for many screens.

- [MENU ] Displays Top Menu screen.
- [] Opens the function bar. The buttons shown below appear.
  - [] Displays the currently selected source screen.
  - [] Displays Audio Control Menu screen. (page 59)
  - [] Displays SETUP Menu screen. (page 62)
  - [] Closes the function bar.

## Operation on the Playback Screen of Visual Sources

While watching visual sources, basic operation is possible by touching the screen.

The screen has 4 function areas. The function of each area is different depending on the sources. (Some areas are unavailable for some sources.)

### Playback screen of a visual source



#### Basic operation of each area

- 1 Reverse search.
- 2 Displays Menu control screen (DVD-VIDEO, DVD-VR source), Picture control buttons (sources with picture files), or Zoom control buttons (Video CD). Switches TV band.
- 3 Forward search.
- 4 Displays/ Clears Source Information screen.\*




- For the function of each touching area, see the pages of each source.

### \* Source Information screen



- The information display is cleared automatically after approximately 5 seconds.

### How to display the playback screen

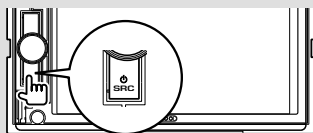

The **Source Select screen** appears.

Touch the icon of the source.



The **Playback screen of a visual source** appears.



- The playback screen may appear directly after touching the source icon on Source Select screen.

## How to Display the Easy Control Screen

Basic operation buttons of the selected source can be displayed on the playback screen of visual sources so that you can control the source without switching the screen.


### Easy Control screen



### Buttons on the Easy Control screen

- [▼] Changes the function as follows by touching the [▼] button.
  - [SCRN] Displays Screen Control screen (page 46).
  - [TEL] Switches to the Hands Free Main screen (page 49).
  - [◀◀], [▶▶], [◀◀], [▶▶], [■], [⏏]
- Buttons for source control. The buttons are different depending on the source. See the operation pages of each source.

### While watching the visual source

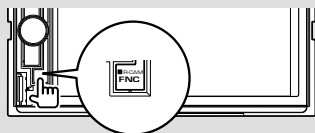

The **Easy control screen** appears.



- Easy Control screen is hidden when you touch the central part of the monitor.

# Watching DVD/Video CD

You can play DVD/Video CD using various functions.



- Set the remote controller mode switch to "DVD" mode before starting operation, see <Remote Controller mode switch> (page 84).

## Playback Screen

Basic functions are available even when the playback screen is displayed.

### 1 Display the Playback Screen

See <Operation on the Playback Screen of Visual Sources> (page 16).

### 2 Operation on the Playback Screen



- 1, 3 Searches for a chapter.
- Searches for a chapter.
- Selects a scene (when PBC is On) or a track (when PBC is Off).
- 2 Displays the Menu Control 1 screen (page 20).
- Displays the Menu Control screen (page 21).
- Displays the Zoom Control screen (page 22).
- 4 Displays/ Clears Source Information screen.



- The information display is cleared automatically after approximately 5 seconds.

## Easy Control Screen

Displays the basic operation buttons on the screen.

### 1 Display the Easy Control Screen

See <How to Display the Easy Control buttons> (page 17).

### 2 Operation on the Easy Control Screen



- 1, 2 Switches to the Playback screen.
- 3 Displays the Source Control screen.
- [<<], [>>]] Fast Forwards or Fast Backwards. Changes the speed (2 times, 3 times, or off) each time the button is touched.
- [|<<], [>>|]] Searches for a chapter.
- Searches for a chapter.
- Selects a scene (when PBC is On) or a track (when PBC is Off).
- [■] Stops playing. When touched twice, the disc is played from its beginning when you play it the next time.
- [▶||] Plays or pauses.

## Source Control Screen

Switches to the source control screen to use various playback functions.

### 1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 14).

### 2 Operation on the Source Control Screen



**[▶||]** Plays or pauses.

**[■]** Stops playing.

When touched twice, the disc is played from its beginning when you play it the next time.

**[▲]** Ejects a disc.

**[◀◀], [▶▶]** Fast Forwards or Fast Backwards.

Changes the speed (2 times, 3 times, or each) each time the button is touched.

**[◀◀], [▶▶]**

**[DVD-VIDEO]** Searches for a chapter.

**[DVD-VR]** Searches for a chapter.

**[Video CD]** Selects a scene (when PBC is On) or a track (when PBC is Off).

**[◀|], [|▶]** **[DVD-VIDEO]**, **[DVD-VR]** Slow Forwards or Backwards.

**[⏏]** Switches to the playback screen.

**[1]** Information display

Title display.

"Title" Title Number Display

"Chap" Chapter Number Display

"Scene"/"Track" Scene/Track Number Display

"▶" Play Mode Display

"T"/"C"/"R"/"P" Play Time Display

Use the [TIME] to change play time display.

[◀◀] When ◀◀ appears, the text display is scrolled by touching it.

### Multi Function



**[⏏]** Closes the multi function bar.

**[⏏]** Opens the multi function bar.

#### **[DVD-VIDEO]**

**[REP]** Switches the Repeat Play operations in the following sequence.

Title Repeat, Chapter Repeat, Repeat Off

**[TIME]** Switches the play time display in the following sequence.

Chapter ("C"), Title ("T"), remaining titles ("R")

#### **[DVD-VR]**

**[REP]** Switches the Repeat Play operations in the following sequence.

Title Repeat, Repeat Off

**[TIME]** Switches the play time display in the following sequence.

Title ("T"), remaining titles ("R")

**[PLST]** Switches between the original mode and Play list mode.

#### **[Video CD]**

**[REP]** Switches the Repeat Play operations in the following sequence.

Track Repeat, Repeat Off (Available when the PBC is off)

**[TIME]** Switches the play time display in the following sequence.

Track ("P"), remaining discs ("R") (Effective only when the PBC function is off)

**[PBC]** Turns the PBC On or Off. (only when VCD Ver 2.0 is in use)

## DVD-VIDEO Disc Menu

Selects an option from the DVD-VIDEO Disc Menu.

### 1 Display the Playback Screen

See <Operation on the Playback Screen of Visual Sources> (page 16).

### 2 Display the Menu Control 1 screen



### 3 Operation on the Menu Control 1 screen



**[Menu]** Calls the Menu.

**[Next]** Displays the Menu Control 2 screen.

**[◀], [▶], [▲], [▼]** Selects a menu option.

**[Enter]** Enters your menu selection.

**[Return]** Returns to the previous menu screen.

**[Top]** Displays the Top Menu.

**[Highlight]** Highlight Control.

**[Exit]** Exits the Menu Control 1 screen.

### 4 Operation on the Highlight Control

Highlight control lets you control DVD Menu by touching the menu button directly on the screen.



- Touching the central part of the monitor also turns on the Highlight Control.
- To cancel Highlight Control, press the [FNC] button.
- The Highlight Control is cleared automatically after approximately 10 seconds.

### 5 Operation on the Menu Control 2 screen



**[Previous]** Displays the Menu Control 1 screen.

**[Angle]** Switches the picture angle.

**[SUB]** Switches the subtitle language.

**[Audio]** Switches the voice language.

**[Zoom]** Displays the Zoom Control screen.

**[Exit]** Exits the Menu Control 2 screen.

### 6 Operation on the Zoom Control screen



**[Zoom]** Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch.

**[◀], [▶], [▲], [▼]** Scrolls the screen in the direction you touch.

**[Return]** Returns to the Menu Control 2 screen.

**[Exit]** Exits the Zoom Control screen.

## DVD-VR Menu Control

Selects an option from the DVD-VR Disc Menu.

### 1 Display the playback screen

See <Operation on the Playback Screen of Visual Sources> (page 16).

### 2 Display the Menu Control screen



### 3 Operation on the Menu Control screen



**[Zoom]** Displays the Zoom Control screen.

**[SUB]** Switches the subtitle language.

**[Audio]** Switches the voice language.

**[Exit]** Exits the Menu Control screen.

### 4 Operation on the Zoom Control screen



**[Zoom]** Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch.

**[◀], [▶], [▲], [▼]** Scrolls the screen in the direction you touch.

**[Return]** Returns to the Menu Control screen.

**[Exit]** Exits the Zoom Control screen.

## Video CD Zoom Control

Displays an enlarged VCD screen.

### 1 Display the playback screen

See <Operation on the Playback Screen of Visual Sources> (page 16).

### 2 Display the Zoom Control screen



### 3 Operation on the Zoom Control screen



**[Zoom]** Changes the zoom ratio at 2 levels (2 times or off) each time you touch.

**[◀], [▶], [▲], [▼]** Scrolls the screen in the direction you touch.

**[Exit]** Exits the Zoom Control screen.

# Music Disc/ Audio File Listening & Video File/ Picture File Watching

You can recall various control screens during playback of CD, audio file, video file and picture file.

- See <List of playable discs> (page 5) for playable discs.
- See <About Audio file> (page 5), <About Video files> (page 5) or <About Picture files> (page 6) for playable files.

## Source Control Screen

Switches to the source control screen to use various playback functions.

### 1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 14).

### 2 Operation on the Source Control Screen



[▶|II] Plays or pauses.

[■] Disc Stops playing.

When touched twice, the disc is played from its beginning when you play it the next time.

[▲] Disc Ejects the disc.

USB Disables the USB device.

When "No Device" is shown, the USB device can be removed safely. If you wish to play it again while the USB device is connected, touch it again.

[◀◀], [▶▶] Fast Forwards or Fast Backwards.

[◀◀], [▶▶] Selects a track/ file.

[◀], [▶] Selects a folder.

[List]

Displays the folder list or play list. (page 24)

[▶] Switches to the playback screen.

[1] Information display

Selects the Disc Text or Track Text.

Selects Folder Name, File Name, Title, Artist Name, or Album Name.

"Track" Track Number Display

"■" Folder Number Display

"■" File Number Display

"#### / ####" Total number of file in the folder and the file number display

"▶" Play Mode Display

"P"/ "R" Play Time Display

Use the [TIME] to change play time display.

[◀◀] When appears, the text display is scrolled by touching it.

## Multi Function



[1/2] Switches the multi function display.

[■] Closes the multi function bar.

[▶] Opens the multi function bar.

[REP] Repeats the present track.

[RDM] Starts or stops Random Play (to play music in random order).

[TIME] Switches the play time display between Track ("P"), and Disc Remaining Time ("R").

Next page ▶



**[REP]** Repeats the present file or data.

**[FREP]** Repeats the music or data of the present folder.

**[RDM]** Starts or stops Random Play (to play files of the present folder in random order). Not available if there are only picture files.

**[4Line]/ [2Line]** Switches the number of lines displayed in the Information Display.

**[FOLD]/ [FLIST]** Displays the folder list.

**[PLIST]** in Displays the play list.

**[SLIDE]** Displays images in the folder currently being played one after another. If there is no image in the folder currently being played, initial background is displayed. For information on setting the image display time, see <Disc Setup> (page 78) or <USB Setup> (page 79).

**[INFO]** Displays music information (such as Tag and content property) of Audio file being played.

Displays information of file being played.

**[LINK]** in Searches for another song of the currently selected artist. See <Link Search> (page 26).

**[Device]** Selects the connected USB device (or a partition). See <USB Device Select> (page 25).

## List Select

**Folder list:** Searches folders and Audio/ Video/ Picture files stored in media and devices according to hierarchy.

**Play list:** Lists and searches music contained in the USB device.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 23).

### 2 Start List Select



- Touching [List] displays the previously used Folder list or Play list.

### 3 Select a file

#### Folder list



**1** Folder opens when touched, and the files in the folder are played.

**[◀]** When **◀** appears, the text display is scrolled by touching it.

**[↑] [ROOT]** Moves to the top hierarchy level.

**[↑] [UP]** Moves up a hierarchy level.

**[↑] [TOP]** Moves to the top folder.

**[▶] [CUR]** Displays the currently playing folder.

**[CTRL]** Returns to the Source Control screen.

## Play list Audio File in USB



1 Switches to the lower level of the category.

[◀] When ◀ appears, the text display is scrolled by touching it.

[▶ ALL] Lists all the music in the selected category.

[↑ UP] Moves to the upper level of the category.

[↑ TOP] Moves to the top category.

[▶ CUR] Displays the currently playing category.

[CTRL] Returns to the Source Control screen.

## Scrolls to the position of the specified initial



Scrolls to the selected initial.

## USB Device Select

Selects the connected USB device (or a partition).

### 1 Display the Source Control Screen

See <Source Control Screen> (page 23).

### 2 Display the USB Device Select Screen



### 3 Select a USB device



1 Selects a device or partition.

[↑ UP] Returns to the Device Selection screen.

[◀] When ◀ appears, the text display is scrolled by touching it.

[CTRL] Returns to the Source Control screen.

## Link Search (Audio file in USB)

Searches for another song of the currently selected artist.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 23).

### 2 Start Link search



### 3 Select a song



1 Plays the touched song.

[◀] When ◀ appears, the text display is scrolled by touching it.

[TOP] Moves to the top category.

[CUR] Displays the currently playing category.

[CTRL] Returns to the Source Control screen.

### Scrolls to the position of the specified initial



Scrolls to the selected initial.

## Playback Screen (Video file, Picture file)

Basic functions are available even when the playback screen is displayed.

### 1 Display the Playback Screen

See <Operation on the Playback Screen of Visual Sources> (page 16).

### 2 Operation on the Playback Screen



1, 3 Searches for a file.

2 [JPEG] Displays the Picture Control screen (page 27).

[MPG DivX] Displays the Menu Control screen (page 28).

4 Displays/ Clears Source Information screen.



- The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated.


## Easy Control Screen (Video file, Picture file)

Displays the basic operation buttons on the screen.

### 1 Display the Easy Control Screen

See <How to Display the Easy Control Screen> (page 17).

### 2 Operation on the Easy Control Screen

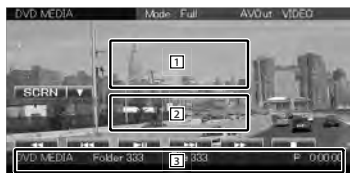

[1], [2] Switches to the Playback screen.

[3] Displays the Source Control screen.

[◀▶], [▶▶] **JPEG, MPEG/DVX**  
Fast Forwards or Fast Backwards.

[◀◀], [▶▶] Searches for a file.  
During the slide show of picture files, touching the buttons searches the audio file.

[■] **Disc** Stops playing.  
When touched twice, the disc is played from its beginning when you play it the next time.

[▶||] Plays or pauses.

## Picture Control

Adjusting the picture display.

### 1 Display the Playback Screen

See <Operation on the Playback Screen of Visual Sources> (page 16).

### 2 Display the Picture Control Screen



### 3 Adjust the picture display



[↕] Reverses the picture horizontally.

[↶] Rotates counter clockwise.

[↷] Rotates clockwise.

[Exit] Ends Picture Control.

## Movie Menu Control

Selects an option from the Movie Menu.

### 1 Display the playback screen

See <Operation on the Playback Screen of Visual Sources> (page 16).

### 2 Display the Menu Control screen



### 3 Operation on the Menu Control screen



**[SUB]** Switches the subtitle language.

**[Audio]** Switches the voice language.

**[Exit]** Exits the Menu Control screen.

# iPod Control

You can control and listen to songs in your iPod by connecting an iPod to this unit with KCA-iP301V (optional accessory). You can also display video contents on this unit when connecting an iPod with video.

## Playback Screen

Basic functions are available even when the playback screen is displayed.

### 1 Display the Playback Screen

See <Operation on the Playback Screen of Visual Sources> (page 16).

### 2 Operation on the Playback Screen



- 1, 3 Selects the music/video.
- 2 Not effective
- 4 Displays/ Clears Source Information screen.



- The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated.
- Remove all accessories such as headphone before connecting an iPod. You may not be able to control the iPod if you connect it with accessories attached.
- When you connect an iPod to this unit, playback starts from the song you were playing on the iPod itself (Resume Function).
- If the played song is not a video content, "No Video Signal" is displayed on the video screen.

## Easy Control Screen

Displays the basic operation buttons on the screen.

### 1 Display the Easy Control Screen

See <How to Display the Easy Control Screen> (page 17).

### 2 Operation on the Easy Control Screen



- 1, 2 Switches to the Playback screen.
- 3 Displays the Source Control screen.
- [<<], [>>] Fast Forwards or Fast Backwards.
- [|<<], [>>|] Music/Video Search.
- [▶||] Plays or pauses.

## Source Control Screen

Switches to the source control screen to use various playback functions.

### 1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 14).

### 2 Operation on the Source Control Screen



[▶||] Plays or pauses.

[◀◀], [▶▶] Fast Forwards or Fast Backwards.

[◀◀], [▶▶] Selects Music/Video.

[List] Displays the iPod list. (page 31)

[▶] Switches to the playback screen.

[1] Information display  
Selects the Title, Artist Name, Album Name or iPod Name.

"##### / #####" Total number of music in the iPod and the music number display

"▶" Play Mode Display

"P" Play Time Display

[◀◀] When ◀◀ appears, the text display is scrolled by touching it.

## Multi Function



[1/2] Switches the multi function display.

[▶] Closes the multi function bar.

[▶] Opens the multi function bar.

[MUSIC] Displays the list of music category.

[VIDEO] Displays the list of video category.

[REP] Repeats the present file or data.

[RDM]\* Starts or stops Random play.

[ARDM]\* Starts or stops Album Random Play (plays randomly from current album).

[INFO] Displays information screen of music/video being played.

[LINK]\* [MUSIC] Searches for another song of the currently selected artist. See <Link Search> (page 31).



\* Disabled when VIDEO is being played.

## iPod List

Lists and searches music/video contained in the iPod.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 30).

### 2 Display the iPod List



### 3 Select music/video



#### 1 Categories and music are listed.

Touch a category name to move to its lower level. If music title is displayed, the music is played by touching it.

When **▶||** is appeared, all the music in its category is played by touching the button.

[◀] When ◀ appears, the text display is scrolled by touching it.

[↑] **UP** Returns to previous category.

[↑] **TOP** Moves to the top category.

[▶] **CUR** Displays the currently playing category.

[CTRL] Returns to the Source Control screen.

#### Scrolls to the position of the specified initial



Scrolls to the selected initial.

## Link Search (Music file)

Searches for another song of the currently selected artist.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 30).

### 2 Start Link search



### 3 Select a song



#### 1 Plays the touched song.

[◀] When ◀ appears, the text display is scrolled by touching it.

[↑] **TOP** Moves to the top category.

[▶] **CUR** Displays the currently playing category.

[CTRL] Returns to the Source Control screen.

#### Scrolls to the position of the specified initial



Scrolls to the selected initial.

# Radio Listening

Various control screens appear in the Tuner Source mode.



- Set the remote controller mode switch to "AUD" mode before starting operation, see <Remote Controller mode switch> (page 84).

## Source Control Screen

Switches to the source control screen to use various functions.

### 1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 14).

### 2 Operation on the Source Control Screen



**[FM]** Switches to the FM1/2/3 band.

**[AM]** Switches to the AM band.

**[TI]\*1** Turns the Traffic Information function On or Off.

See <Traffic Information>, (page 35).

**[◀▶], [▶▶], [▶▶▶]** Tunes in a station.

Use the [SEEK] to change the frequency.

**[List]** Display the Tuner Preset List screen. See <Preset Select> (page 33).

**1** Information display  
Selects the Program Service Name, Title & Artist name, Station Name, Radio Text Plus, or Radio Text.

**"FM"/ "AM"** Band display

**"Preset"** Preset number

**"MHz"/ "kHz"** Frequency display

**[◀▶]** When ◀▶ appears, the text display is scrolled by touching it.

## Multi Function



**[1/3]** Switches the multi function display.

**[Close]** Closes the multi function bar.

**[Open]** Opens the multi function bar.

**[P1] – [P6]** When [P1] to [P6] buttons appear, you can recall the stations on memory. For memory of broadcasting stations, see <Auto Memory> (page 33) or <Manual Memory> (page 34).

**[SEEK]** Switches the Seek mode.

The mode is switched in the following order each time you touch the button.

Display	Setting
"AUTO1"	Tunes in a station with good reception automatically.
"AUTO2"	Tunes in stations in memory one after another.
"MANU"	Switches to the next frequency manually.

**[AME]** Selects the Auto Memory mode.

See <Auto Memory> (page 33).

**[PRE]** Lists and selects memorized station.

**[4Line]/ [2Line]\*1** Switches the number of lines displayed in the Information Display.

**[PTY]\*1** Searches station by program type.

See <Search by Program Type> (page 36).

**[CRSC]** Turns the CRSC function On or Off.

**[NAME]** Sets a name to the station. See <Set Station Name> (page 35).

**[TEXT]** Displays Radio Text screen. See <Radio Text> (page 34).



- \*1 North American sales area only.

## Preset Select

Lists and selects memorized station.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 32).


### 2 Display the Tuner Preset List Screen



### 3 Select a station



1 Memorized stations are displayed. Touch to tune in.

[DISP]\*1  Switches the list display name to Station name or Program Service Name.

[CTRL] Returns to the Source Control screen.



• \*1 North American sales area only.

## Auto Memory

Stores stations with good reception in memory automatically.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 32).

### 2 Select a band you wish to store in memory



### 3 Select the Auto Memory mode



### 4 Start Auto Memory



Auto Memory terminates when 6 stations are stored or when all stations are tuned in.



• The operation ends automatically if you do not operate within 10 seconds.

## Manual Memory

Stores the current receiving station in memory.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 32).

### 2 Select a station you wish to store in memory



### 3 Store in memory



Continue to touch until the memory number appears.

## Radio Text

You can display the radio text. (Only when receiving the FM broadcast)

### 1 Select a station

See <Source Control Screen> (page 32).

### 2 Display the radio text



- 1 Selects the Program Service Name, Title & Artist name, Station Name, Radio Text Plus, or Radio Text for text display.

[◀] When ◀ appears, the text display is scrolled by touching it.

[▲], [▼] Scrolls the text display.

## Set Station Name

Assigns a name to a station.

### 1 Tune in to the station to name

See <Source Control Screen> (page 32).

### 2 Start Name set



### 3 Enter the name

See <Character Entry> (page 45) for information on how to enter a name.

### 4 End Name set



## Traffic Information (North American sales area only)

When a traffic bulletin starts, any source is switched to the traffic information and it is displayed automatically.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 32).

### 2 Set the Traffic information mode



### When the traffic bulletin starts...

The Traffic Information screen appears automatically.

### Traffic Information screen



- It is necessary to have Traffic Information function set to On in order to have the Traffic Information screen appear automatically.
- During the reception of traffic information the adjusted volume is automatically remembered, so that the next time it switches to traffic information the volume level is that from the previously adjusted and remembered level.

## Search by Program Type (North American sales area only)

A program is tuned when you set its program type. (Only when receiving the FM broadcast)

### 1 Display the Source Control Screen

See <Source Control Screen> (page 32).

### 2 Enter Program Type Search mode



### 3 Select a Program Type



1 Program Type is displayed. Touch to select a Program Type.

**[Search]** Searches for the program type.  
It is displayed when the Program type is selected.

### 4 Search a station of the selected Program Type



# SIRIUS/XM Control (North American sales area only)

Various control screens appear in the Satellite radio source mode. (only with the optional accessory Satellite radio connected. To connect the SIRIUS tuner, a conversion cable CA-SR20V (optional accessory) is necessary and to connect the XM tuner, an XM interface Box KCA-XM100V (optional accessory) is necessary.)



- This document uses the SIRIUS display as an example.

## Source Control Screen

Switches to control screen to use various functions.

### 1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 14).

### 2 Operation on the Source Control Screen



**[BAND]** Switches the band.

**[◀◀], [▶▶]** Tunes in a channel.

Use the **[SEEK]** to change the channel seek mode.

**[List]** Display the Category List screen. (page 38).

#### 1 Information display

Displays information concerning music being played.

**SIRIUS** Changes the display from Channel Name, Song Title Name, Artist Name, Composer Name, to Category Name.

**XM** Changes the display from Channel Name, Artist Name, Song Title Name, to Category Name.

Displays the ID number when Channel 0 is selected.

**SIRIUS** Displays the SIRIUS ID.

**XM** Displays the RADIO ID.

**"SR"/ "XM"** Band display

**"Preset"** Preset number

**"ch"** Channel display

**[◀]** When appears, the text display is scrolled by touching it.

## Multi Function



**[1/2]** Switches the multi function display.

Closes the multi function bar.

Opens the multi function bar.

**[P1] – [P6]** When [P1] to [P6] buttons appear, you can recall the channel on memory. For memory of channel stations, see <Channel Memory> (page 38).

**[SEEK]** Switches the Seek mode.

The mode is switched in the following order each time you touch the button.

Display	Setting
"SEEK1"	Tunes channels one after the other.
"SEEK2"	Selects channels in memory one after the other.

**[DIR]** You can tune in by entering the desired channel number. See <Direct Channel Search> (page 39).

**[CATE]** You can tune in by specifying the desired category. See <Channel Search> (page 38).

**[SCN]** Starts or stops Channel Scan (that tunes channels one after the other).

**[INFO]** Displays the program information screen.

## Channel Search

Specifying the desired category and selecting a channel.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 37).

### 2 Display the Category List Screen



### 3 Select a category



#### 1 Selects a category.

Displays all the channels in the selected category.

[◀] When ◀ appears, the text display is scrolled by touching it.

[All Channel] Displays all the channels.

[CTRL] Returns to the Source Control screen.

### 4 Select a channel



#### 1 Selects a channel.

Tunes in the selected channel.

[Info Change]  Switches the sequence of the list.

Changes the display from Channel Name, Category Name, Song Title, Artist Name, to Composer Name.

[↑ UP] Display the category list.

## Channel Memory

Stores the current receiving channel in memory.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 37).

### 2 Select a channel you wish to store in memory



### 3 Store in memory



Continue to touch until the memory number appears.

## Direct Channel Search

Tuning in by entering the desired channel number.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 37).

### 2 Start Direct Channel Search



### 3 Enter the channel number



1 Enters the channel number.

**[Cancel]** Cancels the direct channel search.

**[Clear]** Clears the channel number.

### 4 Tune in the channel



# HD Radio™ Control

Various control screens appear in the HD Radio Source mode. (only with the optional accessory HD Radio tuner connected)

## Source Control Screen

Switches to the source control screen to use various functions.

### 1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 14).

### 2 Operation on the Source Control Screen



[HD FM] Switches to the HD FM1/2/3 band.

[HD AM] Switches to the HD AM band.

[◀◀], [▶▶] Tunes in a station.

Use the [SEEK] to change the frequency switching.

[CH ▼], [CH ▲] Selects a channel (program).

1 Information display  
Displays the information of the currently listening station.

"FM"/ "AM" Band display

"Preset" Preset number

"MHz"/ "kHz" Frequency display

"HD" Channel display

"Tag"\* When song information can be registered. (page 43)

[◀◀] When ◀◀ appears, the text display is scrolled by touching it.

## Multi Function



[1/2] Switches the multi function display.

[◀] Closes the multi function bar.

[▶] Opens the multi function bar.

[P1] – [P6] When [P1] to [P6] buttons appear, you can recall the stations on memory. For memory of broadcasting stations, see <Auto Memory> (page 41) or <Manual Memory> (page 41).

[SEEK] Switches the Seek mode.

The mode is switched in the following order each time you touch the button.

Display	Setting
"AUTO1"	Tunes in a station with good reception automatically.
"AUTO2"	Tunes in stations in memory one after another.
"MANU"	Switches to the next frequency manually.

[AME] Selects the Auto Memory mode.  
See <Auto Memory> (page 41).

[DIR]\* You can tune in by entering the desired frequency or channel number. See <Direct Search> (page 42).

[4Line]/ [2Line] Switches the number of lines displayed in the Information Display.

[TTL] Displays the tuned in program information.

[RCV] The Receive mode switches in the following order. (page 42)



\* KTC-HR300 (optional accessory) connected only.

## Auto Memory

Stores stations with good reception in memory automatically.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 40).

### 2 Select a band you wish to store in memory



### 3 Select the Auto Memory mode



### 4 Start Auto Memory



Auto Memory terminates when 6 stations are stored or when all stations are tuned in.



- The operation ends automatically if you do not operate within 10 seconds.

## Manual Memory

Stores the current receiving station in memory.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 40).

### 2 Select a station you wish to store in memory



### 3 Store in memory



Continue to touch until the memory number appears.

## Receive mode

Sets the radio broadcasts receive mode.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 40).

### 2 Display the Receive mode screen



### 3 Select the receive mode



**[Receive Mode]** The Receive mode switches in the following order.

"Auto": Automatically tunes to analog broadcast when there is no digital broadcast.

"Digital": Digital broadcasts only.

"Analog": Analog broadcasts only.

## Direct Search

Tuning in by entering the desired frequency or channel number.

KTC-HR300 (optional accessory) connected only.

### 1 Display the Source Control Screen

See <Source Control Screen> (page 40).

### 2 Start Direct Search



### 3 Enter the frequency or channel number



1 Enters the frequency or channel number.

**[Mode]** Switches the search mode to Frequency or Channel.

**[Cancel]** Cancels the direct search.

**[Clear]** Clears the frequency or channel number.

### 4 Tune in the frequency or channel




## iTunes Tagging (HD Radio™ Tagging)

Using an iTunes Tagging enabled HD Radio you can tag your music. When you hear a song you enjoy on your local HD Radio station, you only have to press the [TAG] button for at least 1 second. The song's information will then be saved on this unit. The saved songs will then show up in a playlist called "Purchased" in iTunes the very next time you sync your iPod to your computer. So then you just need to click and then easily buy and download the song you were tagging directly from the Apple iTunes Music Store.

KTC-HR300 (optional accessory) connected only.

### Registers a tag

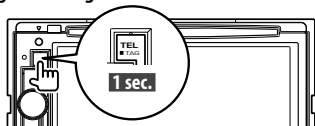

### The memory usage can be checked

#### 1 Display the Source Control Screen

See <Source Control Screen> (page 40).

#### 2 Display the Information Screen



#### 3 The memory usage can be checked



Select the "Tagging Information" display.



- Up to 50 TAGs (song's information) can be registered to this unit. When iPod is connected, the TAG information registered to this unit is transferred to the connected iPod.

# Bluetooth Audio Control (DNX5160/DDX516)

You can listen to audio files stored in Bluetooth audio player and cell-phone. It is necessary to connect the optional Bluetooth unit KCA-BT200.



- You need to register your audio player and cell-phone to your Bluetooth Unit beforehand. Make sure to read the instruction manual of the Bluetooth Unit as well.

## Before Use

- You need to register your audio player and cell-phone before using it with this unit. For more details, see <Registering Bluetooth Unit> (page 70).
- If you have registered two or more audio players or cell-phones, you need to select one of them. For more details, see <Bluetooth Unit Connection> (page 72).
- Sound output speaker can be set. See <Bluetooth Hands-Free/Audio Output Setup> (page 72).

## Source Control Screen

Switches to control screen to use various functions.

### 1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 14).

### 2 Operation on the Source Control Screen



- Plays.
- Stops playing.
- Pauses.
- Selects a file.



- If the Bluetooth Audio player does not support AVRCP profile, buttons are not displayed. Operate from the Audio player.

## Character Entry

### Character Entry screen



**[I]** Enters characters.

**[◀], [▶]** Shifts the cursor.

**[▲], [▼]** Scrolls up or down the character button display.

**[QWE]/ [ABC]** Sets the key layout of the character buttons.

ABC : Alphabetical key layout.

QWE : Qwerty key layout.

**[Clear]** Clears the character.

If you erase a character, locate the cursor on it and touch this button.

If touched more than 1 second, all the input characters are erased.

**[Space]** Enters a space.




- You can enter characters only after you have applied the parking brake.

## Muting Audio Volume upon Reception of Phone Call

### When a telephone call is received...

The Phone Call ("CALL") screen appears, and system is paused.

### Phone Call ("CALL") screen

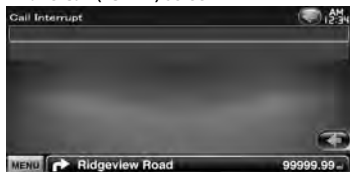

### When the call ends...

#### Hang up the phone.

The system resumes playing automatically.



- To use the TEL Mute feature, you need to hook up the MUTE wire to your telephone using a commercial telephone accessory. Refer to <INSTALLATION MANUAL>.
- Playback of the source output at the AV OUTPUT port may not be paused even a call comes in.

# Screen Control

Setting the monitor screen.

## Screen Control

### 1 Display the Easy Control Screen

See <How to Display the Easy Control Screen> (page 17).

### 2 Display the Screen Control Screen



### 3 Adjust the picture quality



**[Bright]** Brightness Control

**[Tint]** Tint Control

Displayed for an NTSC system image on Video, iPod, or Rear View Camera.

**[Color]** Color Control

Displayed on Video, iPod or Rear View Camera screen only.

**[Contrast]** Contrast Control

**[Black]** Black Level Adjustment

**[Sharpness]** Sharpness control

Displayed on Video, iPod, USB or Rear View Camera screen only.

**[Dimmer]** Dimmer Mode Setup

"ON": The display dims.

"OFF": The display doesn't dim.

"SYNC": Turning the Dimmer function On or Off when the vehicle light control switch is turned On or Off.

"NAV-SYNC": Turning the Dimmer function On or Off according to the Navigation Day/Night display setting. (DNX series and DDX series with navigation unit only)

**[Mode]** Selects a screen mode.

 
You can select any of the following screen mode.

"Full", "Just", "Zoom", "Normal"




- The Screen Control screen is displayed only when you have applied the parking brake.
- The picture quality can be set for each source.
- You can set image quality of screens such as menu from <Screen Adjustment> (page 69).


#### Full picture mode ("Full")




#### Justify picture mode ("Just")

 

#### Zoom picture mode ("Zoom")

 

#### Normal picture mode ("Normal")

 

# Hands-Free Phoning

Various functions can be used in the Hands Free control mode.

The following models need to connect the optional Bluetooth unit KCA-BT200:

DNX5160 and DDX516



- You need to register your cell-phone to your Bluetooth Unit beforehand. Make sure to read the instruction manual of the Bluetooth Unit as well.
- To use the Phonebook, it must have been downloaded from the cell-phone. For more details, see the instruction manual of your Bluetooth Unit and your cell-phone.

## Before Use

- You need to register your cell-phone before using it with this unit. For more details, see <Registering Bluetooth unit> (page 70).
- If you have registered two or more cell-phones, you need to select one of them. For more details, see <Bluetooth Unit Connection> (page 72).
- To use the Phone Book, it must be downloaded to this unit in advance. For details, see <Downloading the Phonebook> (page 47).
- The units supporting the Bluetooth function have been certified for conformity with the Bluetooth Standard following the procedure prescribed by Bluetooth SIG. However, it may be impossible for such units to communicate with your cell-phone depending on its type.
- For the cell-phones verified for compatibility, access the following URL:  
<http://www.kenwood.com/cs/ce/bt/>
- Sound output speaker can be set. See <Bluetooth Hands-Free/Audio Output Setup> (page 72).

## Downloading the Phonebook

Downloads the phonebook data from the cell-phone to this unit so that you can use the Phonebook of this unit.

### 1 By operating the cell-phone, send the phonebook data to this unit

### 2 By operating the cell-phone, start the hands-free connection



- For the cell-phones which support auto-download of phonebook:  
If the phonebook is not downloaded automatically for some reasons, follow the procedure above to download manually.
- For how to operate the cell-phone, refer to the Instruction Manual that comes with your cell-phone.
- Up to 1000 phone numbers can be registered for each registered cell-phone.
- Up to 25 (DNXS160/DDX516 : 32) digits can be registered for each phone number along with up to 50\* characters representing a name.  
(\* 50: Number of alphabetical characters. Fewer characters can be input depending on the type of characters.)
- Depending on the type of your cell-phone, the following restrictions are placed:
  - The phonebook data cannot be downloaded normally.
  - Characters in the Phonebook are garbled.
  - The phonebook data cannot be downloaded normally if it contains images. It may take several hours to a full day to download the phone book depending on the total image size.
- To cancel downloading of the phonebook data, operate the cell-phone.

### Receiving a Call



[📞] Answering a Phone Call

[📞] Rejecting an Incoming Call



- While monitoring the rear view camera, this screen is not displayed even a call comes in. To display this screen, press the [TEL] button or return the shift knob of car to the drive position.

### During a Call



[🔊] Switches the voice output between phone and speaker.

[DTMF] Outputs dial tone. See <Controlling Tone-based Services> (page 52).

[📞] Disconnecting a call

### Call Waiting




[📞] • Answering another incoming call with the current call suspended  
• Switching between the current call and waiting call  
Each touch of this button switches the calling party.

[📞] • Answering another incoming call after terminating the current call  
• Answering the waiting call after terminating the current call

## Making a Call

Displaying the control screen and using various functions.

### 1 Display the Hands-Free Control screen

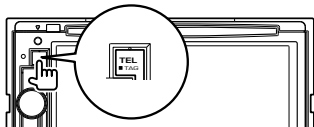

### 2 Select a dialing method



**1** Calls the displayed phone number. If you have registered a phone number in the Phonebook, the destination person name is displayed.

**[Redial]** Calls the displayed phone number.

**[Redial]** Displays the previously called phone number.

**[Preset1], [Preset2], [Preset3]** Displays the preset phone number.  
For information on how to preset a phone number, see <Phone Number Preset> (page 56).

**[Phonebook]** Displays the Search for Phonebook screen. See <Calling by Phonebook> (page 50).

**[Outgoing Calls]** Displays the Outgoing Calls screen. See <Making a Call Using Call Records> (page 51).

**[Incoming Calls]** Displays the Incoming Calls screen. See <Making a Call Using Call Records> (page 51).

**[Missed Calls]** Displays the Missed Calls screen. See <Making a Call Using Call Records> (page 51).



**[Direct Number]** Displays the Dialing Display screen. See <Calling by Entering a Phone Number> (page 50).

**[Voice]** Starts voice recognition.  
See <Calling by Voice Recognition> (page 51).

**[BT SETUP]** Displays the Bluetooth SETUP screen. See <Registering Bluetooth Unit> (page 70).

**[TEL SETUP]** Displays the Hands Free Setup screen. See <Setting Up the Hands-Free Phone> (page 53).



- While your car is moving, some functions are disabled due to safety reasons. The buttons associated with the disabled functions become ineffective if pressed.
- When the Hands-Free Control screen appears, the name of the connected cell-phone is displayed for 5 seconds.
- The status icons such as  and  displayed on the control unit may discord from those displayed on the cell-phone.
- Setting the cell-phone in the private mode can disable the hands-free function.

## Calling by Phonebook

You can call a person using his/her phone number that you have registered in the Phonebook.

### 1 Display the Hands-Free Control screen

See <Making a call> (page 49).

### 2 Display the Phonebook screen



### 3 Select the name to call



- 1 Phonebook data list.
- 2 Displays the Phonebook beginning with the name whose first character you have touched.

[◀] When ◀ appears, the text display is scrolled by touching it.

### 4 Select the phone number to call



### 5 Make a call



- This function is unavailable while driving.
- To use the Phonebook, it must have been downloaded from the cell-phone. For more details, see the instruction manual of your Bluetooth Unit and your cell-phone.
- Initials including no corresponding name will not be displayed.
- During search, a non-accent character such as "u" is searched for instead of an accent character such as "ü".

## Calling by Entering a Phone Number

Makes a call by entering a phone number.

### 1 Display the Hands-Free Control screen

See <Making a call> (page 49).

### 2 Display the number input screen



### 3 Enter a phone number



- 1 Enters the desired phone number using the keypad.

[Clear] Clears the number.

### 4 Make a call



Press the green phone icon to dial the entered phone number.



- You can input up to 25 (DNX5160/DDX516 : 32) digits.
- This function is unavailable while driving.

 
## Making a Call Using Call Records

Calls by selecting a phone number from the outgoing, incoming, or missed calls list.

### 1 Display the Hands-Free Control screen


See <Making a call> (page 49).

### 2 Display the Outgoing Calls, Incoming Calls, or Missed Calls screen



### 3 Select from calls list

Example : Outgoing Calls screen

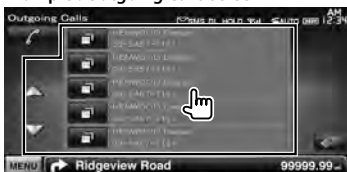

Calls the selected phone number.

### 4 Make a call



- The Outgoing Calls list screen, Incoming Calls list, or Missed Calls list screen shows the list of the calls originated from or received at this unit. They are not the ones stored in the cell-phone memory.

## Calling by Voice Recognition

Calls by recognizing the registered voice.



- In order to perform voice recognition, voice must be registered in the Phonebook data. See <Voice Registration> (page 54). Or, to perform voice recognition by Phone number category (Home, Office, Mobile etc.) of Phonebook data, a key word voice must be registered. See <Key Word Voice Registration> (page 55).

### 1 Display the Hands-Free Control screen


See <Making a call> (page 49).

### 2 Display the Voice Recognition screen



- If there is only one phone number assigned under the registered name

### 3 Say the name registered in the Phonebook

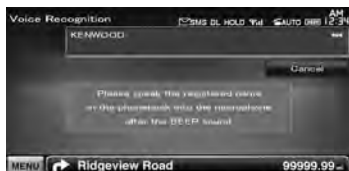

When a beep is heard, say the name within 2 seconds.

### 4 Make a call



Next page ►

■ *If there are more than one phone numbers assigned under the registered name*

**5 Say the key word registered for the category**



When a beep is heard, say the key word within 2 seconds.

**6 Make a call**



■ *If there are more than one phone numbers registered under the same name, go to step 7.*

**7 Select a Phone number category**



Selects the Phone number category.

**8 Make a call**



- A message is displayed if the voice is not recognized. Read the message for the further operation.

**Controlling Tone-based Services**

Uses tone base service using DTMF (Dual Tone Multi Frequency).

**1 Display the Talking screen**

See <Calling by Entering a Phone Number> (page 50).

**2 Display the DTMF input screen**



**3 You can send tones during a call**



## Setting Up the Hands-Free Phone

The Hands-Free system can be set as follows.

### 1 Display the Hands-Free Control screen

See <Making a call> (page 49).

### 2 Display the Hands Free Setup screen



### 3 Set each item



**[Auto Response]** Sets an automatic response time to pick-up an incoming call.

(☑ "ON")  
DNX6960/ DNX6160/ DNX6020EX/  
DNX6460BT/ DDX616/ DDX6046BT : "OFF"  
DNX5160/ DDX516 : "8")

"OFF": This function is disabled.

"0-99": Sets the incoming call ringing duration (in seconds).

**[Call Beep]** Sets the beep of the incoming call.

(☑ "ON")

"ON": Beep is heard.

"OFF": Beep is canceled.

**[SMS Receive Beep]** Sets the beep of the incoming SMS. (☑ "ON")

"ON": Beep is heard.

"OFF": Beep is canceled.

**[Phone Information Use]** Sets whether to use cell-phone phonebook, outgoing calls list, incoming calls list and missed calls list.

(☑ "ON")

"ON": Yes.

"OFF": No.

**[SMS Use]** Sets the SMS function. (☑ "ON")

"ON": Use SMS function.

"OFF": SMS not available.

**[Key Word]** Registers the voice to select phone number category with voice recognition.

See <Key Word Voice Registration> (page 55).

**[Use Phone Voice Recognition]**

Sets whether to dial using the phone voice recognition function. (☑ "ON")

**[Echo Cancel Level]\*** Adjusts the level of echo cancelling function. (☑ "15")

**[Microphone Level]\*** Adjusts the sensitivity of the microphone for a telephone call. (☑ "8")

**[Noise Reduction Level]\*** Adjusts the level of the noise reduction and the quality of the resulting speech signal. (☑ "4")

**[Restore]\*** Restores the [Echo Cancel Level], [Microphone Level], or [Noise Reduction Level] value to the initial value.



• Either the time interval for automatic answer set on this unit or the time interval set on the cell-phone, whichever is shorter, takes effect.

• \* The items with asterisk (\*) are not appeared on the following models:

DNX5160 and DDX516


## Voice Registration

Registers voice for voice recognition in Phonebook. Up to 35 voices can be recorded in one cell-phone.

### 1 Display the Phonebook Detail screen

Go through the procedure of <Calling by Phonebook> (page 50).

### 2 Select the name to register

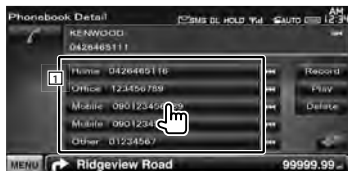

1 Selects a name.

**[Record]** Registers the voice for voice recognition to the selected Phonebook. If there are already 35 voice tags registered in the same cell-phone, the [Record] button is deactivated.


**[Play]** Plays the voice registered in the selected Phonebook data.

**[Delete]** Deletes the voice registered in the selected Phonebook data.  
Touch to display the confirmation screen.  
Touch [Yes] to delete or [No] to cancel.

### 3 Display the voice registration screen



### 4 Say the name to register (1st try)

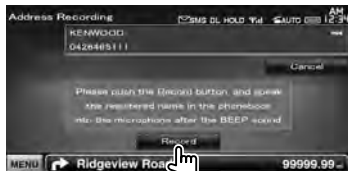

Say within 2 seconds after the Beep.

### 5 Say the name to register (2nd try)

Say within 2 seconds after the Beep.

### 6 End voice registration



- A message is displayed if the voice is not recognized. Read the message for the further operation.
- Repeat from 1st try if the voice is different from the 1st try.

## Key Word Voice Registration

Registers the voice to select the Phone number category by Voice Recognition.

### 1 Display the Hands Free Setup screen

See <Setting Up the Hands-Free Phone> (page 53).

### 2 Display the Key Word List screen



### 3 Select the Phone number category to register



1 Selects the Phone number category. "REC" turns on for data with voice for voice recognition already registered.

**[Record]** Registers voice for the selected Phone number category.

**[Play]** Plays the voice registered for the selected Phone number category.

**[Delete]** Deletes the voice registered for the selected Phone number category. Touch to display the confirmation screen. Touch [Yes] to delete or [No] to cancel.




- [Play], [Delete]  
Only for DNX5160 and DDX516 with optional Bluetooth unit KCA-BT200 connected.

### 4 Display voice registration screen



### 5 Say the phone category to register (1st try)

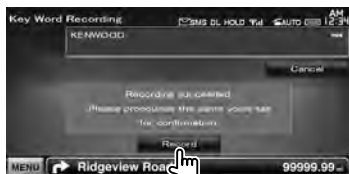

Say within 2 seconds after the Beep.

### 6 Say the phone category to register (2nd try)

Say within 2 seconds after the Beep.

### 7 End voice registration



- A message is displayed if the voice is not recognized. Read the message for the further operation.
- Repeat from 1st try if the voice is different from the 1st try.

## Phone Number Preset

Registers frequently used phone number to Hands Free control screen preset button.

### 1 Display the Hands-Free Control screen

See <Making a call> (page 49).

### 2 Select the Preset number to register



1 sec.



- If no Preset number is registered, pressing this button momentarily moves to the step 3.

### 3 Select the search destination of the number to register



[SMS] Registers from SMS received message list.

[SMS] Registers from SMS sent message list.

[Phonebook] Registers from Phonebook.

[Outgoing Calls] Registers from outgoing calls list.

[Incoming Calls] Registers from incoming calls list.

[Missed Calls] Registers from missed calls list.

[Direct Number] Registers by entering phone numbers.

[Voice] Registers voice for voice recognition to preset number.

[Memory] Registers the currently displayed phone number.

[Delete] Deletes the currently displayed phone number. Touch to display the confirmation screen. Touch [Yes] to delete or [No] to cancel.

### 4 Search phone number to register with each function

### 5 Register phone number




## SMS (Short Message Service)

Uses SMS function.

### 1 Display the Hands-Free Control screen

See <Making a call> (page 49).

### 2 Display the SMS Select screen

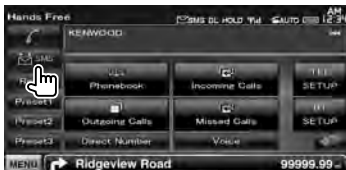

### 3 Select a function



[SMS] Displays the SMS create menu screen.  
See <Create a message>.

[Received Message List] Displays received message list.

[Sent Message List] Displays sent message list.

[Draft] Displays the SMS Create Menu screen.  
See <Create a message>. The button will be active when any message has been created after power-on.

[Download] Retrieves SMS messages from the cell-phone.

### 4 Select a message to display



1 Calls the number in the selected message.

[DISP] Displays the selected message.



- If a large number of SMS messages are stored in the cell-phone, message list may not be displayed correctly.



## SMS Message screen



[SMS] Creates a new message for the selected message.

**Create a message**

**1 Enter phone number / Select contact**



[**☰**] Select a contact from the phonebook.

[**Direct Number**] Enter the phone number.

[**SET**] Display the Create SMS Message screen.

[**Send**] Sends the message.


[**Delete**] Deletes the Draft message.

Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].

**2 Display the Create SMS Message screen**



**3 Create a message**

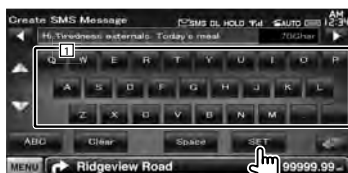

[**1**] Enters characters.

[**◀**], [**▶**] Moves the cursor.

[**▲**], [**▼**] Scrolls up or down the character button display.

[**QWERTY**] / [**ABC**] Sets the key layout of the character buttons.

ABC : Alphabetical key layout.

QWE : Qwerty key layout.

[**Clear**] Erases the entered character.

If touched more than 1 second, all the input characters are erased.

[**Space**] Enters a space.

[**SET**] Saves the message and returns to the Create SMS Menu screen.

Only one draft message can be saved / retained in memory at any one time.

**4 Send the message**




# Audio Control

## Audio Control Menu

Displays the Audio Control menu to set the sound effect function of this unit.

### 1 Display the Source Select Screen

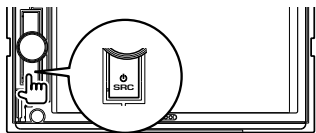

### 2 Display the Audio Control menu



In this manual, the above selection is indicated as:

Touch [SRC] > [SRC].

### 3 Select the Audio Control item



Item	Page
[Audio Control]	59
[Equalizer]	60
└ [Tone]	60
[Zone Control]	61

## Audio Control

You can adjust the front/rear and right/left audio balance.

### 1 Display the Audio Control screen

Touch [SRC] > [SRC] > [Audio Control]. (page 59)

### 2 Set each item



1 Adjusts the front/back and left/right balance of the volume by touching the Adjust screen.

[◀], [▶] Adjusts the right and left volume balance.

[▲], [▼] Adjusts the front and rear volume balance.

[VOL.Offset] Finely adjust the volume of the current source to minimize the difference in volume between different sources.



- If you have increased the volume first, then reduced the volume using the "VOL. Offset", the sound generated if you suddenly switch to another source may be extremely loud.

[Subwoofer Level] Adjusts the subwoofer volume.

The setting is available when subwoofer is set to "ON". See <Speaker Setup> (page 75).

[Loudness] Turns the loudness control function On or Off.

If turned "ON", high and low tones are automatically enhanced during low volume. Settable only when zone function is set to Off. See <Zone Control> (page 61).

[Stream Information] Displays the present source information.

The stream (Dolby Digital, dts, Linear PCM, MPEG, MP3, WMA or AAC) is displayed.

## Equalizer Control

You can set up the equalizer.

### 1 Display the Equalizer screen

Touch [◀] > [EQ] > [Equalizer]. (page 59)

### 2 Set each item



**[SystemQ]** Selects an equalizer curve type. You can select any of the following equalizer curves. "Natural"/ "Rock"/ "Pop"/ "Easy"/ "Top40"/ "Jazz"/ "User"



- "User": Your own tone curve can be created. See <Tone Setup> (page 60).

**[SystemQ-EX]** Selects items to be adjusted for tone curve setup.

If selected "OFF", only Level can be set up for tone curves.

**[Tone]** Displays the Tone curve setup screen. (page 60)

## Tone Setup

You can set a Tone curve.

### 1 Display the Equalizer screen

Touch [◀] > [EQ] > [Equalizer]. (page 59)

### 2 Display the Tone Control screen



### 3 Set the Tone



**[Bass]** Bass adjustment items are displayed.

**[Middle]** Middle adjustment items are displayed.

**[Treble]** Treble adjustment items are displayed.

**[Flat]** Tone level becomes 0 (flat).

**[FREQ]** Sets the Center frequency.

**[Level]** Sets the level.

**[Q Factor]** Sets the Q factor. (Only [Bass] and [Middle] can be set)

**[Bass DC EXT]** Bass DC Extend settings. (Only [Bass] can be set)

If turned "ON", it extends the bass center frequency to the low register by approximately 20%.

**[SW Level]** Adjusts the subwoofer volume.

The setting is available when subwoofer is set to "ON". See <Speaker Setup> (page 75).

## Zone Control

You can set the front and rear audio source.

### 1 Display the Zone Control screen

Touch [ ] > [ ] > [Zone Control]. (page 59)

### 2 Set the Zone Control



**[Single Zone]** Sets the unit to single zone.

**[Dual Zone]** Sets the unit to dual zone.

**[Front Source]** Sets the front audio source.

**[Rear Source]** Sets the rear audio source.



- When the rear speaker sound is switched, the audio source that is output at the AV OUTPUT terminal is also switched to the same source.

**[Rear VOL.]** Adjusts the volume of the rear channel.



- There are following limitations when zone function is set to "ON".
  - There is no output from the subwoofer.
  - <Equalizer Control> (page 60) and <Speaker Setup> (page 75) are not available.


# Setup Menu

You can set up various receiver parameters.

## How to Display SETUP Menu Screen

Displays the Setup menu to set various functions.

### 1 Display the Source Select Screen

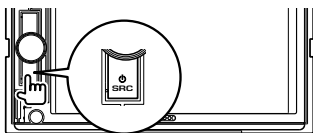

### 2 Display the Setup Menu Screen



In this manual, the above selection is indicated as:

Touch [◀] > [▶].

### 3 Select the setup item



[▲], [▼] Scrolls the setup menu.



- [AV-IN SETUP], [Navigation] and [Audio SETUP] options can be locked. The key mark (🔒) is displayed in reverse video for the locked option. See <Setup Memory> (page 66).


Item	Page
[Information]	
└ [DivX(R)]	63
└ [Software]	63
[System]	
└ [User Interface]	64
└ [Touch]	65
└ [Clock]	65
└ [Security]	66
└ [SETUP Memory]	66
[Display]	
└ [Background]	67
└ [Color]	68
└ [Screen Adjust]	69
[Bluetooth SETUP]	70
[SIRIUS SETUP]	80
[DVD SETUP]	76
[iPod SETUP]	79
[USB SETUP]	79
[AV-IN SETUP]	73
[Navigation]	74
[Audio SETUP]	
└ [Speaker Select]	75
[AV Interface]	73

## DivX Setup (DNX6460BT/DDX6046BT)

Checks the registration code. This code is needed when making a disc which has DRM (Digital Rights Management).

### 1 Display the DivX Setup screen

Touch [←] > [→] > [Information] > [DivX]. (page 62)

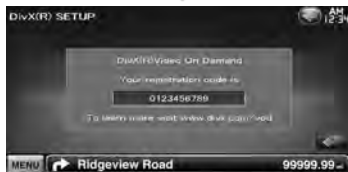

Displays the registration code.




- When downloading a DivX VOD file controlled by DRM, register the code appeared on the screen such as the one above. Otherwise the file may not be able to play with this unit. Remaining number of viewing is displayed when playing a DivX VOD file with the viewing restriction. When the remaining number of viewing reached 0, a warning message appears and the file cannot be played.

## Software Information

Checks the software version of this unit.

### 1 Display the Software Information screen

Touch [←] > [→] > [Information] > [Software]. (page 62)

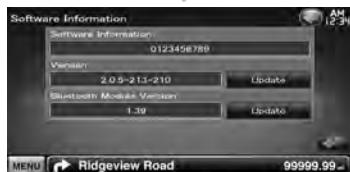

Displays the software version.



- For how to update the software, refer to the relevant update procedure manual which comes with the software.

## User Interface

You can setup user interface parameters.

### 1 Display the User Interface screen

Touch [Left Arrow] > [Right Arrow] > [System] > [User Interface]. (page 62)

### 2 Set each item



**[Beep]** Turns the key touch tone On or Off. (☑ "ON")

**[Remote Sensor]** Selects a remote control signal. (☑ "ON")  
When turned "OFF", the remote control of TV reception is rejected.

**[Language]** Select the language used for the control screen and setting items. (page 64)

**[Scroll]** Allows scrolling of text display on the Source Control screen. (☑ "Auto")  
"Auto": Scrolls the screen automatically.  
"Manual": Allows you to scroll the screen manually.

**[Marker]** Sets whether to display the target when touching the panel. (☑ "OFF")

**[Drawer Close]** Sets whether to close the function bar automatically. (☑ "Manual")

**[FNC Key Longer than 1 Second]** Sets the function of the [FNC] button. (☑ "R-CAM")  
"V.OFF": Press the [FNC] button for more than 1 second to turn the display off.  
"R-CAM": Press the [FNC] button for more than 1 second to switch to rear view.

**[Animation]** Sets whether to display animation. (☑ "ON")

## Language Setting

You can select the display language for the control screen and audio file tags.

### 1 Display the User Interface screen

Touch [Left Arrow] > [Right Arrow] > [System] > [User Interface]. (page 62)

### 2 Display the Language Setting screen



### 3 Select a language



**[Select Mode]** Selects language select mode. (DNX series only) (☑ "Easy")

"Easy": Language to display text and tag information, and language for GUI can be selected.

Navigation language is set to that selected in [Language Select].

"Advanced": Language to display text and tag information, language for GUI, and language for navigation information can be selected.

**[Language Select]** Selects the language to display text information of the selected source and tag information of the audio/video files. (☑ "American English")

**[GUI Language Select]** Selects the language used for the control screen, setting menu and so forth. (☑ "Local")

"Local": Sets the language to that selected in [Language Select].

"English": Sets the language to English.

**[Enter]** Determines the selected language.

**[Cancel]** Cancels the selected language.

### When [Select Mode] is set to "Advanced" (DNX series only)



**[Navigation Language Select]** Selects the language used for navigation.  
(☑ "American English")

## Touch Panel Adjustment

You can adjust the touch panel operations.

### 1 Display the Touch panel Adjustment screen

Touch [Home] > [Left Arrow] > [System] > [Touch].  
(page 62)

### 2 Adjust the Touch panel



Follow the instruction on the screen and touch the center of ⊕.

**[Cancel]** Cancels the adjustment and returns to the Touch Panel Adjust screen.

**[Reset]** Resets to the initial status.

## Clock Setup

You can adjust the clock time.

### 1 Display the Clock Setup screen

Touch [Home] > [Left Arrow] > [System] > [Clock].  
(page 62)

### 2 Setup the Clock



1 Adjusts hours.

2 Adjusts minutes.

**[Reset]** Sets "00" minute.

Setup examples: 3:00 – 3:29 → 3:00

3:30 – 3:59 → 4:00

**[Synchronize]** Sets the clock time in synchronization with the time data sent from the navigation system or the RDS station.

(☑ DNX series: "Navigation", DDX series: "OFF")  
"OFF" / "RDS" / "Navigation"

When the synchronized mode is set, the clock cannot be adjusted manually.

### 3 Adjust the clock time



## Security Indicator Setup

Setting the security indicator to ON helps to protect your receiver system against theft.

### 1 Display the Security screen

Touch [←] > [→] > [System] > [Security].  
(page 62)



**[SI]** Turns the SI function on or off.  
If turned "ON", the security indicator on the front panel flashes when the vehicle ignition is off. (☑ "ON")

## Setup Memory

Audio Control, AV-IN SETUP, AV Interface, Navigation, and Audio SETUP settings can be memorized. The memorized settings can be recalled at any time. For example, even when the settings are cleared due to replacement of the battery, the settings can be restored.

### 1 Display the SETUP Memory screen

Touch [←] > [→] > [System] > [SETUP Memory]. (page 62)

### 2 Start Setup Memory



**[Lock]** Locks the AV-IN SETUP, Navigation, and Audio SETUP settings. When [Lock] is selected, you cannot change the AV-IN SETUP, Navigation, and Audio SETUP settings.

**[Yes]** Memorizes or recalls the settings.

**[No]** To cancel the function, touch [No]. To cancel memorization, touch [No].  
The SETUP Menu screen appears again.

### 3 Select a desired function



**[Recall]** Recalls the memorized settings.

**[Memory]** Memorizes the current settings.

**[Clear]** Clears the currently memorized settings.

#### 4 Memorize or recall the settings

**When memorizing the Audio Setup and AV Interface settings:**



If settings have already been memorized, a confirmation message appears. Touch [Yes]. To cancel memorization, touch [No].

**When recalling the memorized settings:**



Touching the screen displays a confirmation message. Touch [Yes]. To cancel recalling, touch [No].

**When clearing the currently memorized settings:**



Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].

#### 5 Quit memorization/recalling of settings



### Entering Background

Loads a image from the connected USB device and sets it for the background image.

#### 1 Connect the device which has the image to load

#### 2 Display the Background screen

Touch [Home] > [Back] > [Display] > [Background]. (page 62)

#### 3 Display the Background Memory screen



[Change] Selects a image for background.

[Delete] Deletes the background image.

Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].

#### 4 Select a medium (USB device)



#### 5 Select the image to load



1 Lists the files.

[◀] When ◀ appears, the text display is scrolled by touching it.

[↑] [ROOT] Moves to the top hierarchy level.

[↑] [UP] Moves up a hierarchy level.

Next page ►

## 6 Load the image



- 1 Rotates the image.



- See <About Picture File> (page 6) for readable image specifications.
- The [Memory] button on the "Background" screen becomes active only in STANDBY source mode.
- Pressing the [Memory] button on the "Background" screen switches the AV OUT source to OFF. For resetting the AV OUT source, refer to <AV Interface Setup> section.
- While loading the Background image, any other operation is prohibited.

### Background Change

Selects a image for background.

#### 1 Select Background Change screen



#### 2 Select a image for background



- 1 Returns to the initial background.

#### 3 Set the image as the background



## Panel Color Coordinate

Sets the button illumination color.

#### 1 Display the Color screen

Touch [F1] > [F2] > [Display] > [Color].  
(page 62)

#### 2 Display the Panel Color Coordinate screen




**[Initialize]** Initialization resets the settings made using the Panel Color to the default settings made at the factory.

**[Panel Color Scan]** When set to "ON", the illumination color of the buttons changes one after another.



- When touching [SET] or [Initialize], make sure [Panel Color Scan] is set to "OFF".

#### 3 Select a color

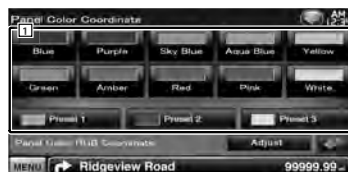

- 1 Sets to the touched color.

**[Adjust]** Sets and registers favorite color to the preset buttons ([P1] – [P3]).

## To register your original color

### 1 Start the RGB coordinate



### 2 Adjust each color value



- 1 Selects a preset number to register.  
[Red Value] Adjusts the Red value.  
[Green Value] Adjusts the Green value.  
[Blue Value] Adjusts the Blue value.

### 3 Select a Preset number to register



Adjusted color is registered to the selected Preset button.

### 4 Complete the color coordination



## Screen Adjustment

You can adjust the screen mode of the monitor.

### 1 Display the Screen Adjust screen

Touch [Home] > [Left Arrow] > [Display] > [Screen Adjust]. (page 62)

### 2 Set each item



[Bright] Brightness Control

[Contrast] Contrast Control

[Black] Black Level Adjustment

[Dimmer] Dimmer Mode Setup

"ON": The display dims.

"OFF": The display doesn't dim.

"SYNC": Turning the Dimmer function On or Off when the vehicle light control switch is turned On or Off.

"NAV-SYNC": Turning the Dimmer function On or Off according to the Navigation Day/Night display setting. (DNX series and DDX series with navigation unit only)



- In this Screen Adjust screen, you can perform setups for the menu screen. Setups for videos such as DVD can be performed on the <Screen Control> (page 46).

## Registering Bluetooth Unit

Registers the Bluetooth unit to be connected.

### 1 Display the Bluetooth Setup screen

Touch [←] > [→] > [Bluetooth SETUP].  
(page 62)

### 2 Display the Connect Device List screen



- [A2DP Connect Device]  
Only for DNX5160 and DDX516 with optional Bluetooth unit KCA-BT200 connected.

### 3 Search for a Bluetooth unit



1 Displays the registered Bluetooth units.  
The busy service becomes active. The available service becomes inactive.

[◀] When ◀ appears, the text display is scrolled by touching it.

[Search] Searches for a Bluetooth unit.

[SP DEV] Registers a Bluetooth unit that cannot be registered by normal register (pairing) operation.



- A new device cannot be registered if there are already 5 Bluetooth units registered. Delete unnecessary registration. See <Bluetooth Unit Connection> (page 72).

### 4 Select the Bluetooth unit to register



- 1 Displays the searched Bluetooth unit.  
[Search] Searches for a Bluetooth unit.  
[Cancel] Cancels searching of Bluetooth unit.

### 5 Enter PIN code



- 1 Enters a code number using the keypad.  
[Enter] Confirms the entered PIN code. Enter the PIN code specified for the Bluetooth unit you are registering.  
This button will not be active until at least four PIN code digits have been entered.  
[Cancel] Cancels registration of PIN code.  
[Clear] Clears the code number.



- You can also register from the Bluetooth unit side. For the PIN code necessary for registration, see <Registering Bluetooth Unit PIN Code> (page 71).
- If the error message appears even though the PIN code is correct, try <Registering Special Bluetooth Unit>.
- The screens used in this manual are for models with optional Bluetooth unit KCA-BT200 connected. Models with built-in Bluetooth function do not have some buttons described in this manual.

## Registering Special Bluetooth Unit

Registers Special Bluetooth unit, that resulted in error by normal registration method, by selecting from the listed models.

### 1 Display the Special Device List screen



### 2 Select a model name



Displays the Bluetooth unit name that can be registered.

### 3 Confirm whether to register



- Only models in Bluetooth unit name list can be registered.

### 4 Go through the procedure of <Registering Bluetooth Unit> and complete the registration (pairing)

## Registering Bluetooth Unit PIN Code

Sets the PIN code of the Bluetooth unit to enter when registering (pairing) from the cell-phone or audio player side.

### 1 Display the Bluetooth Setup screen

Touch > > [Bluetooth SETUP].  
(page 62)

### 2 Display the Receiver PIN Code screen



### 3 Enter PIN code



1 Enters a code number using the keypad.

[Cancel] Cancels registration of PIN code.

[Enter] Registers the entered PIN code.

[Clear] Clears the code number.

## Bluetooth Unit Connection

Selects the Bluetooth unit to connect.

### 1 Display the Bluetooth Setup screen

Touch [←] > [→] > [Bluetooth SETUP].  
(page 62)

### 2 Display the Connect Device List screen



- [A2DP Connect Device]  
Only for DNX5160 and DDX516 with optional Bluetooth unit KCA-BT200 connected.

### 3 Select a registered Bluetooth unit



### 4 Select the service to use



**[TEL (HFP)]** Connects/disconnects cell-phone to use for Hands Free.

**[Audio (A2DP)]** Connects/disconnects Audio player to use for Bluetooth Audio.

**[Remove]** Deletes registration (pairing).  
Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].



- [Audio (A2DP)]  
Only for DNX5160 and DDX516 with optional Bluetooth unit KCA-BT200 connected.

## Bluetooth Hands-Free/Audio Output Setup

Selects speakers to output the sound of hands-free phoning (such as phone call voice and ringing tone) and Bluetooth audio.

### 1 Display the Bluetooth Setup screen

Touch [←] > [→] > [Bluetooth SETUP].  
(page 62)



**[Bluetooth HF/Audio]** Sets the output speakers. (☑) "Front Only"  
"Front Only" : Outputs from the front speakers.  
"All" : Outputs from all the speakers.

## AV Input Setup

You can set AV input parameters.

### 1 Display the AV-IN Setup screen

Touch [ ] > [ ] > [AV-IN SETUP]. (page 62)

### 2 Set each item



**[On Screen AV-IN]** Sets an on-screen display of the AV-IN playback screen. ( [ ] "Auto")  
"Auto": Information is displayed for 5 seconds when updated.

"Manual": Information is displayed when you touch on the screen.

**[iPod AV Interface Use]** Sets the terminal to which the iPod is connected to. ( [ ] "iPod")

**[AV-IN1 Name], [AV-IN2 Name]** Sets a name to be displayed when you select a system that is connected via the AV INPUT port. ( [ ] "VIDEO")



- [iPod AV Interface Use]  
This item can be set when in STANDBY source and also the iPod is unconnected.
- [AV-IN Name]  
One AV-IN name is displayed when "iPod" is selected in [iPod AV Interface Use] and two are displayed when not selected.

## AV Interface Setup

You can set audio and visual (AV) interface parameters.

### 1 Display the AV Interface screen

Touch [ ] > [ ] > [AV Interface]. (page 62)

### 2 Set each item



**[AV-OUT]** Selects an AV source to be output at the AV OUTPUT port. ( [ ] "AV-IN1")

**[R-CAM Interrupt]** Sets a method to switch to the rear view camera video display. ( [ ] "OFF")

"ON": Switches to the rear camera video display when "Reverse" gear is engaged.

"OFF": The monitor does not switch to the rear view camera video display even when engaging the shift knob of car to "Reverse".



- When in DVD source, "AV-OUT" cannot be set to USB.  
When in USB source, "AV-OUT" cannot be set to DVD.

## Navigation Setup

You can set Navigation parameters.

### 1 Display the Navigation Setup screen

Touch [←] > [→] > [Navigation]. (page 62)

### 2 Set each item



**[NAV Interrupt Speaker]** Selects speakers used for voice guidance of the navigation system.

(☑ "Front All")

"Front L": Uses the front left side speaker for voice guidance.

"Front R": Uses the front right side speaker for voice guidance.

"Front All": Uses both front speakers for voice guidance.

**[NAV Voice Volume]** Adjusts the volume for voice guidance of the navigation system.

(☑ DNX series: "25", DDX series: "21")

**[NAV Mute]** Mutes the volume during voice guidance of the navigation system.

(☑ "ON")

When turned "ON", the volume level drops for voice guidance.

**[Navigation Input]** Selects a navigation system connection.

(☑ "RGB") (DDX series only)

"RGB": Allows the Kenwood's Navigation System to connect via its interface cable.

"AV-IN": Allows a third-party navigation system to connect via the AV INPUT1 port.

"OFF": Must be used if no navigation system is connected.

(The navigation display is cancelled when the AV source is switched.)

**[On Screen Navigation]** Sets an on-screen display of the navigation screen. (☑ "OFF") (DDX series only)

"Auto": Information is displayed for 5 seconds when updated.

"OFF": Information is not displayed.



- [On Screen Navigation]

It can be set only when [Navigation Input] is set to "AV-IN".

## Speaker Setup

You can select a speaker type and its size to get the best sound effects.

### 1 Display the Speaker Select screen

Touch [ ] > [ ] > [Audio SETUP] > [Speaker Select]. (page 62)

### 2 Select a speaker you wish to adjust

When the speaker type and size are set, the speaker crossover network and equalizer curve are set automatically.



- 1 Front speaker
- 2 Rear speaker
- 3 Subwoofer

**[Subwoofer]** Sets the availability of subwoofers.

**[X'over]** Displays the Speaker Crossover Setup screen.

You can adjust the crossover setup that was set automatically when you selected the speaker type.

### 3 Select a speaker type



You can select front speaker type.  
"Standard"/"Wide"/"Middle"/"Narrow"



- Speaker cannot be setup when in STANDBY source mode.

## Crossover Network Setup

You can set a crossover frequency of speakers.

### 1 Select the speaker to set the crossover



- 1 Sets the High Pass Filter of the front speaker.
- 2 Sets the High Pass Filter of the rear speaker.
- 3 Sets the Low Pass Filter of the sub woofer.

### 2 Display the Crossover setup screen



### 3 Set the crossover



**[Phase]** Sets the phase of subwoofer output. The phase is reversed 180 degrees when set to "Reverse".

Sets the subwoofer phase. (Only when "Subwoofer" is set to "ON" in Speaker Setup, and [LPF FREQ] is set to other than "Through")

**[HPF FREQ]** High Pass Filter adjustment. (When front or rear speaker is selected on Speaker Select screen)

**[LPF FREQ]** Low Pass Filter adjustment. (Only when "Subwoofer" is set to "ON" in Speaker Setup)

## DVD Setup

You can set up the DVD play.

### 1 Display the DVD Setup screen

Touch [◀] > [▶] > [DVD SETUP]. (page 62)

### 2 Set each item



**[Menu Language]\*** Selects a disc menu language.

(See <DVD Language Setup>, page 77)

**[Subtitle Language]\*** Selects a subtitle language.

(See <DVD Language Setup>, page 77)

**[Audio Language]\*** Selects an audio language.

(See <DVD Language Setup>, page 77)

**[Dynamic Range Control]\*** Sets the dynamic range. (☑ "Dialog")

The dynamic range is reduced by changing from "Wide" to "Normal" and from "Normal" to "Dialog". "Dialog" makes the total sound volume becomes larger as compared with "Wide" and "Normal", allowing you to listen to the movie's dialog more clearly.

This is effective only when you are using a Dolby Digital software.

The operation is available during the play stop mode.

**[Angle Mark]** Sets an angle mark display.

(☑ "ON")

**[Screen Ratio]\*** Selects the screen display mode. (☑ "16:9")

"16:9": Displays wide pictures.

"4:3 LB": Displays wide pictures in the Letter Box format (having black stripes at the top and bottom of screen).

"4:3 PS": Displays wide pictures in the Pan & Scan format (showing pictures cut at the right and left ends).

**[Parental Level]\*** Displays the Parental Lock screen. (☑ "OFF")

(See <DVD Parental Level Setup>, page 77)

**[Disc SETUP]** Makes the settings related to the disc media. (See <Disc Setup>, page 78)



\* Disabled when a DVD is being played.

## DVD Language Setup

Selects a language you use for the speech and menus.

### 1 Display the DVD Setup screen

Touch [⏪] > [⏩] > [DVD SETUP]. (page 62)

### 2 Select the language item to set



### 3 Enter a language code

See <DVD Language Codes> (page 92) and select the desired language.



1 Enters a language code.

**[Cancel]** Cancels the language setup and returns to the "DVD SETUP" screen.

**[Enter]** Sets the language and returns to the "DVD SETUP" screen. (It appears after you have entered a language code.)

**[Original]** Sets the DVD's original language (only when setting an audio language).

**[Clear]** Clears the language code.

### 4 Set the language you use



## DVD Parental Level Setup

Sets a parental level.

### 1 Display the DVD Setup screen

Touch [⏪] > [⏩] > [DVD SETUP]. (page 62)

### 2 Display the Parental Level code number screen



### 3 Enter the code number



1 Enters a code number.

**[Cancel]** Cancels the current setup and returns to the "DVD SETUP" screen.

**[Level]** Indicates the present parental lock level.

**[Enter]** Determines the code number and displays the Parental Level setup screen.

**[Clear]** Clears the code number.




- The number you enter first is set as your code number.

### 4 Display the Parental Level SETUP screen



Next page ►

## 5 Select a parental level and complete the setup

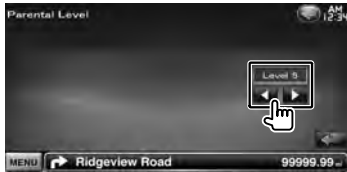

Selects a parental level.



- If a disc has higher parental lock level, you need to enter the code number.
- The parental lock level varies depending on a loaded disc.
- If a disc has no parental lock, anybody can play it back even when you have set the parental lock.

## Disc Setup

Performs setup when using disc media.

### 1 Display the DVD Setup screen

Touch [Left Arrow] > [Right Arrow] > [DVD SETUP]. (page 62)

### 2 Display the Disc Setup screen



### 3 Set each item



**[Picture Display Time]** Selects a picture display time. (📷 "Long")

The Display of a JPEG picture is changed. ("Short", "Middle", "Long")

**[CD Read]** Sets a music CD playback. (📀 "1")

"1": Automatically recognizes and plays back an Audio file disc, a DVD or a music CD.

"2": Forcibly plays back a disc as a music CD. Select "2" if you wish to play a music CD having a special format or if you cannot play a disc in the "1" position.

**[On Screen DVD]** Sets an on-screen display of the DVD Playback screen. (📺 "Manual")

"Auto": Information is displayed for 5 seconds when updated.

"Manual": Information is displayed when you touch on the screen.



- [CD Read]

Disabled when a disc is in the unit.

You cannot play an Audio file/VCD disc in the "2"

position. Also, you may not play some music CDs in the "2" position.

## USB Setup

Performs setup when using USB.

### 1 Display the USB Setup screen

Touch [Home] > [Settings] > [USB SETUP]. (page 62)

### 2 Set each item



**[Picture Display Time]** Selects a picture display time. (📄 "Long")

The Display of a JPEG picture is changed. ("Short", "Middle", "Long")

**[On Screen USB]** Sets an on-screen display of the USB Playback screen. (📄 "Auto")

"Auto": Information is displayed for 5 seconds when updated.

"Manual": Information is displayed when you touch on the screen.

## iPod Setup

Performs setup when using iPod.

### 1 Display the iPod Setup screen

Touch [Home] > [Settings] > [iPod SETUP]. (page 62)

### 2 Set each item



**[AudioBook Speed]** Sets the Audio book playback speed. (📄 "Normal")

**[Wide Screen]** Sets Wide Screen on or off. (📄 "OFF")

**[On Screen iPod]** Sets an on-screen display of the iPod Playback screen. (📄 "Auto")

"Auto": Information is displayed for 5 seconds when updated.

"Manual": Information is displayed when you touch on the screen.



• "Wide Screen" cannot be set while the iPod is connected.

## SIRIUS Parental Code Setup

Sets a SIRIUS Parental code.

### 1 Display the SIRIUS Setup screen

Touch [Left Arrow] > [Right Arrow] > [SIRIUS SETUP]. (page 62)

### 2 Display the Parental Code screen



- If you have already completed the code registration, [Change] is displayed.
- If you want to clear the code which has already been registered, touch [Clear].
- Pressing [Clear] for 5 seconds or longer deletes the code.

### 3 Enter the current code number



1 Enters a code number.

**[Cancel]** Cancels the current setup and returns to the SIRIUS Setup screen.

**[Enter]** Registers the entered code number and displays the Parental Code 1st screen.

**[Clear]** Clears the code number.



- If you are to register the parental code for the first time, this screen will not appear. Go to Step 4.

### 4 Enter the new code number



### 5 Confirm the code number

Enter the same code number as you input in step 4.



SIRIUS Parental code is now set, and the display returns to SIRIUS Setup screen.

## SIRIUS Parental Lock Setup

Sets a SIRIUS Parental Lock function on or off.

### 1 Display the SIRIUS Setup screen

Touch [←] > [→] > [SIRIUS SETUP]. (page 62)

### 2 Display the Parental Code screen



- You need to complete <SIRIUS Parental Code Setup> beforehand.

### 3 Enter the code number

Enter the same code number as you input in <SIRIUS Parental Code Setup> (page 80).



Parental Lock function is now set to on or off, and the display returns to "SIRIUS SETUP" screen.



- If you have not registered the parental code, the code number you input in this step will be the number to register as SIRIUS Parental Code. In this case, you are requested to input the code once more.

## SIRIUS Parental Lock Channel Select

Selects the channel to enable SIRIUS Parental lock function.

### 1 Display the SIRIUS Setup screen

Touch [←] > [→] > [SIRIUS SETUP]. (page 62)

### 2 Display the Parental Code screen



### 3 Enter the code number

Enter the same code number as you input in <SIRIUS Parental Code Setup>.



### 4 Select a category



#### 1 Category List

When a category is selected, all the channels in the selected category are displayed.

[All Channel] Displays all the channels.

### 5 Set the parental lock for each channel



- 1 Channel list
- 2 Sets the Parental lock function on or off for each channel.  
You need to input the Parental code to switch the Parental lock function on or off.
- 3 Displays the sort sequence.

**[Info Change]** Switch the sort sequence of the channel list. ("Channel", "Song title", "Artist", "Composer" and "Category")

**[UP]** Moves to SIRIUS Category Select Setup screen.

# Remote Controller

For DNX6960/ DNX6460BT : This unit can be operated using the Remote Controller (RC-DV331) supplied with this unit.

For DDX6046BT : This unit can be operated using the Remote Controller (RC-DV340) supplied with this unit.

For DNX6160/ DNX6020EX/ DNX5160/ DDX616/ DDX516 :

Optional Remote Controller KNA-RCDV331/ KNA-RCDV340 is designed for controlling this unit.

Refer to the instruction manual that comes with the remote controller.


## ⚠ CAUTION

- Put the Remote Controller in a place where it will not move during braking or other operations. A dangerous situation could result, if the Remote Controller falls down and gets wedged under the pedals while driving.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not recharge, short, break up or heat the battery or place it in an open fire. Such actions may cause the battery to leak fluid. If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.
- Place the battery out of reach of children. In the unlikely event that a child swallows the battery, immediately consult a physician.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

## Battery installation

Use two "AAA"/"R03"-size batteries.


Insert the batteries with the + and – poles aligned properly, following the illustration inside the case.

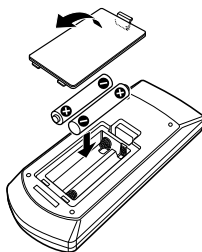

- If the Remote Controller operates only over shorter distances or does not operate at all, it is possible that the batteries are depleted. In such instances, replace the both batteries with new ones.

### Remote Controller mode switch

The functions operated from the remote controller differ depending on the position of the mode switch.

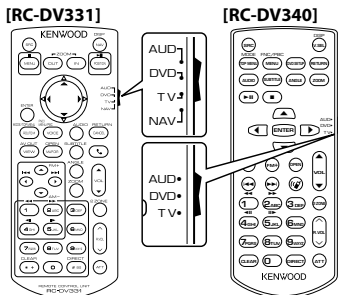

#### AUD mode

Switch to this mode when controlling a selected source or tuner source, etc.

#### DVD mode

Switch to this mode when playing DVDs or CDs etc. with the player integrated in this unit.

#### TV mode

Not used.

#### NAV mode (RC-DV331 only)

Switch to this mode when controlling Navigation unit.



- The position of the remote control mode switch is indicated in the title of each mode, e.g. "AUD mode".
- When controlling a player that is not integrated in the unit, select "AUD" mode.

### Common operations (AUD mode)

[RC-DV331]

[RC-DV340]

 
#### Source switching

Switches to the source to be played.




#### Volume control

Adjusts the volume.




#### Volume attenuator

 Press the key once to lower the volume. Press again to restore the previous volume.




#### Dual Zone

 Switches the Dual Zone function ON and OFF.




#### Rear volume control

 Adjusts volume at rear when the Dual Zone function is ON.




#### NAV/ V.SEL

 Switches to the navigation screen.



## Cursor key

 Moves the cursor when displaying menu.



## ENTER

Enters options.



 
## Hands-free communication

When a call comes in, it answers the call.



## Function


Switches the function screen.



## MODE

Switches the screen mode.

 Screen mode changes each time you press this key.




## DVD/VCD (DVD mode)

[RC-DV331]

[RC-DV340]

### Track search and file search

 
Selects the track or file to be played.



### Play/Pause

Pauses the track.

 
Press again to resume playing.




### Stop

Memorizes the last point where the disc stopped.

 When pressed again, the last point is deleted.



### Direct search

 

Pressing this key switches the features that can be searched directly.

### DVD-VIDEO

- \_\_\_\_\_ Title number
- \_\_\_\_\_ Chapter number
- \_\_\_\_\_ Play time
- \_\_\_\_\_ Item number\*
- \_\_\_\_\_ Cancel

\* You may not be able to use this function with some discs or scenes.

### DVD-VR

- \_\_\_\_\_ Title number
- \_\_\_\_\_ Chapter number
- \_\_\_\_\_ Play time
- \_\_\_\_\_ Cancel

**VCD 1.X, VCD 2.X (PBC OFF)**

Track number

Cancel

**VCD 2.X (PBC ON)**


Scene number

Number

Cancel

Once you have switched to the direct search feature, specify the search number from the numeric keypad, and then press [ENTER] key.


**Numeric keypad**

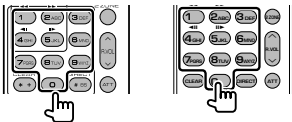

- Specify the number to search in direct search.
- Press **1** **2** to fast forward/backward. Switches the fast forward/backward speed each time you press this key.
- Press **4** **5** to slow forward/backward. Switches the slow playback speed each time you press this key.

**DVD Top Menu**

 
Returns to the DVD top menu.



**DVD Menu**


Displays the DVD menu.

 Turns the playback control on or off while playing VCD.




**SUBTITLE**

 Switches the subtitle language.




**ZOOM**

 Switches the zoom ratio each time you press this key.



**Picture Angle**

 
Switches the picture angle each time you press this key.



**AUDIO**

Switches Voice Language.

 Switches the voice language each time you press this key.




## Music CD/Audio file/Video file/ Picture file (AUD mode)

[RC-DV331]

[RC-DV340]


### Folder search

 Selects the folder to be played.



### Track search and file search

 
Selects the track or file to be played.




### Play/Pause

Pauses the track.

 Press again to resume playing.



### Direct search

 

Pressing this key switches the features that can be searched directly.

### Music Disc

Track number

Play time

Cancel

### Audio files in DVD/CD disc


Folder number

File number

Cancel

Once you have switched to the direct search feature, specify the search number from the numeric keypad, and then press **[▶||]** key.

## Numeric keypad

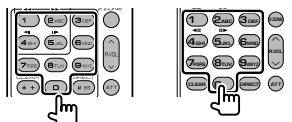

- Specify the number to search in direct search.


## Radio (AUD mode)

 [RC-DV331]

[RC-DV340]


### Band switching

Switches to bands received by the unit.




### Station selection

 Switches to broadcast stations received by the unit.




### Seek mode switching

 Switches the Seek mode (AUTO1, AUTO2, MANU).





### Direct tuning

 After pressing this key, use the keypad to specify the broadcast station you wish to receive.





Next page ►

 
 
Example: 92.1MHz (FM)



Example: 810kHz (AM)

  

### Numeric keypad

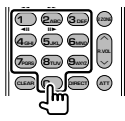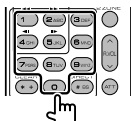

- To use preset tuning, press the number of a programmed broadcast station. (1 - 6)
- Press the direct tuning key first, then specify the frequency of the station to receive.


## iPod (AUD mode)

 [RC-DV331]

[RC-DV340]

### Music/Video search


Selects the music/video to be played.



### Play/Pause

Pauses the music/video.

 Press again to resume playing.





## USB (AUD mode)

[RC-DV331]

[RC-DV340]


### Folder search

  Selects the folder to be played.



### File search

 
Selects the file to be played.



### Play/Pause

Pauses the file.

 
Press again to resume playing.



## NAV (NAV mode) (RC-DV331 only)


### Cursor key

 Scrolls the map, or moves the cursor.




### ENTER

 Performs the selected function.




### ZOOM

 Zooms in or out the navigation map.




### MENU

 Displays Main menu.




### CANCEL

 Displays previous screen.




### POSITION

 Displays the current position.



## ROUTE M

 Displays Route Option menu.




## VIEW

Switches between 2D and 3D map displays.



## VOICE

 Plays Voice guidance.



## MAP DIR

Switches between the heading up navigation and north up navigation map displays.




# Initial Setup

When pressing the Reset button or turning on the unit for the first time, the Initial SETUP screen is displayed.

## Initial Setup

### 1 Turn the power On

### 2 Set each item

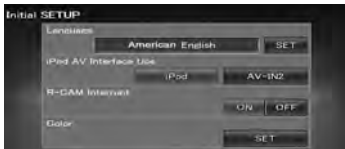

**[Language]** Select the language used for the control screen and setting items. (page 64)

**[iPod AV Interface Use]** Sets the terminal to which the iPod is connected to. (☑ "iPod")

**[R-CAM Interrupt]** Sets a method to switch to the rear view camera video display.

(☑ "OFF")

"ON": Switches to the rear camera video display when "Reverse" gear is engaged.

"OFF": The monitor does not switch to the rear view camera video display even when engaging the shift knob of car to "Reverse".

**[Color]** Sets the screen and button illumination color. (page 68)

### 3 End initial setup



- The settings above can be changed in <Setup Menu> (page 62).

# Status bar Indicator items

Shown below is a list of indicators displayed on the Status bar.



Source	Display	Overview
General	"ATT"	Indicates that the attenuator is active.
	"DUAL"	Turns on the Dual zone function.
	"TEL"	Indicates the connection state of the Bluetooth hands-free unit. (Orange: Connected. White: Not connected.)
DVD/CD MEDIA	"FO-REP"	Indicates that the Folder repeat function is ON.
	"IN"	Indicates that a disc is inserted. (White: A Disc is inside the unit. Orange: Error at the disc player.)
	"MOVIE"	Identifies the video file.
	"MUSIC"	Identifies the music file.
	"PICTURE"	Identifies the image file.
	"RDM"	Indicates that the Random function is ON.
	"REP"	Indicates that the Repeat function is ON.
	"SLIDE"	Indicates that the slide show function is ON.
	"C-REP"	Indicates that the Chapter repeat function is ON.
	"T-REP"	Indicates that the Title repeat function is ON.
DVD-Video	"1 M/S"	Identifies the primary/secondary audio output of stream 1.
DVD-VR	"1 MAIN"	Identifies the primary audio output of stream 1.
	"1 SUB"	Identifies the secondary audio output of stream 1.
	"PLST"	Identifies the Play list mode.
	"T-REP"	Indicates that the Title repeat function is ON.
	VCD	"1chLL"
"1chLR"		Identifies the monaural audio output of channel 1.
"1chRR"		Identifies the right audio output of channel 1.
"1chST"		Identifies the stereo audio output of channel 1.
"LL"		Identifies the left audio output.
"LR"		Identifies the monaural audio output.
"RR"		Identifies the right audio output.
"ST"		Identifies the stereo audio output.
"PBC"		Indicates that the PBC function is ON.
"SVCD"		Identifies the Super Video CD.
"VER1"		Indicates that the Video CD version is 1.
"VER2"		Indicates that the Video CD version is 2.
"REP"		Indicates that the Repeat function is ON.

Source	Display	Overview	
USB	"FO-REP"	Indicates that the Folder repeat function is ON.	
	"MOVIE"	Identifies the video file.	
	"MUSIC"	Identifies the music file.	
	"PICTURE"	Identifies the image file.	
	"RDM"	Indicates that the Random function is ON.	
	"REP"	Indicates that the Repeat function is ON.	
	"PLST"	Indicates that the Play list mode is selected now.	
	"SLIDE"	Indicates that the slide show function is ON.	
	iPod	"MUSIC"	Identifies the music file.
		"VIDEO"	Identifies the video file.
Tuner	"RDM"	Indicates that the Random function is ON.	
	"A-RDM"	Indicates that the Album random function is ON.	
	"REP"	Indicates that the Repeat function is ON.	
	"AUTO1"	Indicates that Seek mode is set to Auto1.	
	"AUTO2"	Indicates that Seek mode is set to Auto2.	
	"CRSC"	Indicates that the CRSC function is OFF.	
	"MANU"	Indicates that Seek mode is set to Manual.	
	"PS"	Indicates that the list display format is PS.	
	"RDS"	Indicates the state of the RDS station when the AF function is ON. (Orange: RDS is being received. White: RDS is not being received.)	
	"SNPS"	Indicates that the list display format is SNPS.	
HD Radio	"ST"	Indicates that stereo broadcast is being received.	
	"TI"	Indicates the reception state of traffic information. (Orange: TP is being received. White: TP is not being received.)	
	"AUTO1"	Indicates that Seek mode is set to Auto1.	
	"AUTO2"	Indicates that Seek mode is set to Auto2.	
	"MANU"	Indicates that Seek mode is set to Manual.	
	"M/S"	Indicates whether the reception channel is main or sub. (Orange: Sub channel is being received. White: Main channel is being received.)	
	"ANALOG"	Indicates that analog broadcast is being received.	
	"DIGITAL"	Indicates that digital broadcast is being received.	
	"ST"	Indicates that stereo broadcast is being received.	
	SIRIUS/ XM	"SCN"	Indicates that the channel scan function is ON.
"SEEK1"		Indicates that Seek mode is set to 1.	
"SEEK2"		Indicates that Seek mode is set to 2.	

# DVD Language Codes

Code	Language
aa	Afar
ab	Abkhazian
af	Afrikaans
am	Amharic
ar	Arabic
as	Assamese
ay	Aymara
az	Azerbaijani
ba	Bashkir
be	Byelorussian
bg	Bulgarian
bh	Bihari
bi	Bislama
bn	Bengali, Bangla
bo	Tibetan
br	Breton
ca	Catalan
co	Corsican
cs	Czech
cy	Welsh
da	Danish
de	German
dz	Bhutani
el	Greek
en	English
eo	Esperanto
es	Spanish
et	Estonian
eu	Basque
fa	Persian
fi	Finnish
fj	Fiji
fo	Faroese
fr	French
fy	Frisian
ga	Irish
gd	Scots Gaelic
gli	Galician
gn	Guarani
gu	Gujarati
ha	Hausa
he	Hebrew
hi	Hindi
hr	Croatian
hu	Hungarian
hy	Armenian
ia	Interlingua
ie	Interlingue
ik	Inupiak
id	Indonesian

Code	Language
is	Icelandic
it	Italian
ja	Japanese
jv	Javanese
ka	Georgian
kk	Kazakh
kl	Greenlandic
km	Cambodian
kn	Kannada
ko	Korean
ks	Kashmiri
ku	Kurdish
ky	Kirghiz
la	Latin
lb	Luxembourgish
ln	Lingala
lo	Laotian
lt	Lithuanian
lv	Latvian, Lettish
mg	Malagasy
mi	Maori
mk	Macedonian
ml	Malayalam
mn	Mongolian
mo	Moldavian
mr	Marathi
ms	Malay
mt	Maltese
my	Burmese
na	Nauru
ne	Nepali
nl	Dutch
no	Norwegian
oc	Occitan
om	(Afan) Oromo
or	Oriya
pa	Punjabi
pl	Polish
ps	Pashto, Pushto
pt	Portuguese
qu	Quechua
rm	Rhaeto-Romance
r	Kirundi
ro	Romanian
ru	Russian
rw	Kinyarwanda
sa	Sanskrit
sd	Sindhi
sg	Sangho
sh	Serbo-Croatian

Code	Language
si	Singhalese
sk	Slovak
sl	Slovenian
sm	Samoaan
sn	Shona
so	Somali
sq	Albanian
sr	Serbian
ss	Siswati
st	Sesotho
su	Sundanese
sv	Swedish
sw	Swahili
ta	Tamil
te	Telugu
tg	Tajik
th	Thai
ti	Tigrinya
tk	Turkmen
tl	Tagalog
tn	Setswana
to	Tongan
tr	Turkish
ts	Tsonga
tt	Tatar
tw	Twi
uk	Ukrainian
ur	Urdu
uz	Uzbek
vi	Vietnamese
vo	Volapuk
wo	Wolof
xh	Xhosa
yo	Yoruba
zh	Chinese
zu	Zulu

Some functions of this unit may be disabled by some settings made on this unit.

- ❗ **Cannot set up the subwoofer.**
- ❗ **Cannot set up subwoofer phase.**
- ❗ **No output from the subwoofer.**
- ❗ **Cannot set up the low pass filter.**
- ❗ **Cannot set up the high pass filter.**

- ▶ Subwoofer is not set to On.  
☞ <Speaker Setup> (page 75)
- ▶ The Dual zone function is enabled.  
☞ <Zone Control> (page 61)
- ▶ The unit is set to STANDBY source.

- ❗ **Cannot select the output destination of the subsource in the Dual zone.**
- ❗ **Cannot adjust the volume of the rear speakers.**

- ▶ The Dual zone function is disabled.  
☞ <Zone Control> (page 61)

- ❗ **Cannot play audio files.**

- ▶ "CD Read" of <Disc Setup> (page 78) is set to "2".

- ❗ **Cannot Folder select.**

- ▶ The Random play function is enabled.

- ❗ **Cannot perform Repeat play.**

- ▶ The PBC function is enabled.

- ❗ **Cannot set up the equalizer.**
- ❗ **Cannot set up the crossover network.**

- ▶ The Dual zone function is enabled.  
☞ <Zone Control> (page 61)
- ▶ The unit is set to STANDBY source.

What might seem to be a malfunction in your unit may just be the result of slight misoperation or miswiring. Before calling service, first check the following table for possible problems.

## General

- ❓ **The Touch Sensor Tone doesn't sound.**

- ✓ The preout jack is being used.
- ☞ The Touch Sensor Tone can't be output from the preout jack.

## Tuner source

- ❓ **Radio reception is poor.**

- ✓ The car antenna is not extended.  
☞ Pull the antenna out all the way.
- ✓ The antenna control wire is not connected.  
☞ Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.

## Disc source

- ❓ **The specified disc does not play, but another one plays instead.**

- ✓ The specified CD is quite dirty.  
☞ Clean the CD.
- ✓ The disc is severely scratched.  
☞ Try another disc instead.

## Audio file source

- ❓ **The sound skips when an Audio file is being played.**

- ✓ The media is scratched or dirty.  
☞ Clean the media, referring to the CD cleaning of the section on <Handling discs> (page 4).
- ✓ The recording condition is bad.  
☞ Record the media again or use another media.

When the unit fails to operate correctly, the cause of the failure appears on the display.

---

**"Protect" :**

Protective circuit has been activated because a speaker cord has shorted or it has come in contact with the car chassis.

- ➔ Wire or insulate the speaker cord as appropriate and then push the Reset button.

---

**"Hot Error" :**

When the internal temperature of this unit rises to 60°C or more, the protection circuit is activated and you may not be able to operate the unit. At such times this message will appear.

- ➔ Use the unit again after reducing the temperature inside the vehicle.

---

**"Mecha Error" :**

The disc player is malfunctioning.

- ➔ Eject the disc and try inserting it again. Contact the Kenwood dealer if this indicator continues blinking or the disc cannot be ejected.

---

**"Disc Error" :**

Disc is quite dirty.

- ➔ Clean the disc, referring to the section on <Handling discs> (page 4).  
Disc is upside down.  
➔ Load the disc with the labeled side up.  
An unplayable disc is inserted.

---

**"Region Code Error" :**

The disc you wanted to play has a region code that cannot be played with this unit.

---

**"Parental Level Error" :**

The disc you wanted to play has a higher level than the parental level you set.

---

**"No Device" (USB device):**

The USB device is selected as a source although no USB device is connected.

- ➔ Change the source to any source other than USB. Connect an USB device, and change the source to USB again.

---

**"Disconnected" (iPod, Bluetooth audio player):**

The iPod/Bluetooth audio player is selected as a source although no iPod/Bluetooth audio player is connected.

- ➔ Change the source to any source other than iPod/Bluetooth. Connect an iPod/Bluetooth audio player, and change the source to iPod/Bluetooth again.

---

**"No Media File" :**

The connected USB device contains no playable audio file.

Media was played that doesn't have data recorded that the unit can play.

---

**"USB Device Error!!" :**

The connected USB device is rated a current capacity higher than the allowable limit.

- ➔ Check the USB device.  
Some trouble may have occurred to the connected USB device.  
➔ Change the source to any source other than USB. Remove the USB device.

---

**"Authorization Error" :**

Connection to the iPod has failed.

- ➔ Remove the iPod and then reconnect it. The unit does not support the iPod.  
➔ Refer to <iPod/iPhone that can be connected to this unit> (page 6).

---

**"Update your iPod" :**

The iPod's software is an older version which the unit can not support.

- ➔ Confirm that the software for the iPod is the latest version. Refer to <iPod/iPhone that can be connected to this unit> (page 6).

---

**"You only can connect one iPod.":**

More than one iPod are connected to this unit.

- ➔ Connect only one iPod to the USB terminal with iPod tag.

---

**"Navigation Error. Please turn on power again later." (DNX series only) :**

The communication error has occurred due to severely cold temperature.

- ➔ Turn on power again after warming your car interior.

---

**"No Navigation" (DDX series only):**

This unit does not support the connected navigation unit.

- ➔ The latest information on the connectable navigation unit can be obtained from <http://www.kenwood.com/cs/ce>.  
No navigation unit is connected.  
➔ Connect a supported navigation unit.

---

**"Check SIRIUS" :**

The unit cannot recognize the connected SIRIUS Tuner Box.

- ➔ Check the connection of the SIRIUS Tuner Box.

---

**"Antenna Error" :**

Something is wrong with the antenna.

- ➔ Check the connection of the antenna.

---

**"Acquiring Signal" :**

The unit cannot receive any signal.

- ➔ Move the vehicle to the area where the unit can receive signal.

---

**"Updating Firmware" :**

Updating the firmware of SIRIUS tuner.

- ➔ Operation is invalid until the update is completed.

---

**"Updating Channels \*\*%" :**

Updating the SIRIUS Channel Map.

- ➔ Operation is invalid until the update is completed.

---

**"Subscription Updated" :**

Updating the subscription information.

- ➔ Operation is invalid until the update is completed.

---

**"Invalid Channel" :**

The selected channel is invalid.

- ➔ Select a different channel.

---

**"Call 888-539-SIRIUS to Subscribe" :**

The selected channel is not subscribed.

- ➔ Call the displayed number for subscription.

---

**"Check XM Tuner" :**

The unit cannot recognize the connected XM Tuner.

- ➔ Check the connection of the XM Tuner.

---

**"No Signal" :**

The unit cannot receive any signal.

- ➔ Check the connection of the antenna.

---

**"Check Antenna" :**

Something is wrong with the antenna.

- ➔ Check the connection of the antenna.

---

**"CH Unavailable" :**

The selected channel is invalid.

- ➔ Select a different channel.

---

**"CH Unauthorized" :**

The selected channel is not subscribed.

---

**"Off Air" :**

The broadcast of the selected channel has finished.

# Specifications

## Monitor section

### Picture Size

- : 6.1 inches (diagonal) wide
- : 136.2 mm (W) x 72 mm (H)

### Display System

- : Transparent TN LCD panel

### Drive System

- : TFT active matrix system

### Number of Pixels

- : 1,152,000 (800H x 480V x RGB)

### Effective Pixels

- : 99.99 %

### Pixel Arrangement

- : RGB striped arrangement

### Back Lighting

- : Cold Cathode Fluorescent Tube

## DVD player section

### D/A Converter

- : 24 bit

### Audio Decoder

- : Linear PCM/ Dolby Digital/ dts/ MP3/ WMA/ AAC/ WAV

### Video Decoder

- : MPEG1/ MPEG2/ DivX (DNX6460BT/DDX6046BT)

### Wow & Flutter

- : Below Measurable Limit

### Frequency Response

- Sampling frequency 96 kHz : 20 – 22,000 Hz
- Sampling frequency 48 kHz : 20 – 22,000 Hz
- Sampling frequency 44.1 kHz : 20 – 20,000 Hz

### Total Harmonic Distortion

- : 0.010 % (1 kHz)

### S/N Ratio (dB)

- : 98 dB (DVD-Video 96 kHz)

### Dynamic Range

- : 98 dB (DVD-Video 96 kHz)

### Disc Format

- : DVD-Video/ VIDEO-CD/ CD-DA

### Sampling Frequency

- : 44.1/ 48/ 96 kHz

### Quantifying Bit Number

- : 16/ 20/ 24 bit

## USB interface section

### USB Standard

- : USB 2.0

### File System

- : FAT 16/ 32

### Maximum Power Supply Current

- : 500 mA

### D/A Converter

- : 24 Bit

### Video Decoder

- : MPEG1/ MPEG2/ DivX (DNX6460BT/DDX6046BT)

### Audio Decoder

- : MP3/ WMA/ AAC/ WAV

## Bluetooth section

### (DNX6960/ DNX6160/ DNX6020EX/ DNX6460BT/ DDX6161/ DDX6046BT)

### Technology

- : Bluetooth Ver. 2.0 Certified

### Frequency

- : 2.402 – 2.480 GHz

### Output Power

- : +4 dBm (MAX), 0 dBm (AVE), Power Class2

### Maximum Communication range

- : Line of sight approx. 10 m (32.8 ft)

### Profile

- HFP (Hands Free Profile)
- SPP (Serial Port Profile)
- HSP (Headset Profile)
- OPP (Object Push Profile)
- PBAP (Phonebook Access Profile)
- SYNC (Synchronization Profile)

## FM tuner section

### Frequency Range

200 kHz : 87.9 MHz – 107.9 MHz  
(DNX6960/ DNX6160/ DNX6020EX/  
DNX5160/ DDX616/ DDX516)

50 kHz : 87.5 MHz – 108.0 MHz  
(DNX6460BT/ DDX6046BT)

### Usable Sensitivity (S/N : 30 dB)

: 9.3 dBf (0.8  $\mu$ V/ 75  $\Omega$ )

### Quieting Sensitivity (S/N : 50 dB)

: 15.2 dBf (1.6  $\mu$ V/ 75  $\Omega$ )

### Frequency Response ( $\pm$ 3.0 dB)

: 30 Hz – 15 kHz

### S/N Ratio (dB)

: 70 dB (MONO)

### Selectivity ( $\pm$ 400 kHz)

:  $\geq$  80 dB

### Stereo Separation

: 40 dB (1 kHz)

## AM tuner section

### Frequency Range (10 kHz)

: 530 kHz – 1700 kHz

### Usable Sensitivity

: 28 dB $\mu$

## Video section

### Color System of External Video Input

: NTSC

### External Video Input Level (mini jack)

: 1 V<sub>p-p</sub>/ 75  $\Omega$

### External Audio Max Input Level (mini jack)

: 2 V/ 25 k $\Omega$

### Video Output Level (RCA jacks)

: 1 V<sub>p-p</sub>/ 75  $\Omega$

### Audio Output Level (RCA jacks)

: 1.2 V/ 10 k $\Omega$

## Audio section

### Maximum Power (Front & Rear)

: 50 W x 4

### Full Bandwidth Power (Front & Rear)

: 22 W x 4 (4  $\Omega$ , 14.4 V, 1 % THD)

### Preout Level (V)

: 5 V/ 10 k $\Omega$  (DNX6960)

: 2 V/ 10 k $\Omega$  (DNX6160/ DNX6020EX/ DNX6460BT/  
DNX5160/ DDX616/ DDX6046BT/  
DDX516)

### Preout Impedance

: 80  $\Omega$  (DNX6960)

:  $\leq$  600  $\Omega$  (DNX6160/ DNX6020EX/ DNX6460BT/  
DNX5160/ DDX616/ DDX6046BT/  
DDX516)

### Speaker Impedance

: 4 – 8  $\Omega$

### Tone Action

Bass : 100 Hz  $\pm$  8 dB

Middle : 1 kHz  $\pm$  8 dB

Treble : 10 kHz  $\pm$  8 dB

### Navigation section (DNX series)

#### Receiver

: High-sensitivity GPS receiver

#### Reception Frequency

: 1575.42 MHz (C/A code)

#### Acquisition Times

Cold : < 38 seconds

Factory Reset : < 45 seconds

(On average for a stationary receiver with a clear view of the sky)

#### Accuracy

Position : < 10 meters typical

Velocity : 0.05 m/sec. RMS

#### Position Method

: GPS

#### Antenna

: External GPS antenna

### General

#### Operating voltage

: 14.4 V (10.5 – 16 V allowable)

#### Maximum Current Consumption

: 15 A

#### Installation Dimensions (W × H × D)

: 182 × 112 × 160 mm

7-3/16 x 4-7/16 x 6-5/16 inch

#### Operational Temperature Range

: -10 °C – +60 °C

#### Storage Temperature Range

: -20 °C – +85 °C

#### Weight

DNX series : 1.9 kg (4.1 lbs)

DDX series : 1.8 kg (4.0 lbs)

Specifications subject to change without notice.

Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.

The "AAC" logo is a trademark of Dolby Laboratories.

Font for this product is designed by Ricoh.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

iPhone is a trademark of Apple Inc.

iTunes is a trademark of Apple Inc.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

"Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



DVD is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent #s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol and DTS 2.0 Channel are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.

HD Radio™ and the HD Radio Ready logo are proprietary trademarks of iBiquity Digital Corporation.

## **DNX6460BT/DDX6046BT:**

### **ABOUT DIVX VIDEO:**

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

### **ABOUT DIVX VIDEO-ON-DEMAND:**

This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in <DivX Setup> (page 63). Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.

DivX® is a registered trademark of DivX, Inc., and is under license.

## **DNX6960/DNX6160/DNX6020EX/DNX6460BT/DDX616/DDX6046BT:**

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kenwood Corporation is under license. Other trademarks and trade names are those of their respective owners.

## **DNX6460BT/DDX6046BT:**

### **The marking of products using lasers**

**CLASS 1  
LASER PRODUCT**

The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

## **DNX6960/DNX6160/DNX6020EX/DNX5160/DDX616/DDX516:**

### **▲CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

Kenwood Corporation  
2967-3, ISHIKAWA-MACHI,  
HACHIOJI-SHI  
TOKYO, JAPAN

KENWOOD CORP. CERTIFIES THIS EQUIPMENT  
CONFORMS TO DHHS REGULATIONS NO.21 CFR  
1040.10, CHAPTER 1, SUBCHAPTER J.

Location : Bottom Panel

### **FCC WARNING**

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

### **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- Contains Transmitter Module FCC ID : RKXC5000NVA
- Contains Transmitter Module IC ID : 5119A-CK5000NVA

### **IC (Industry Canada) Notice**

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specification were met.

---

# **KENWOOD**