

Accessory Handset for DECT 6.0 Digital Cordless Phone

L4



MOTOROLA

US EN

Quick Start Guide

- 1** Getting started
- 2** Help
- 3** General Information

 
This quick start guide provides the information you need to get you started. If you need more detailed instructions, a full user's guide is available to download in PDF format from www.motorola.com.

Please consider the environment before printing.

Box Contents




Handset

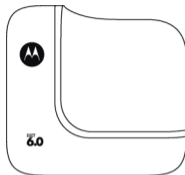

Charger



 Battery door



NiMH rechargeable
battery pack



Power adapter



Quick start guide

The accessory handset can be registered as the extension of the following Motorola models:

- L301*, L302*, L303* and L304*
- L401, L402, L403 and L404
- L402C, L403C and L404C


* Answering machine functions not compatible

IMPORTANT

Accessory handset only – requires a base unit to operate.

1 Getting started

Step 1. Connect the charger

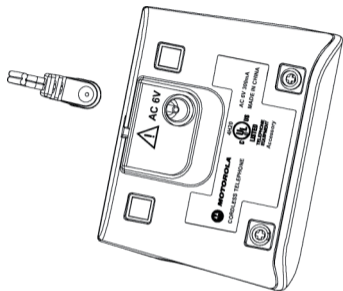

- Plug the power adapter pin into the charger.
- Plug the other end of the power adapter into the wall jack.
- Use only the provided power adapter.


TIPS


Do not place your phone in the bathroom or other humid areas.

IMPORTANT

Use only the power adapter supplied with the product.

Step 2. Install and charge the handset battery pack

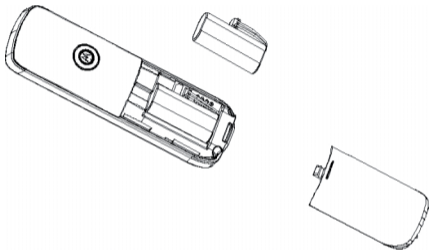








- Slide out the battery compartment cover. Place the supplied rechargeable battery pack in the battery compartment, with the battery connector plugged in, as shown.
- Slide the battery compartment cover back.
- Put the handset on the main pack base to charge for at least 24 hours. When the handset is fully charged, the  will indicate that it is fully charged.

IMPORTANT

Use only the rechargeable battery pack provided.



Step 3. Set the display language

- Press  and  to select **SETUP HS**.
- Press  and  to select **LANGUAGE**.
- Press  and  to select the language.
- Press  to save.



Step 4. Registration

To work as the handset extension, the handset must be registered to the base of the listed Motorola models on page 2.

1. Register to L30x/L40x series base



- Power on the handset, screen will show **NOT REGISTERED**.
- Press and hold  for 4 seconds on base.
- Release  once IN USE LED is flashing. (For L40x series only)
- Place the unregistered handset on the charger.
- A confirmation tone is generated if registration is successful. **HANDSET X** is displayed where **X** denotes the number of handsets and the phone goes back to idle.

2. Register to L40xC series corded base


- Power on the handset, screen will show **NOT REGISTERED**.
- Press and hold  for 4 seconds on corded base.
- Release  once IN USE LED is flashing.
- Place the unregistered handset on the charger.




- A confirmation tone is generated if registration is successful. **HANDSET X** is displayed where **X** denotes the number of handsets and the phone goes back to idle.

Step 5. Set date and time

- Press  to select **DATE & TIME**
- Press  and edit the year and date.

TIPS

You can press  to move between the input fields **YEAR** and **DATE**.

- Press  and edit the time in 12hr format. Press  to toggle **AM/PM** settings.
- Press  to save the settings.

NOTE

If you have subscribed to your network's Caller ID service, the date and time is set automatically for all handsets every time a call is received.

2 Help

For more solutions, see the full Help section in the user's guide of Motorola models listed on page 2.

The icon is not scrolling when the handset is placed on the charger

- Bad battery contact – move the handset slightly
- Dirty contact – clean the battery contact with a cloth moistened with alcohol
- Battery is full – no need to charge

No dial tone

- No power on the registered base - check the connections. Re-power the base by unplugging and re-plugging the power connection.
- Handset batteries are empty - charge the battery pack for at least 24 hours.
- Handset may be too far from the registered base - move closer to the base.

Poor audio quality

- The registered base is too close to electrical appliances, reinforced concrete walls or metal doorframes - move the base away from any electrical appliances.

No ring tone

- The ring tone is deactivated.
- Increase the volume.

Caller ID does not work

- Check your subscription with your network operator.

A phonebook entry cannot be stored

- The phonebook is full. Delete an entry to free memory.

No display

- Try recharging or replacing the rechargeable battery pack.
- Re-power the registered base by unplugging and re-plugging the power connection.

When the handset lost its link with the registered base during a call

- Check if the power cord is connected properly into the registered base.
- Check if the power adapter is connected properly into the wall socket.
- Move the handset closer to the base. It may be out of range.
- Unplug the base power from the unit. Wait for around 15 seconds and re-plug the power again. Allow up to one minute for the handset to synchronize with the registered base again.

Noise interference on your radio or television

- Your registered base or charger may be too close. Move it as far away as possible.

Need more help?

- For a full explanation of all features and instructions, please refer to the user's guide of one of the models listed on page 2.

3 General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide of one of the models listed on page 2.
2. Visit our website: www.motorola.com
3. Contact Customer Service in the US and Canada at 1-888-331-3383.

To order a replacement battery contact customer service or visit our website.



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, and other Motorola trademarks and trade dress are owned by Motorola, Inc. and are used under license from Motorola, Inc. MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2009. All rights reserved.

Printed in China
Version 2.0