

# Citizen Movement Caliber E71\* and E76\* Abbreviated Setting Instructions

## FEATURES

- Light Powered
- Rechargeable Energy Cell
- Perpetual Calendar
- Independent Hour Adjustment

## SPECIFICATIONS

- Movement Type: Analog Solar Powered
- Accuracy: +/- 15 seconds per month when worn under normal conditions - 5-60°C (14-140°F)
- Operating Temperature Range: -10-60°C (14-140°F)
- Battery: None (Eco Drive energy cell)
- Run Time on Full Charge: Approx. 2 years. (this can be affected by temperature, operating conditions and age of timepiece)
- 2 Second Jump interval to complete stop: approx. 2 days
- Overcharge Prevention



[Click Here for Full Setting Instructions \(84K PDF\)](#)

## IMPORTANT NOTE

**If the watch reaches a low or no charge state, or abnormal function is noted, please follow the All Reset and Base Position Procedure prior to setting the actual time and date.**

Time and Calendar setting is done electronically by turning the crown.

### ALL RESET AND BASE POSITION ADJUSTMENT

■ Pull the crown out two 'clicks', and press in recessed button (on the side of the case at the 2:00 position) for 2 to 3 seconds and release. The hour, minute and second hands will move, then stop. ALL RESET is now complete and BASE POSITION ADJUSTMENT can be made.

### Base Position Adjustment

- After the ALL RESET, with the crown still pulled out two 'clicks', turn the crown and move the hour and minute hands to the 12:00 position.
- Press the crown in and pull it out one 'click' and then turn the crown clockwise and move the second hand to the zero mark. Turn the crown counterclockwise quickly two or three 'clicks' and Date will change automatically every 5 seconds, until the crown is turned one 'click' in either direction to stop its advance. Move the Date to the number 1. BASE POSITION ADJUSTMENT is now completed.
- Press the crown in and wait for the second hand to move in two second steps (signaling memory is set). Proceed with the Time and Calendar setting procedures.

### TO SET THE TIME

The CITIZEN Eco-Drive perpetual calendar watch is preset at the factory, but because it has crossed time zones and the international date line, you will probably need to set it once to be set for life. Just follow these simple instructions.

■ Pull the crown out to the first 'click'. The second hand will move to the month/leap year position that has been previously set. Make sure that it is set to the correct month/leap year as follows:

### Regarding the Month

January:	Between 1:00 and 2:00
February:	Between 2:00 and 3:00
December:	Between 12:00 and 1:00
Year Passages	Year Passages
2000 Leap Year	2004 Leap Year
2001 1st Year	2005 1st Year
2002 2nd Year	2006 2nd Year
2003 3rd Year	2007 3rd Year



If the month/leap year position needs to be adjusted, turn the crown clockwise. The second hand moves one step for each 'click'. Set the second hand to the correct month/leap year position.

- If the date needs to be adjusted, turn the crown counterclockwise. The date advances one day forward for each 'click'.
- To set the time, pull the crown out to the second 'click' and adjust the hands.
- After setting is complete, return the crown to the original position. The watch will resume normal operation.

### TO READ THE CALENDAR MEMORY

■ Pull the crown out one 'click'. The second hand becomes the Month/Leap Year indicator. The hour markers, 1-12 acts as Month Number Indicators. The first 3-minute markers after each hour mark are used to indicate the number of years after a Leap Year.

EXAMPLE: If the second hand moves to the 12 marker exactly, the Month would be December of a leap year. If the second hand moves to three 'ticks' after the 12, that would indicate that the memory is set to December and the Year is set to 3 Years after a Leap Year.

### TO SET THE CALENDAR

- Pull the crown out one 'click', the second hand will move to a Month/Leap Year position and stop.
- To change the Month/Leap Year indication, turn the crown clockwise one 'click'. The second hand moves forward one 'tic'. Set the second hand to correct indication according to the Calendar Memory guide shown to the left.
- To change the Date, turn crown one 'click' counterclockwise and the Date moves one Day forward. If the crown is turned counterclockwise quickly 2 or 3 'clicks', the date will change automatically every 5 seconds until the crown is turned 1 'click' in either direction to stop its advance. After setting press crown in and screw down tight.
- Since the Calendar is perpetual, once it is set correctly, it changes Month, Year setting and Date automatically until the year 2100.

### TO CHANGE TO A DIFFERENT TIME ZONE

- Crown is unscrewed (if crown is screw lock type) but NOT pulled out during this adjustment.
- Press in and release recessed pushbutton at the 2:00 position on the side of the case and turn the crown clockwise. The hour and minutes hands will move forward one hour.
- Turn the crown counterclockwise and the hands will move backward one hour. The second hand continues moving while Time Zone is changed so the accuracy of the time is not affected.

**For additional features and instructions, please refer to the full instruction manual or our web site at [www.citizenwatch.com](http://www.citizenwatch.com).**