



CHRONO CLASSIC XLS ALARM
INSTRUCTION MANUAL



I. GENERAL INFORMATION :

- Multi-function movement 2
- Initial status 2
- Chronograph active 2

II. TECHNICAL INSTRUCTIONS :

- Setting the time and date 4
- Rapid date adjustment 4
- Reference time 6
- Setting alarm time 8
- Chronograph 10

I. GENERAL INFORMATION

MULTI-FUNCTION MOVEMENT :

The alarm and chronograph are combined within this movement. All functions can be operated with the 2 push-buttons and crown.


INITIAL STATUS (CHRONOGRAPH HANDS ARE AT ZERO POSITION) :

- ▶ Start the Chronograph with Pusher A
- ▶ Turn alarm on and off with Pusher B

CHRONOGRAPH ACTIVE :

Pusher B is also operative for the chronograph as soon as timing is started with Pusher A. At the end of timing, when the chronograph hands are reset to zero, the pusher functions revert to their initial status.

Alarm cannot be adjusted when the chronograph is active.

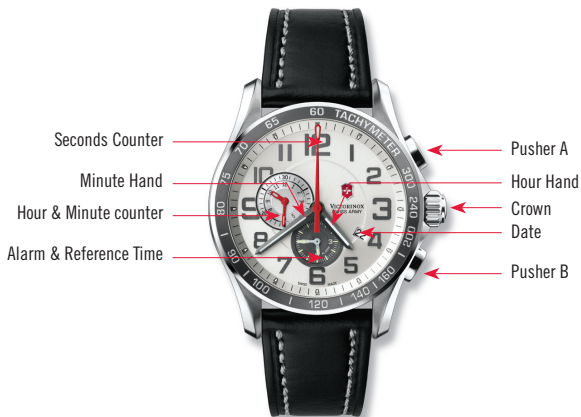

II. TECHNICAL INSTRUCTIONS

SETTING THE TIME AND DATE :

- ▶ Pull out crown to position II
- ▶ Turn crown until yesterday's date appears

- ▶ Pull out crown to position III (the alarm display changes from alarm time to reference time)
- ▶ Turn crown until correct date appears (at 12 midnight)
- ▶ Continue to turn crown to desired time
- ▶ Push in crown to position I (the alarm display changes from reference to alarm time)

RAPID DATE ADJUSTMENT :

- ▶ Pull out crown to position II
- ▶ Turn crown until correct date appears
- ▶ Push crown back to position I

Please Note : Resetting the time also requires the identical correction of the reference time – please refer to “setting the reference time”.



II. TECHNICAL INSTRUCTIONS

REFERENCE TIME :

What is 'reference time' ? – The current time is displayed by the hour and minute hand, however parallel to this, the reference time runs in the background. The alarm function refers to this reference time. This means that both the current time and reference time must always be synchronized to ensure alarm sounds at correct time – any adjustments made to the current time have to also be made to the reference time.

SETTING THE REFERENCE TIME :

- ▶ Pull out crown to position III
- ▶ Press pusher B for at least 2 seconds to activate setting mode
- ▶ Small minute hand will jump forward 1 second to indicate mode is active – reference time can now be set to match current time

- ▶ **Short pressing** of pusher B (less than 1sec) moves reference time forward by the minute
- ▶ **Medium pressing** (1 – 2 sec) moves reference time forward by the hour
- ▶ **Long pressing** (longer than 2 sec) – reference time is moved forward until pusher is released
- ▶ Push in crown to position I
- ▶ Display changes from reference time to alarm time
- ▶ A signal indicates alarm is switched off



II. TECHNICAL INSTRUCTIONS

SETTING ALARM TIME :

Press pusher B for at least 2 seconds to activate setting mode. Small minute hand will jump forward 1 second to indicate mode is active – alarm time can now be set

- ▶ **Short pressing** of pusher B (less than 1sec) moves alarm time forward by the minute
- ▶ **Long pressing** (longer than 2 sec) – alarm time is moved forward until pusher is released

Please Note: If the push button is not activated for 10 seconds, the alarm setting mode is deactivated. At the same time two beeps are emitted to indicate alarm is on.

- ▶ **Press pusher B** to switch alarm on/off
 - 1 beep – alarm off
 - 2 beeps – alarm on

Please Note: The alarm can be set a maximum of 12 hours before the desired alarm time



II. TECHNICAL INSTRUCTIONS

CHRONOGRAPH :

The chronograph functions the same as on all chronograph models. Please refer to instructions manual for how to use chrono.

REINITIALIZING THE CHRONOGRAPH HANDS:


- Pull out crown to position III
- Press pushers A and B simultaneously for at least 2 seconds
- The seconds chrono hand will rotate to indicate mode is activated

RESET SECONDS CHRONO HAND

- Press pusher A to revert hand to zero position
- Press pusher B to activate Hour & minutes reset-

RESET HOUR & MINUTES COUNTER

- Press pusher A to revert hands back to zero position
(Hands are mechanically coupled, so will revert together)
- Push in crown to position I

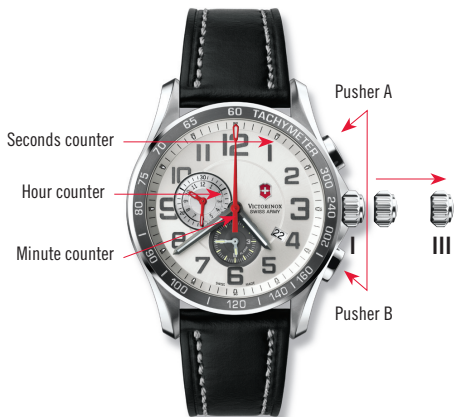

Victorinox Swiss Army, Inc.
7 Victoria Drive – P.O. Box 1212 – Monroe, CT 06468-1212
Consumer Service: 800 442 2706
www.swissarmy.com

