


Operating Instructions

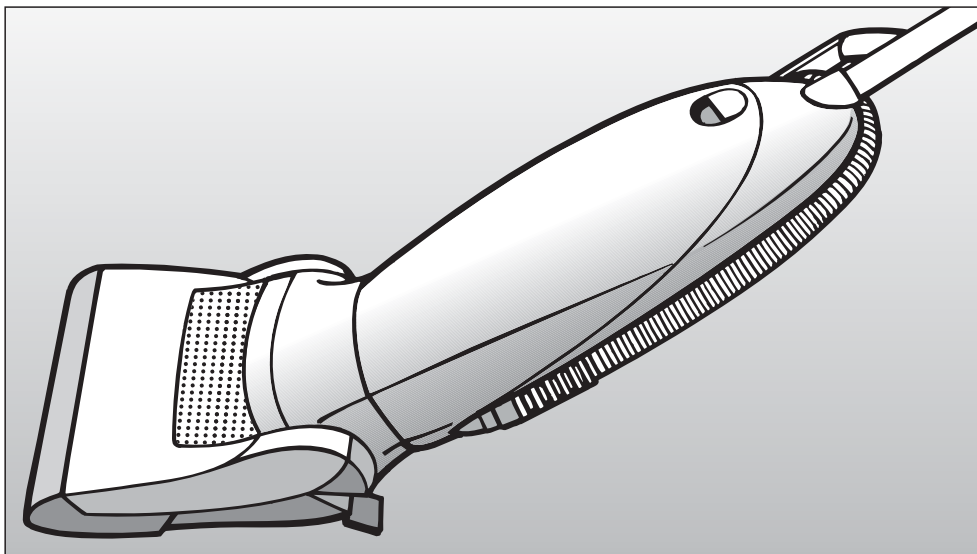

Upright Vacuum Cleaner S 7000

ONLY MIELE DUSTBAGS, FILTERS AND ACCESSORIES
WITH THE "ORIGINAL MIELE" LOGO CAN BE USED
WITH THIS VACUUM CLEANER.
USE OF NON-MIELE COMPONENTS MAY VOID THE WARRANTY.

To prevent accidents
and machine damage,
read these instructions
before
installation and use.


HS08

en - US, CA

M.-Nr. 07 450 381

Only Miele dustbags, filters and accessories with the "Original Miele" logo can be used with this vacuum. Only then can the suction power of the vacuum cleaner reach its optimum potential creating the best possible cleaning results.

USE OF NON-MIELE COMPONENTS MAY VOID THE WARRANTY.

 The use of dustbags made of paper or a similar material, or dustbags with a cardboard retaining plate can lead to serious damage to the vacuum cleaner and may void the warranty, just as with the use of dustbags without the "Original Miele" logo.

The "Original Miele" Logo will appear on the packaging or directly on the dustbag.



Purchasing new dustbags and filters

Original Miele dustbags and filters can be purchased from an authorized Miele vacuum dealer or by visiting the Miele store at www.mieleusa.com.

IMPORTANT SAFETY INSTRUCTIONS	4
Guide to the vacuum cleaner	7
Before the first use	9
Included accessories	10
Use	12
Power cord	12
Turning the vacuum cleaner On/Off	14
Selecting the suction power setting	15
"Automatic" setting	17
Vacuum hose	18
Telescopic wand	19
Powerbrush	20
Maintenance and care	22
Purchasing new dustbags and filters	22
Which dustbags and filters are the right ones?	22
When to change the dustbag	23
Changing the dustbag	24
When to change the dust compartment filter (pre-motor filter)	25
Changing the dust compartment filter	25
When to change the exhaust filter	26
Exhaust filter change indicator	26
Replacing the "Air Clean" filter	27
Replacing the "Active Air Clean" filter and the "Active HEPA"filter	28
Exchanging exhaust filters	29
Removing hair and threads from the Powerbrush	30
Cleaning and care	32
Frequently asked questions	33
Technical service	34
Optional Accessories	35
Caring for the environment	39

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING-

To reduce the risk of fire, electric shock or injury:

Before using

► Check the voltage rating of the vacuum cleaner before connecting the power cord to an electrical outlet. The power source should correspond with the voltage rating plate of the vacuum cleaner. Use only household AC outlets. Never use DC power sources. If you are not sure of your home's voltage supply, consult a qualified electrician. Connecting the vacuum cleaner to a higher voltage may result in damage or injury.

► To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not alter the plug in any way.

► The electrical outlet must be fitted with a 15 A fuse.

► A damaged vacuum cleaner can be dangerous. Check the packaging, vacuum cleaner and accessories for any signs of damage. Do not use a damaged appliance.

► Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors or submerged in water, bring it to a service center.

IMPORTANT SAFETY INSTRUCTIONS

Use

- ▶ Do not use on people or animals.
- ▶ Do not use outdoors or on wet surfaces. Only **dry** surfaces should be vacuumed.
- ▶ Use only as described in this manual with Miele recommended accessories.
- ▶ This appliance is intended for household use only.
- ▶ Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used near children.
- ▶ Be aware, the cord clip can become loose over time. Do not allow children to come in contact with this small part. Choking hazard.
- ▶ Never use the vacuum cleaner without the dustbag or filters in place. It may cause damage.
- ▶ If a dustbag is not inserted, the dust compartment lid will not close. Do not force it shut.
- ▶ Do not leave the vacuum cleaner plugged in. Unplug it from the outlet when not in use and before servicing.
- ▶ This vacuum cleaner should not be used to entrap or retain any hazardous materials.
- ▶ Do not use the vacuum cleaner to pick up liquids or damp dirt. This could impair the electrical safety of the vacuum cleaner. Wait for freshly shampooed carpets to dry.
- ▶ Do not vacuum anything that is burning or smoking such as cigarettes, matches or hot ashes. The vacuum cleaner could catch fire.
- ▶ Do not vacuum toner dust. Toner, such as that used in printers and photocopiers, can conduct electricity.
- ▶ Do not vacuum flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- ▶ Do not vacuum items which are heavy, hard or have sharp edges. They could cause a blockage and damage the appliance.
- ▶ Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- ▶ Do not unplug the vacuum cleaner by pulling on the cord. To unplug, grasp the plug, not the cord.
- ▶ Do not handle the plug or vacuum cleaner with wet hands.
- ▶ Keep the power cord, hair, loose clothing, fingers and other parts of the body away from openings and moving parts.
- ▶ Do not place anything into the openings of the vacuum cleaner. Do not use if any openings are blocked; keep them free of dust, lint, hair, or anything that may reduce air flow.

IMPORTANT SAFETY INSTRUCTIONS

- ▶ Turn off all controls before unplugging.
- ▶ Use extra care when cleaning on stairs.
- ▶ The hose, wand and accessories must not be used at head level to avoid injury to eyes and ears.
- ▶ Monitor the airflow indicator and inspect all filters regularly. For best performance, the dustbag and filters should be replaced when necessary. A full bag or blocked filter will reduce the vacuum cleaner's suction power. A temperature limiter automatically switches the vacuum cleaner off if it gets too hot, see "Frequently asked questions".

Using accessories

- ▶ Unplug the vacuum cleaner when changing accessories.
- ▶ To avoid the risk of injury when vacuuming do not touch the beater bar. Danger of injury.
- ▶ Do not use the vacuum hose or telescopic wand without an accessory attached. The rim could be damaged and injuries could result from sharp edges.
- ▶ Miele dustbags are disposable and intended to be used only once. Do not attempt to reuse them. An over stuffed dustbag will reduce the efficiency of the vacuum cleaner.
- ▶ Only use genuine Miele dustbags with the Miele quality signet and original Miele filter and accessories. Only then can the manufacturer guarantee its safety.

Cleaning, maintenance and repairs

- ▶ Turn the vacuum cleaner off after each use and before every cleaning/maintenance. Pull the plug from the outlet.
- ▶ Never submerge the vacuum cleaner in water. Clean only with a dry or slightly damp cloth when disconnected from the mains supply. If moisture gets into the appliance there is a risk of electric shock.
- ▶ Repairs must only be performed by an authorized service agent in accordance with national and local safety regulations. Repairs by unqualified persons could be dangerous. The manufacturer cannot be held responsible for unauthorized work.


- ▶ If the power cord is damaged it should be replaced with a genuine Miele cord by Technical Service.

Disposing of an old appliance

- ▶ Before discarding an old vacuum cleaner, please cut off the power cord and render the plug useless. Ensure the appliance presents no danger to children while being stored for disposal.

SAVE THESE INSTRUCTIONS

Guide to the vacuum cleaner

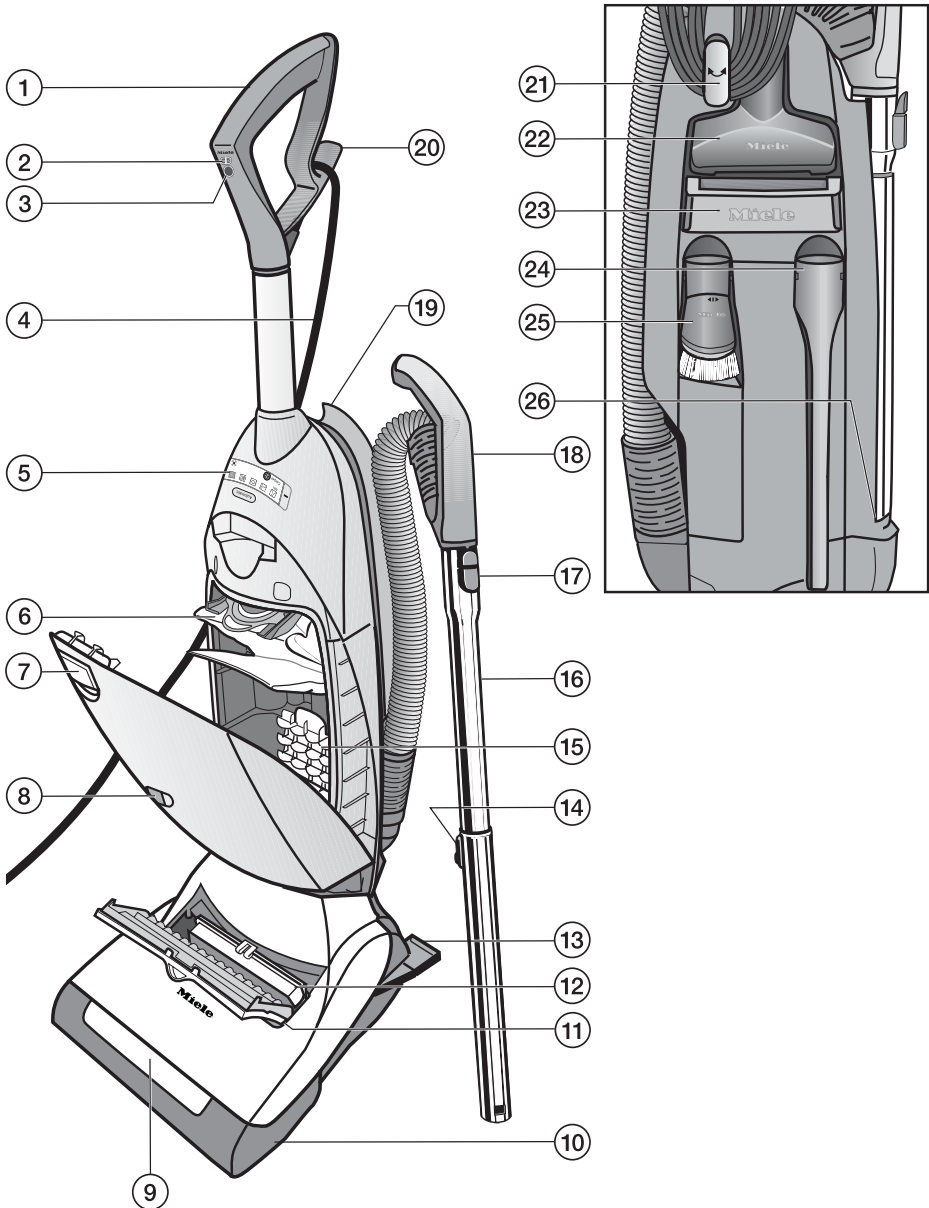

The illustration shows the vacuum cleaner with all available options. Options vary depending on model.

Guide to the vacuum cleaner

- ① Hand piece
- ② On/Off switch
- ③ Carpet/Floor Powerbrush selector
- ④ Power cord
- ⑤ Control panel
- ⑥ Dustbag
- ⑦ Dust compartment lid release
- ⑧ Airflow indicator
- ⑨ Headlight *
- ⑩ Powerbrush
- ⑪ Exhaust filter compartment
- ⑫ Exhaust filter *
- ⑬ Foot pedal to recline vacuum
- ⑭ Telescopic wand release button
- ⑮ Dust compartment filter (pre-motor filter)
- ⑯ Telescopic wand
- ⑰ Release button
- ⑱ Vacuum hose with handle
- ⑲ Hose clip
- ⑳ Power cord hook (upper)


The features marked * may vary or not be available on your model.

Back of vacuum cleaner

- ㉑ Adjustable power cord hook (lower)
- ㉒ Upholstery tool
- ㉓ Carrying handle
- ㉔ Crevice nozzle
- ㉕ Dusting brush
- ㉖ Bracket for telescopic wand

Assembly

- Put the vacuum cleaner in an upright position.
- Push the handle down into the body of the vacuum cleaner until it engages (see illustration).

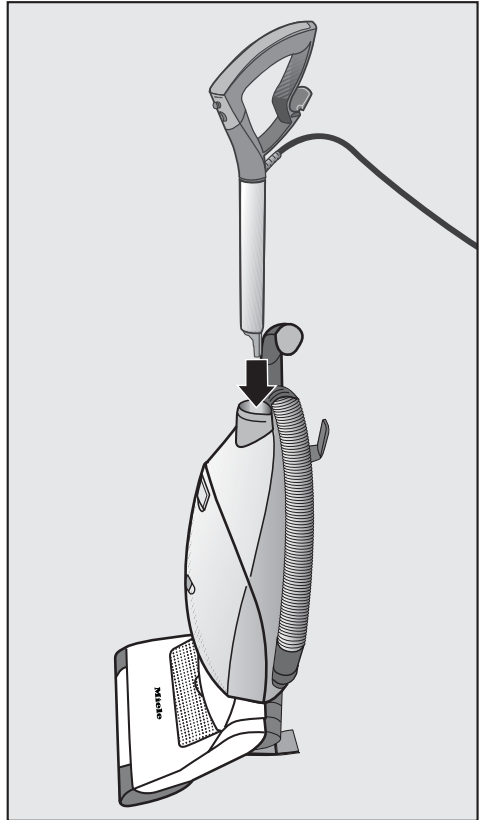


Included accessories

The following accessories are mounted on the rear of the vacuum cleaner.

- ① Upholstery tool
- ② Crevice nozzle, 12" (300 mm)
- ③ Dusting brush with natural bristles

Attach the accessory you wish to use to the handle on the vacuum hose or the telescopic wand.

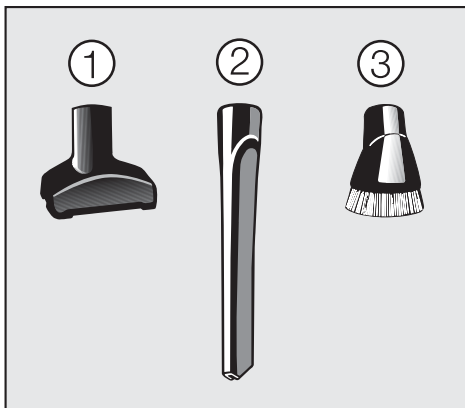


Upholstery tool

For cleaning upholstery, mattresses, cushions, draperies, etc.



Crevice nozzle, 12" (300 mm)


For cleaning folds, crevices, corners and tight spaces.

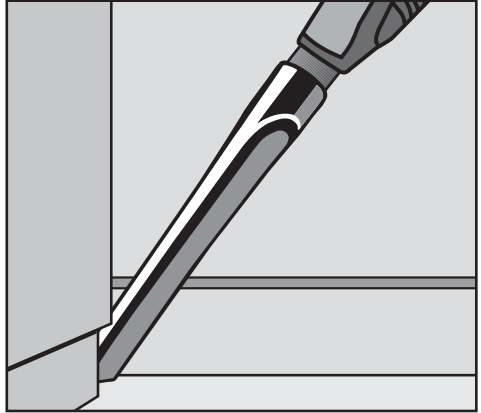

Dusting brush with natural bristles

For cleaning moldings, ornate and carved articles, delicate items, etc.

The brush head can be turned to attain the optimal cleaning position.

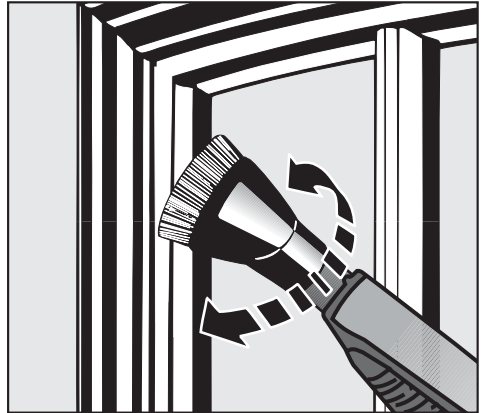


Use

Power cord

The lower cord hook can be rotated.


- Rotate the hook upward to release the power cord.

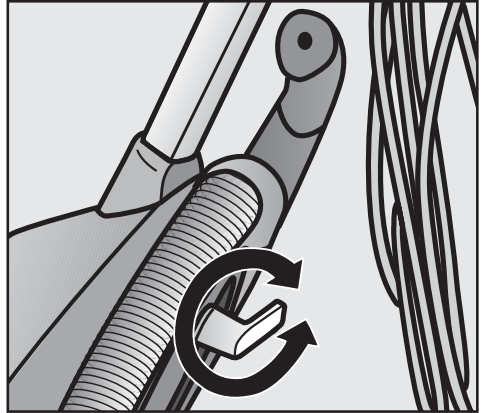

Rewinding the power cord

When the vacuum cleaner is not in use, the power cord can be wound around the two cord hooks.


- To prevent the cord from unwinding press it into the locking groove of the plug (see insert).

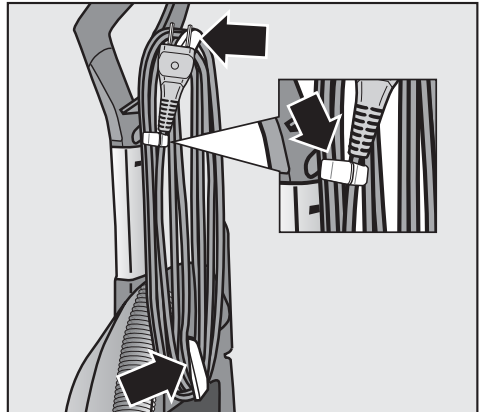

Plug in the vacuum cleaner


- Guide the power cord through the notch at the side and over the upper cord hook (see illustration).

This will keep the cord in an optimal position so that it will not interfere with vacuuming. It also keeps the power cord from becoming caught in the handle.

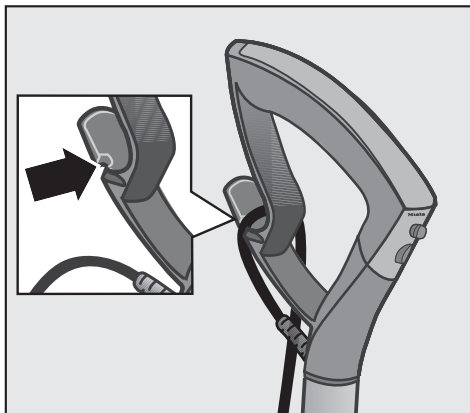

Release the vacuum cleaner

- Briefly press the foot pedal and recline the body of the vacuum cleaner to a comfortable position.

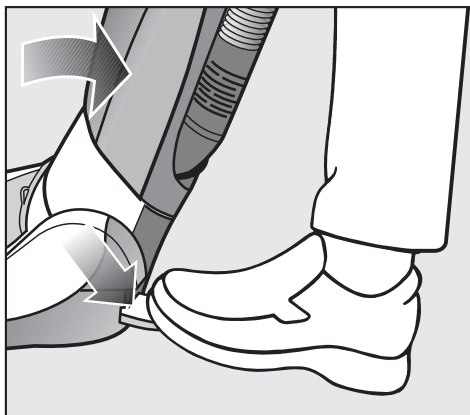

Use

Turning the vacuum cleaner On/Off

Always follow the flooring manufacturer's cleaning and care instructions.


- Press the On/Off button on the handle.

The vacuum cleaner turns on.

ComfortLine Models: The "On" indicator on the control panel lights yellow.

PremiumLine Models: The suction power levels on the control panel light yellow.


Lighting (depending on model)
The headlight turns on automatically.

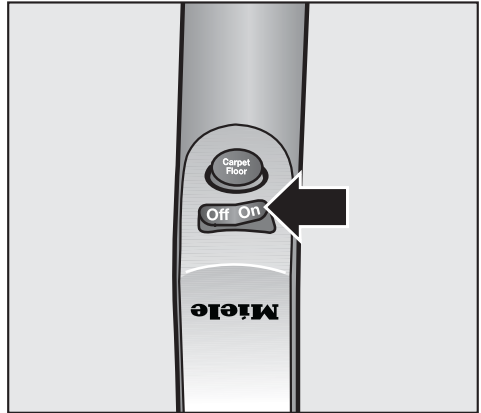

Depending on the model, your vacuum cleaner will include one of the following control panels.

ComfortLine Models

- ① Vacuum "On" indicator
- ② Operation/Blockage protection indicator
Yellow: the Powerbrush was turned on using the Carpet/Floor button on the hand piece.
Red: the beater bar is blocked
- ③ Rotary selector

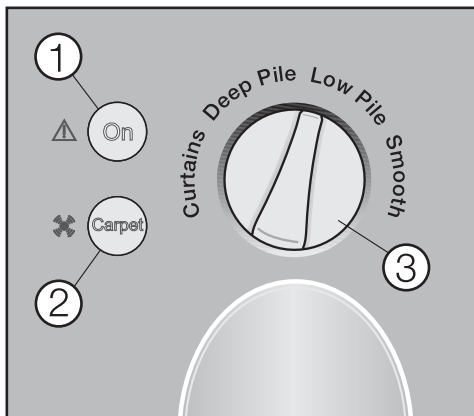


Selecting the suction power setting

You can adjust the suction power to suit your preference.

Rotary selector


- Turn the suction power selector to the desired setting.

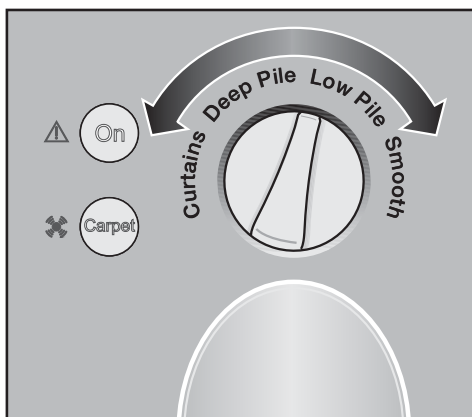

Use



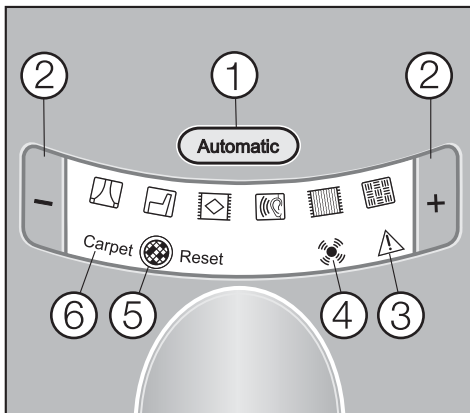



PremiumLine Models

- ① "Automatic" button
- ② +/- controls, to set the desired suction power setting
- ③ ⚠ "Thermo" indicator
- ④ Blockage protection indicator
- ⑤ Exhaust filter change indicator (reset button)
- ⑥ "Carpet" indicator, the Powerbrush was turned on using the Carpet/Floor button on the hand piece.




+/- Controls

 The symbols on the control panel indicate what each setting is recommended for:

-  curtains, lightweight fabrics
-  upholstery, cushions
-  thick pile carpets, rugs and runners
-  energy saving, daily vacuuming with low noise level
-  low pile carpets
-  hard flooring and intensive cleaning of carpets.

- To select a higher power setting, press the + button.
- To select a lower power setting, press the - button.

The selected power level is displayed with a yellow light.

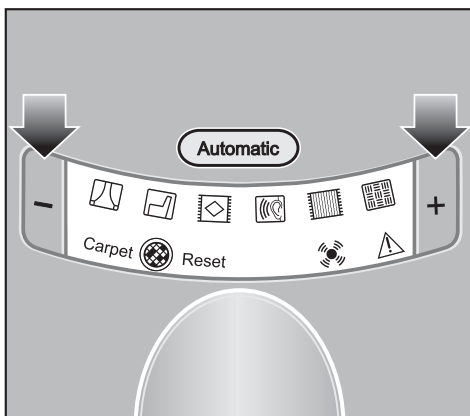

"Automatic" setting


(models with +/- controls)

If the "Automatic" setting is selected, the vacuum cleaner will automatically adjust the suction power level to suit the surface being cleaned.

■ Press the "Automatic" button.



The button lights yellow.

To deactivate the setting, press the "Automatic" button again.


 Do not use the this setting to vacuum draperies or other lightweight fabrics. Excessive suction may cause damage.

Note:

To adjust to changing floor heights, e.g. carpet edges, thresholds, etc., briefly step on the release button to raise the front of the vacuum cleaner.

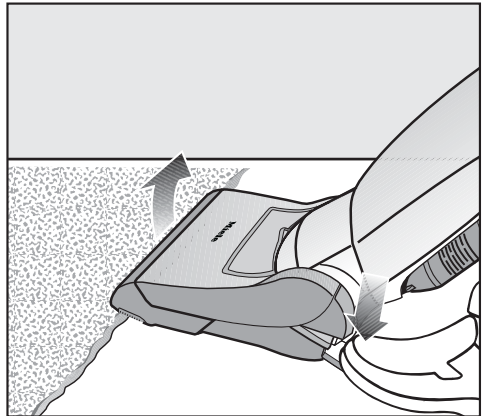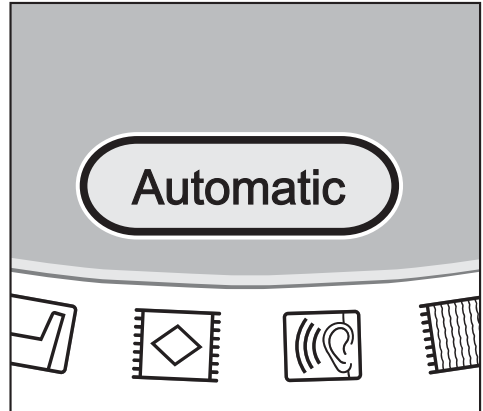


Use

 Do not use the vacuum hose or wand at head level. Injury can occur.

Do not use the vacuum hose or telescopic wand without an accessory attached. The rim could be damaged and injuries could result from sharp edges.


When vacuuming stairs, ensure that the vacuum is placed on a lower step. Risk of injury.

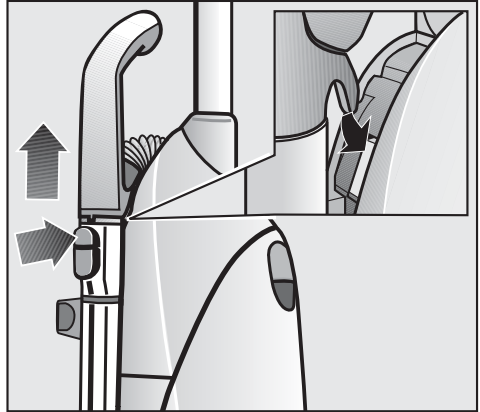

Vacuum hose

- Place the vacuum in an upright position.
- Press the release button on the telescopic wand and pull the vacuum hose handle upwards.
- To increase the stability of the vacuum cleaner, slip the elbow over the vacuum hose so it engages.

For regular vacuuming, you will need to snap the handle back into the telescopic wand and place the wand back into the bracket (see the upper illustration).

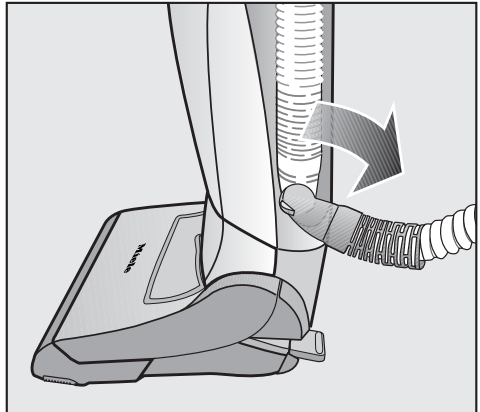




Telescopic wand

- Place the vacuum in an upright position.
- To unhook the telescopic wand from the bracket, pull upward on the handle.
- To increase the stability of the vacuum cleaner, slip the elbow over the vacuum hose so it engages.

The telescopic wand is composed of two interlocking tubes that can be adjusted to the desired length.

- Press the telescopic wand release button (see arrow) to release the tubes and adjust to the desired height.

To store the wand, adjust the tubes to the shortest length and place it back into the bracket (see the upper illustration).

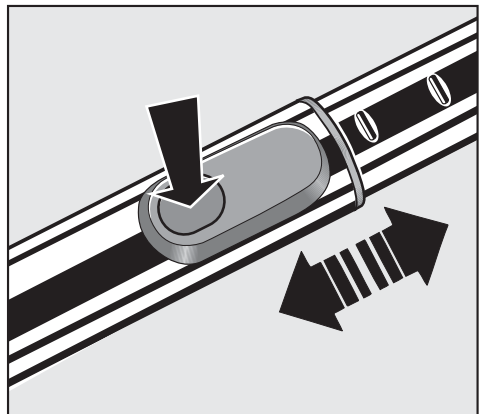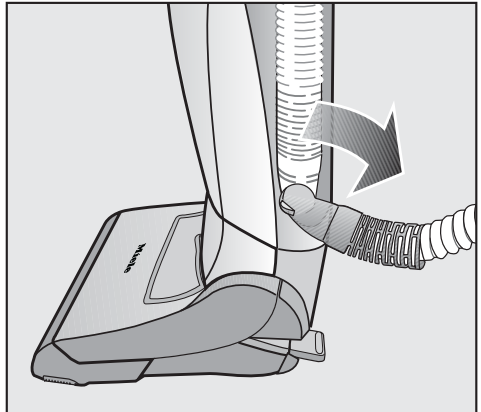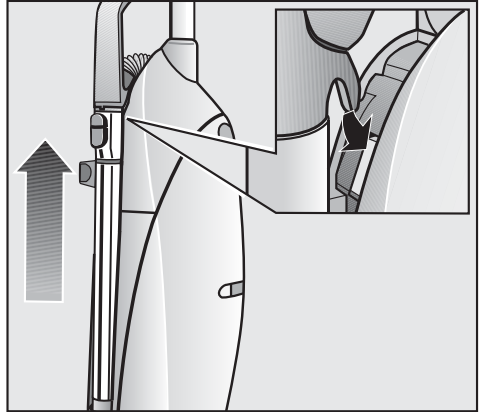


Use


Powerbrush

Recommended use

Always follow the flooring manufacturer's cleaning and care instructions.

The Powerbrush is particularly suitable for cleaning and restoring crushed carpet pile of wall to wall carpeting and floor coverings subject to hard wear, especially in high traffic areas.

 Do not use the Powerbrush to vacuum high quality, hand knotted rugs, for example Berber or Persian rugs, as well as extremely long piled area rugs and carpets, e.g. shag. There is a danger of the threads being pulled out. Turn the Powerbrush off to vacuum these types of floor coverings and use only low suction power.

 Do not use the Powerbrush on floors with a variable or uneven surface. The brush could come in contact with the floor and cause damage.

Turning the Powerbrush On/Off

The beater bar in the Powerbrush is driven by a separate motor, which can be switched on and off.


- Press the "Carpet/Floor" button on the handle.

The Powerbrush turns on. The indicator on the control panel lights yellow.


You can also use the button to switch off the Powerbrush while vacuuming, for example when moving from carpet to hard floors.

The Powerbrush automatically shuts off anytime the body of the vacuum cleaner is placed into the full upright position.

- For best results, move the Powerbrush slowly back and forth over the area you wish to clean.

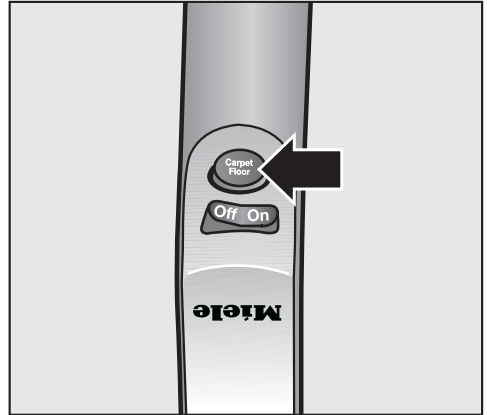

Maintenance and care


 Turn off and unplug the vacuum cleaner before performing any maintenance work.

The Miele filter system consists of the following three components.

- Dustbag
- Exhaust filter
- Dust compartment filter

Each of these components must be changed periodically to maintain the vacuum cleaner's efficiency.

Only use Miele dustbags, filters and accessories with the "Original Miele" logo. Only then can the suction power of the vacuum cleaner reach its optimum potential creating the best possible cleaning results.

 The use of dustbags made of paper or a similar material, or dustbags with a cardboard retaining plate can lead to serious damage to the vacuum cleaner and possibly voiding the warranty, just as with the use of dustbags without the "Original Miele" logo.

Purchasing new dustbags and filters

Original Miele dustbags and filters can be purchased from an authorized Miele vacuum dealer or by visiting the Miele store at <http://store.miele.com>.

Which dustbags and filters are the right ones?

This vacuum cleaner uses Original Miele dustbags Type **U** and an Original Miele filters, the "Original Miele" Logo will appear on the packaging or directly on the dustbag.



An "Air Clean" exhaust filter and a dust compartment filter are supplied with every box of Miele dustbags.

If you would like to purchase additional Miele filters separately, contact your vacuum dealer or Miele, please quote the model number of your Miele vacuum cleaner to ensure correct parts are ordered. These parts are also available to order from the online Miele store.

The exhaust filter supplied with the vacuum cleaner can be exchanged with another type of Original Miele filter (see "Exchanging exhaust filters").

When to change the dustbag


Change the dustbag when the colored marker in the airflow indicator fills the display.

Miele dustbags are disposable and made to be used only once. Do not attempt to reuse.

Check the airflow indicator

- Place the body of the vacuum cleaner into the full upright position.
- Use the On/Off button on the handle to switch the vacuum cleaner on, then select the highest suction setting.
- Tip the vacuum cleaner until you can read the color marker in the indicator window. The electrobrush will be lifted up at the front.

If the color marker completely fills the indicator window, the dustbag needs to be changed.

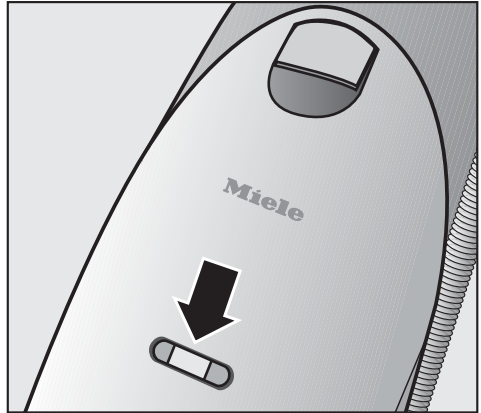

How the airflow indicator works

The airflow indicator is designed to show when the bag is full of common household dust. It also measures the amount of air flow through the dustbag. Normal household dust is a mixture of dust, hair, carpet fluff, threads, etc.


However, if fine dust, such as drill dust, sand, plaster or flour is vacuumed, the pores of the dustbag may become blocked. The marker will indicate that the bag is "full" even though it does not look "full". The dustbag should still be changed, as the suction power is greatly reduced.

If the bag is bulging with pet fur, hair, carpet fluff, etc. the indicator may not register "full". This is because the air flow of the dustbag may still be high enough not to activate the marker to show maximum. The dustbag should still be changed.

Maintenance and care

Changing the dustbag



- Place the body of the vacuum cleaner into the full upright position.
- Lift the release button for the dust compartment lid and open until it clicks into place.

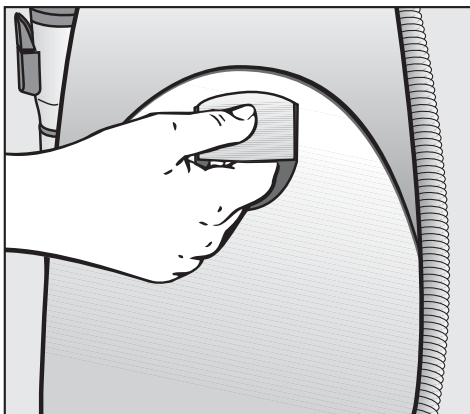


- Pull the tab on the collar and swing the dust bag up and away from the suction socket before taking it out of the frame.

The dustbag has a flap that automatically closes to prevent dust from escaping when the bag is removed.

- Do not unfold the dustbag when you first remove it from the box. Insert the new dustbag as far as it will go into the holder.
- Unfold the dustbag in the dustbag compartment.
- Close the dust compartment lid until it clicks into place, taking care not to catch the dustbag in the lid. The dustbag is automatically aligned with the vacuum hole.

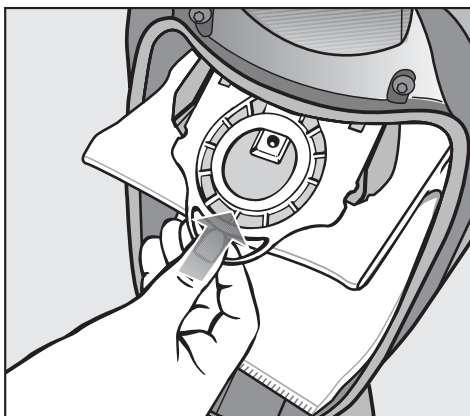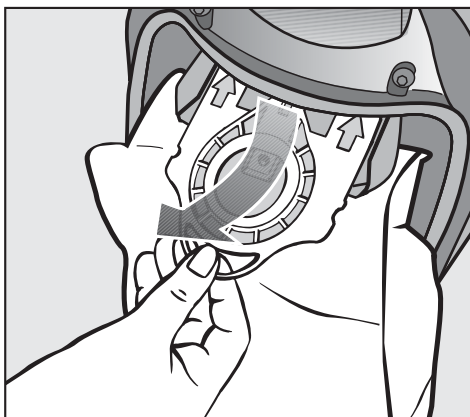


 An empty-operation-barrier blocks the dust compartment lid from closing if no dustbag is inserted or if it is not inserted correctly. Do not force it closed.

When to change the dust compartment filter (pre-motor filter)

Whenever you start a new box of Miele dustbags, you should change the dust compartment filter. A new filter is included in every box.

Changing the dust compartment filter

- Open the dust compartment lid.
- Open the filter frame, use the clean corner to remove the filter.
- Insert a new filter.
- Close the filter frame.
- Close the dust compartment lid until it clicks into place.

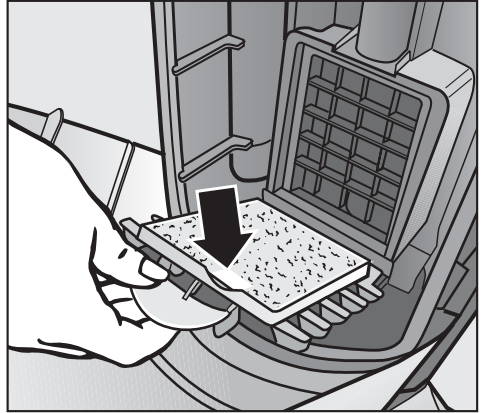

Maintenance and care

When to change the exhaust filter

Depending on the model, your vacuum cleaner will use one of the following exhaust filters:

a Air Clean

Whenever you start a new box of Miele dustbags, you should change this exhaust filter. A new Air Clean exhaust filter is included in every box of Miele dustbags.

b Active Air Clean (black)

c Active HEPA (blue)

These filters should be changed approximately once a year. You can make a note of the date directly on the exhaust filter.


Be sure to have a replacement filter on hand.

Exhaust filter change indicator

Certain models are equipped with an indicator (reset button), to show you when to change the Active Air Clean **b** or Active HEPA **c** filter.

The indicator will turn red after approximately 50 hours of operation, which is equivalent to about one year of average use. Once the indicator light comes on, you can still continue to use the vacuum cleaner. However, the filter performance and suction power will be reduced.


If an Air Clean filter is being used, the filter change indicator can be disregarded but should be reset when it does light. The indicator goes out when the reset button is pressed.

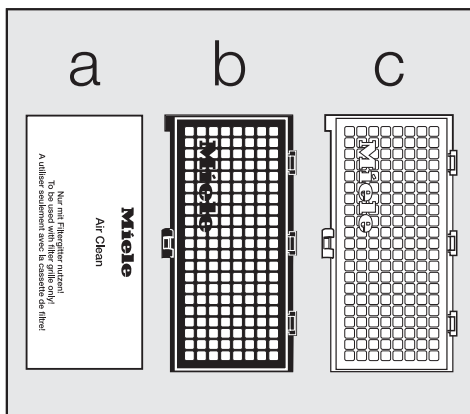

Replacing the "Air Clean" filter


Do not use more than one filter at a time.

- Open the exhaust filter compartment lid.
- Remove the filter frame.

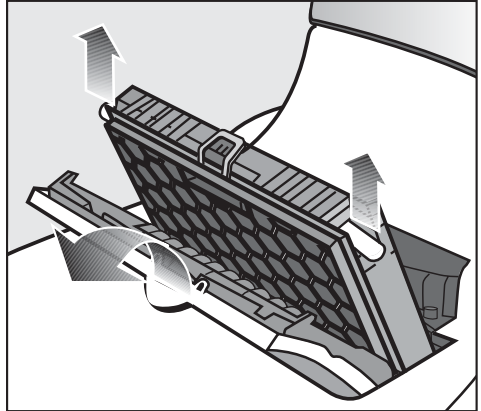


- Open the filter frame and use one of the two clean corners to remove the used Air Clean filter.
- Insert a new Air Clean filter.

If you wish to replace the Air Clean filter with an Active Air Clean filter or Active HEPA filter see "Maintenance and care - Exchanging exhaust filters".

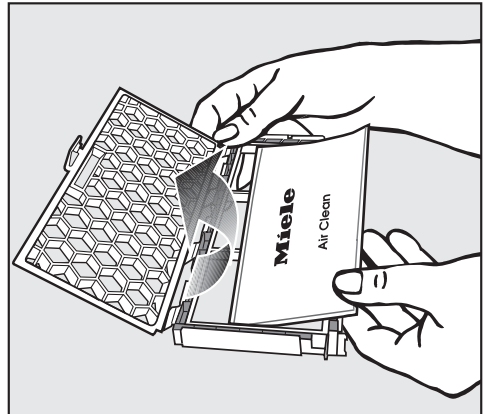

- Close the filter frame and insert it back into the compartment.
- Close the exhaust filter compartment lid.

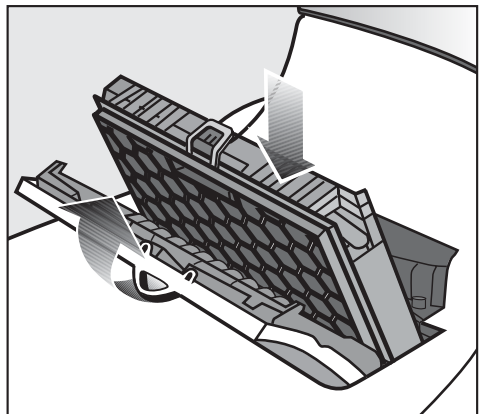


Maintenance and care

Replacing the "Active Air Clean" filter and the "Active HEPA" filter


Do not use more than one filter at a time.

- Open the exhaust filter compartment lid.
- Remove the exhaust filter.

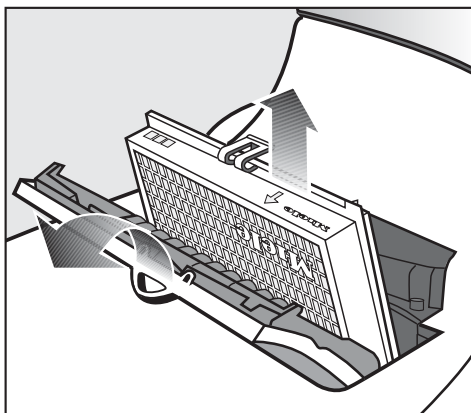

- Insert a new exhaust filter.
- Close the exhaust filter compartment lid.

If you wish to use an Air Clean filter see "Maintenance and care - Exchanging exhaust filters".

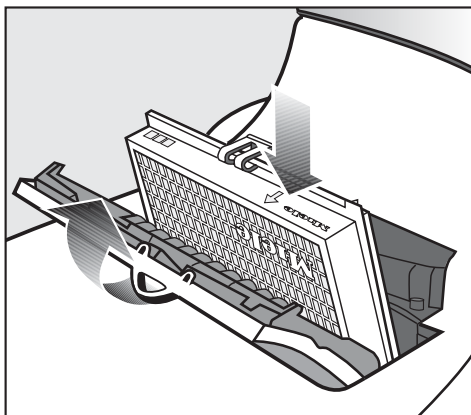

Resetting the exhaust filter change indicator

If your vacuum cleaner has a reset button, it must be pressed each time the exhaust filter is changed.

- Turn the vacuum on.
- Press and hold the reset button until the "Exhaust filter change indicator" indicator goes out.

The indicator is only reset if pressed while lit. If the indicator is pressed before it lights it will not be reset.




Exchanging exhaust filters

Depending on the model, your vacuum cleaner will use one of the following standard exhaust filters:


- a** Air Clean
- b** Active Air Clean (black)
- c** Active HEPA (blue)

If you wish, you can use one of the alternative filters instead of the standard filter supplied with your appliance. Each filter offers different characteristics (see section "Optional accessories").

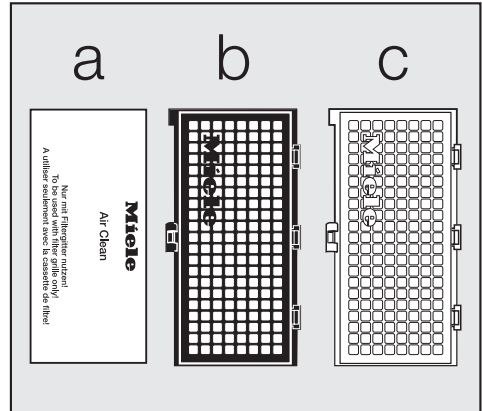

Important

1. If you replace exhaust filter **a** with exhaust filter **b** or **c**, you must be sure to remove the filter frame before inserting the new filter type.
2. If you replace exhaust filter **b** or **c** with exhaust filter **a**, be sure to place the new filter in a filter frame *.

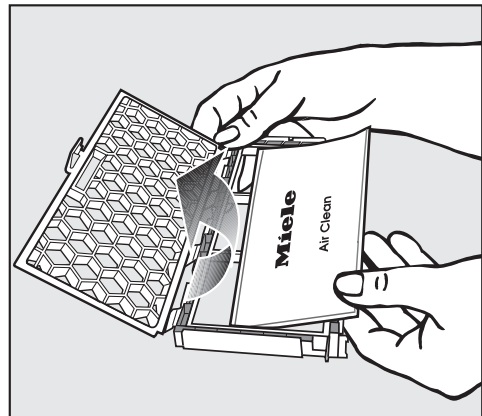

Do not use more than one filter at a time

* Filter frame - see "Optional accessories"


Some models are equipped with an exhaust filter reset button. This button indicates when to change the Active Air Clean filter and the Active HEPA filter. If an Air Clean filter is used, the reset button can be disregarded. The Air Clean filter should be changed whenever a new box of Miele dustbags is opened. The indicator goes out when the reset button is pressed.



Maintenance and care


Removing hair and threads from the Powerbrush

- Turn off the vacuum and unplug it from the outlet.
- Release the body of the vacuum cleaner and lower it to the floor.
- Turn the vacuum cleaner over.

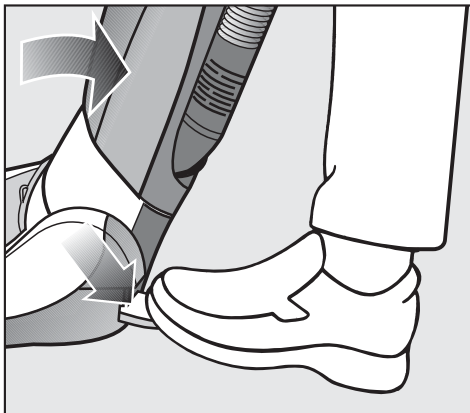

- Use scissors to cut any threads or hair that have wound around the roller brush. Guide the scissors along the guide track on the beater bar.


The trimmings will be drawn into the vacuum cleaner by the suction once the vacuum cleaner is turned on.

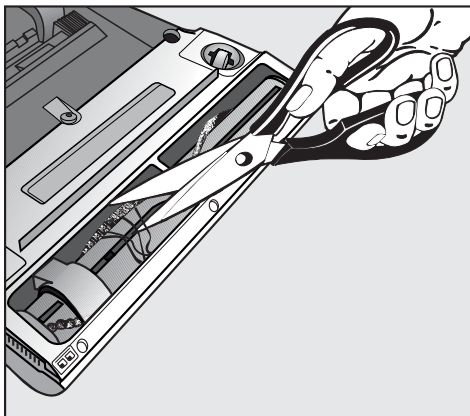

Maintenance and care

If there are large particles or other blockages at the base of the suction hose, you can open it up to clear the passage.


- Click the vacuum cleaner into the full upright position.
- Press the release button on the telescopic wand and remove the handle from the suction hose
- Guide the swivel elbow at the end of the suction hose over the catch hooks, to increase the stability the vacuum cleaner.

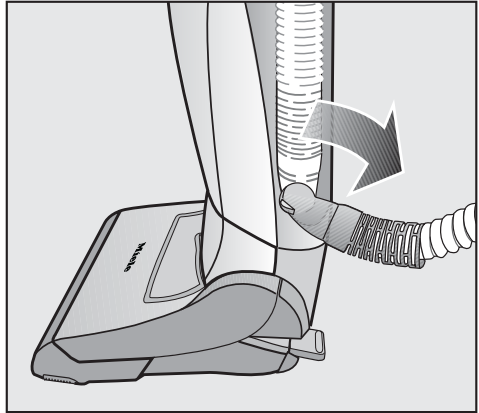

- ① Undo the suction hose in the direction of the arrow.
- ② Pull the suction hose connector off the swivel elbow.

- Remove all blockages
- Put the connector back on and click it shut.


If you still have not been able to remove the obstruction(s), there is another method you can try.

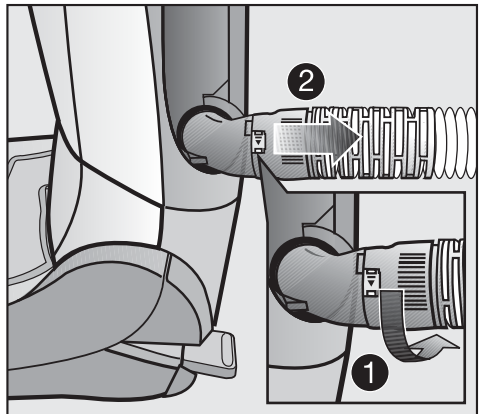

Open the service flap on the bottom rear of the vacuum cleaner.


- ① Use a coin to undo the two screws until they stop.
 - ② Pry the service flap free.
- Remove all blockages.

Put the service flap back on and screw into place.

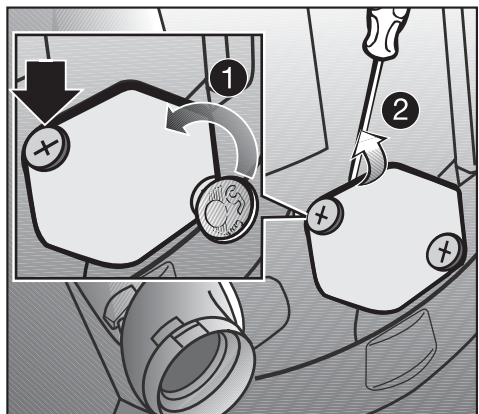


Cleaning and care

Cleaning

 Turn the vacuum cleaner off and unplug it from the outlet before performing any maintenance work.


Vacuum cleaner and accessories

The vacuum cleaner and all plastic accessories can be cleaned using a damp cloth and a cleaner suitable for plastics.

 Do not use abrasive, glass or "all-purpose" cleaners. They will damage the surface.

Dust compartment

If the dust compartment needs to be cleaned, use another vacuum cleaner, a dry cloth or dusting brush.

 Do not submerge the vacuum cleaner in water. If moisture gets into the appliance, there is the risk of electric shock.

Frequently asked questions

What if the vacuum cleaner automatically shuts off?

ComfortLine Models: The "On" indicator lights red.

PremiumLine Models: The "⚠" Thermo indicator lights red.

Possible fault	Solution
<p>The vacuum cleaner has overheated. The temperature limiter automatically turns the vacuum cleaner off.</p> <p>This can occur if large articles block the suction tube, when the dustbag is full or contains particles of fine dust. A heavily soiled exhaust or dust compartment filter can also be the cause of overheating.</p>	<ul style="list-style-type: none"> – Turn the vacuum cleaner and Powerbrush off and pull the plug from the outlet. – Check for any blockages and allow the vacuum cleaner to cool for 20 - 30 minutes.

What if the Powerbrush automatically shuts off and the indicator displays a red light?

Possible fault	Solution
<p>The blockage protection feature has been activated. This can occur if enough threads wrap around the beater bar or if a large or long object has been vacuumed up.</p>	<ul style="list-style-type: none"> – Turn off the Powerbrush, then switch off and unplug the vacuum cleaner. – Remove the blockage. <p>The vacuum cleaner is now ready for use.</p>

What if the Powerbrush automatically shuts off and the indicator displays a yellow light?

Possible fault	Solution
<p>The temperature limiter in the Powerbrush has been triggered because of overheating, for example due to a blockage in the vacuum hose/wand.</p>	<ul style="list-style-type: none"> – Turn off the Powerbrush, then turn off and unplug the vacuum cleaner. – Inspect the vacuum hose/wand and all filters. <p>It is important to allow the Powerbrush to cool. To speed up the process:</p> <ul style="list-style-type: none"> – Plug in the vacuum cleaner and turn it on. – Vacuum for approx. 10 minutes, but leave the Powerbrush off. <p>This helps cool off the Powerbrush so that it can be switched on again.</p>

Technical service

In the event of a fault you cannot easily fix yourself please contact the Miele Technical Service Department using the information on the back of this manual.

- Please quote the model number on the data plate located on the bottom of the Powerbrush.

Certain models come with one or more of the following accessories.

Attach the desired accessory onto the handle of the vacuum hose or onto the telescopic wand.

Floor brush Hardfloor

To vacuum sturdy hard floors, e.g. tile and stone.



Floor brush Parquet

Special brush with natural bristles for use on parquet, laminate and hardwood-type floors especially those susceptible to scratching.

Clean the natural bristles as needed, using the crevice tool.




Floor brush Parquet Twister with swiveling head

For cleaning hard floors. Especially suited to clean niches and tight spaces.

Floor brush Parquet Twister XL with swiveling head


Similar to the Parquet Twister except it is $3 \frac{9}{16}$ " (90 mm) wide, making it ideal for cleaning large spaces.

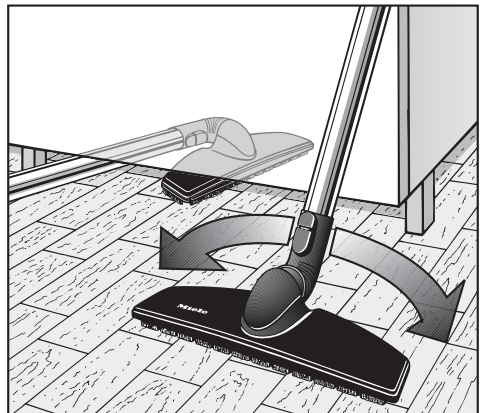

Optional Accessories

Hand turbobrush

The hand turbobrush Turbo Mini is designed for vacuuming upholstery, mattresses, car seats, carpeted stairs and other areas not easily accessible with the standard turbobrush.

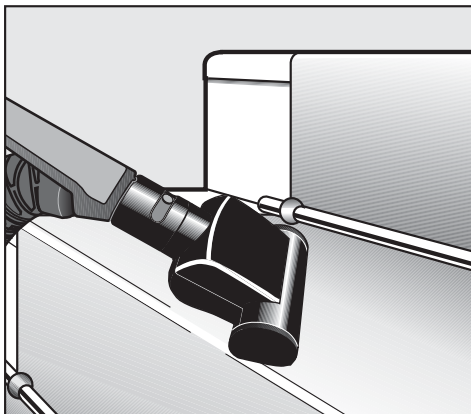

Universal brush


For dusting books, shelves, etc.



Radiator brush

(must be used in connection with the crevice nozzle)

For cleaning radiators, narrow shelves, and crevices.

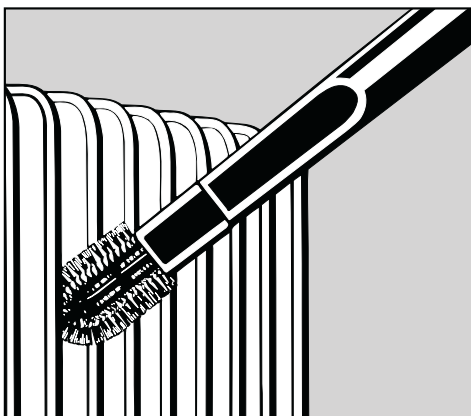

Mattress tool

For cleaning mattresses, upholstery, and deeper crevices.



Wide upholstery tool

For cleaning large surface areas of upholstery, mattresses, cushions, etc.




MicroSet

Specially designed for use on small or hard-to-reach items (stereos, keyboards, models, etc).

This set includes:

- Micro hose with combi nozzle (crevice nozzle and dust brush)
- Micro dust brush
- Micro crevice nozzle
- Hose extension

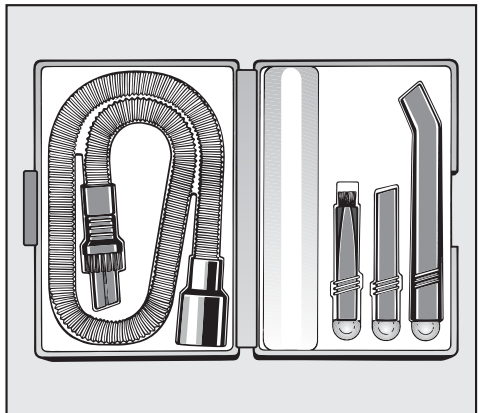

Optional Accessories

Filter frame

The filter frame is needed if you would like to exchange the Active Air Clean or Active HEPA filters with the Air Clean filter (see "Maintenance and Care - Exchanging exhaust filters").

Active Air Clean exhaust filter

This special active charcoal filter absorbs odors collected in the dustbag. The filter effectively controls most odors. The Active Air Clean filter can be exchanged with the existing exhaust filter.

Active HEPA filter

The "Active HEPA" filter combines activated charcoal and HEPA filtration in one. The active charcoal layer absorbs odors from the dust collected in the dustbag. Vacuum cleaners equipped with this exhaust filter are particularly suitable for allergy sufferers and those concerned with a high level of hygiene because of its ability to trap respirable particles and allergens.

Disposal of packing materials

The cardboard box and packing materials protect the appliance during shipping.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. These items pose a danger of suffocation.

Disposing of the dustbag and filters

These are made from environmentally friendly materials and can be placed in the regular household garbage. However, if the dustbag contains prohibited waste, contact your local waste collection center for disposal instructions.

**Please have the model and serial number
of your appliance available before
contacting Technical Service.**



U.S.A. Miele, Inc.

National Headquarters

9 Independence Way
Princeton, NJ 08540
Phone: 800-843-7231
609-419-9898
Fax: 609-419-4298
www.mieleusa.com

Technical Service & Support Nationwide

Phone: 800-999-1360
Fax: 888-586-8056

TechnicalService@mieleusa.com

Canada Miele Limited

Headquarters and Showroom

161 Four Valley Drive
Vaughan, ON L4K 4V8
Phone: 800-643-5381
905-660-9936
Fax: 905-532-2290
www.miele.ca
professional@miele.ca
(commercial enquiries)

MieleCare National Service

Phone: 800-565-6435
905-532-2272
Fax: 905-532-2292
customercare@miele.ca
(general and technical enquiries)

Germany

Miele & Cie. KG
Carl-Miele-Straße 29
33332 Gütersloh