

Personal Audio System

GB Operating Instructions



©2013 Sony Corporation Printed in China

CMT-BT60

http://www.sony.net/



WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc. Do not expose the appliance to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

These following indications are located on the bottom exterior.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.

The unit is not to be disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

The nameplate is located on the bottom exterior.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Owner's Record

The model and serial numbers are located on the bottom exterior of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____
Serial No. _____

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the

extremities: hands, wrists, feet and ankles).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of this device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65.

This equipment has very low levels of RF energy that it is deemed to comply without testing of specific absorption ratio (SAR).

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

Music discs encoded with copyright protection technologies

This product is designed to play discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

License and Trademark Notice

- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- The BLUETOOTH® word mark and logos are owned by the BLUETOOTH SIG, Inc. and any use of such marks by Sony Corporation is under license.
- The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
- Android is a trademark of Google Inc.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
- The system names and product names indicated in this manual are generally the trademarks or registered trademarks of the manufacturer.™ and ® marks are omitted in this manual.

The following FCC statement applies only to the version of this model manufactured for sale in the U.S.A. Other versions may not comply with FCC technical regulations.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment must not be co-located or operated in conjunction with any other antenna or transmitter.


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding

Location of Controls

Unit (Top)

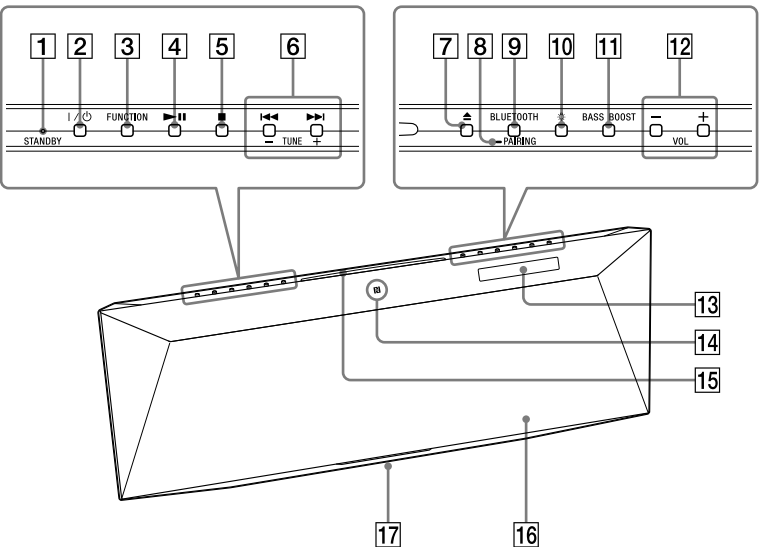


Remote

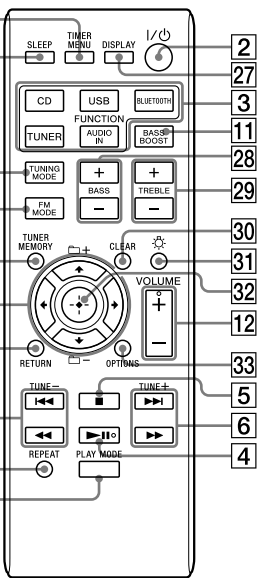

To use the remote

- Slide and remove the battery compartment lid, and insert the two supplied R6 (size AA) batteries, ● side first, matching the polarities shown below.

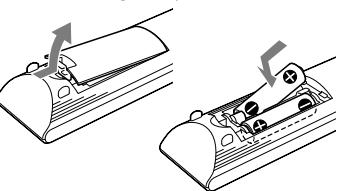


Notes on using the remote

- With normal use, the batteries should last for about 6 months.
- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.

This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

Getting Started

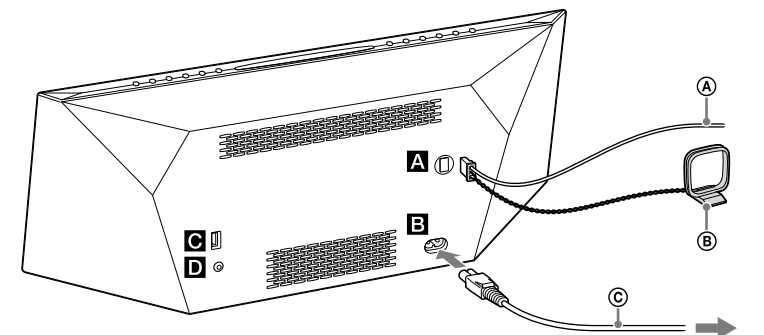

A Antennas

- FM lead antenna (supplied)
- AM loop antenna (supplied)

Find a location and an orientation that provide good reception, and then fix the antennas to a stable surface (window, wall, etc.). Keep the antennas away from the unit, power cord and other AV components to avoid picking noise.

Secure the end of the FM lead antenna with adhesive tape.

B Power input (AC IN)

After all equipments are connected, connect the power cord ⑥ to the wall outlet.


C USB port

Connect a USB device to the USB port using a USB cable (not supplied).

D AUDIO IN (external input) jack

Connect optional external equipment with an audio connecting cable (not supplied).

To prepare the AM loop antenna

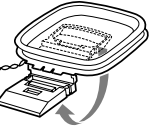

Rewind an antenna cord wound around the antenna and raise the antenna stand.




Stand the antenna and secure it to the slit until it clicks.

Operations

Playing a CD-DA/MP3 disc

- 1 Press CD FUNCTION [3] on the remote or press FUNCTION [3] on the unit repeatedly until "CD" appears in the display [13].
- 2 Insert a disc in the disc slot with the label side facing forward.

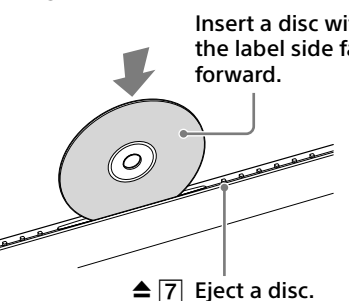

Play back starts automatically after "READING" disappears.

If you change from another function to the CD function while a disc is already inserted in the disc slot, press ► [4] to start playback.

Notes

- 8 cm discs cannot be used with this system.
- Do not insert an 8 cm disc with an adapter. Doing so may cause the system to malfunction.
- You cannot insert a disc into the disc slot when "NO DISC" does not appear in the display.
- If you cannot insert the disc into the disc slot even when "NO DISC" appears in the display, there may already be a disc in the slot. Press and hold down ▲ [7] to eject such a disc forcibly. If even the system does not then eject the disc, contact your nearest Sony dealer.
- If you cannot eject the disc and "LOCKED" appears in the display, contact your nearest Sony dealer.
- Do not insert a disc with non-standard shapes (e.g., heart, square, star). The disc may fall into the system and cause irreparable damage.
- Do not turn off the system with a disc halfway inserted in the disc slot. Doing so may cause the disc to fall.
- Do not use a disc with tape, seals or paste on it as this may cause malfunction.
- When you eject a disc, handle the disc by its edge. Do not touch the surface.

Other operations

To	Do the following:
Pause playback	Press ► [4]. To resume play, press the button again.
Stop playback	Press ■ [5].
Select a track or file	Press ◀ [6] / ▶ [6].
Find a point in a track or file	Hold down ◀◀ [6] / ▶▶ [6] (on the unit) during playback, and release the button at the desired point.
Select Repeat Play	Press REPEAT [25] repeatedly until "◀" (all tracks of files) or "◀1" (single track or file) appears.
Select a folder on an MP3 disc	Press +/- [23] repeatedly.
Eject a disc	Press ▲ [7] on the unit.

To change the play mode

Press PLAY MODE [26] repeatedly while the player is stopped. You can select Normal Play mode (no indication or "FLDR" appears), Shuffle Play mode ("SHUF" or "FLDR SHUF" appears), or Program Play mode ("PGM" appears).

Play mode	
STEP	[7] [9] [10] [11] [12] [13] [14] [15] [16] [17] [18] [19] [20] [21] [22] [23] [24] [25] [26] [27] [28] [29] [30] [31] [32] [33] [34] [35] [36] [37] [38] [39] [40] [41] [42] [43] [44] [45] [46] [47] [48] [49] [50] [51] [52] [53] [54] [55] [56] [57] [58] [59] [60] [61] [62] [63] [64] [65] [66] [67] [68] [69] [70] [71] [72] [73] [74] [75] [76] [77] [78] [79] [80] [81] [82] [83] [84] [85] [86] [87] [88] [89] [90] [91] [92] [93] [94] [95] [96] [97] [98] [99] [100] [101] [102] [103] [104] [105] [106] [107] [108] [109] [110] [111] [112] [113] [114] [115] [116] [117] [118] [119] [120] [121] [122] [123] [124] [125] [126] [127] [128] [129] [130] [131] [132] [133] [134] [135] [136] [137] [138] [139] [140] [141] [142] [143] [144] [145] [146] [147] [148] [149] [150] [151] [152] [153] [154] [155] [156] [157] [158] [159] [160] [161] [162] [163] [164] [165] [166] [167] [168] [169] [170] [171] [172] [173] [174] [175] [176] [177] [178] [179] [180] [181] [182] [183] [184] [185] [186] [187] [188] [189] [190] [191] [192] [193] [194] [195] [196] [197] [198] [199] [200] [201] [202] [203] [204] [205] [206] [207] [208] [209] [210] [211] [212] [213] [214] [215] [216] [217] [218] [219] [220] [221] [222] [223] [224] [225] [226] [227] [228] [229] [230] [231] [232] [233] [234] [235] [236] [237] [238] [239] [240] [241] [242] [243] [244] [245] [246] [247] [248] [249] [250] [251] [252] [253] [254] [255] [256] [257] [258] [259] [260] [261] [262] [263] [264] [265] [266] [267] [268] [269] [270] [271] [272] [273] [274] [275] [276] [277] [278] [279] [280] [281] [282] [283] [284] [285] [286] [287] [288] [289] [290] [291] [292] [293] [294] [295] [296] [297] [298] [299] [300] [301] [302] [303] [304] [305] [306] [307] [308] [309] [310] [311] [312] [313] [314] [315] [316] [317] [318] [319] [320] [321] [322] [323] [324] [325] [326] [327] [328] [329] [330] [331] [332] [333] [334] [335] [336] [337] [338] [339] [340] [341] [342] [343] [344] [345] [346] [347] [348] [349] [350] [351] [352] [353] [354] [355] [356] [357] [358] [359] [360] [361] [362] [363] [364] [365] [366] [367] [368] [369] [370] [371] [372] [373] [374] [375] [376] [377] [378] [379] [380] [381] [382] [383] [384] [385] [386] [387] [388] [389] [390] [391] [392] [393] [394] [395] [396] [397] [398] [399] [400] [401] [402] [403] [404] [405] [406] [407] [408] [409] [410] [411] [412] [413] [414] [415] [416] [417] [418] [419] [420] [421] [422] [423] [424] [425] [426] [427] [428] [429] [430] [431] [432] [433] [434] [435] [436] [437] [438] [439] [440] [441] [442] [443] [444] [445] [446] [447] [448] [449] [450] [451] [452] [453] [454] [455] [456] [457] [458] [459] [460] [461] [462] [463] [464] [465] [466] [467] [468] [469] [470] [471] [472] [473] [474] [475] [476] [477] [478] [479] [480] [481] [482] [483] [484] [485] [486] [487] [488] [489] [490] [491] [492] [493] [494] [495] [496] [497] [498] [499] [500] [501] [502] [503] [504] [505] [506] [507] [508] [509] [510] [511] [512] [513] [514] [515] [516] [517] [518] [519] [520] [521] [522] [523] [524] [525] [526] [527] [528] [529] [530] [531] [532] [533] [534] [535] [536] [537] [538] [539] [540] [541] [542] [543] [544] [545] [546] [547] [548] [549] [550] [551] [552] [553] [554] [555] [556] [557] [558] [559] [560] [561] [562] [563] [564] [565] [566] [567] [568] [569] [570] [571] [572] [573] [574] [575] [576] [577] [578] [579] [580] [581] [582] [583] [584] [585] [586] [587] [588] [589] [590] [591] [592] [593] [594] [595] [596] [597] [598] [599] [600] [601] [602] [603] [604] [605] [606] [607] [608] [609] [610] [611] [612] [613] [614] [615] [616] [617] [618] [619] [620] [621] [622] [623] [624] [625] [626] [627] [628] [629] [630] [631] [632] [633] [634] [635] [636] [637] [638] [639] [640] [641] [642] [643] [644] [645] [646] [647] [648] [649] [650] [651] [652] [653] [654] [655] [656] [657] [658] [659] [660] [661] [662] [663] [664] [665] [666] [667] [668] [669] [670] [671] [672] [673] [674] [675] [676] [677] [678] [679] [680] [681] [682] [683] [684] [685] [686] [687] [688] [689] [690] [691] [692] [693] [694] [695] [696] [697] [698] [699] [700] [701] [702] [703] [704] [705] [706] [707] [708] [709] [710] [711] [712] [713] [714] [715] [716] [717] [718] [719] [720] [721] [722] [723] [724] [725] [726] [727] [728] [729] [730] [731] [732] [733] [734] [735] [736] [737] [738] [739] [740] [741] [742] [743] [744] [745] [746] [747] [748] [749] [750] [751] [752] [753] [754] [755] [756] [757] [758] [759] [760] [761] [762] [763] [764] [765] [766] [767] [768] [769] [770] [771] [772] [773] [774] [775] [776] [777] [778] [779] [780] [781] [782] [783] [784] [785] [786] [787] [788] [789] [790] [791] [792] [793] [794] [795] [796] [797] [798] [799] [800] [801] [802] [803] [804] [805] [806] [807] [808] [809] [810] [811] [812] [813] [814] [815] [816] [817] [818] [819] [820] [821] [822] [823] [824] [825] [826] [827] [828] [829] [830] [831] [832] [833] [834] [835] [836] [837] [838] [839] [840] [841] [842] [843] [844] [845] [846] [847] [848] [849] [850] [851] [852] [853] [854] [855] [856] [857] [858] [859] [860] [861] [862] [863] [864] [865] [866] [867] [868] [869] [870] [871] [872] [873] [874] [875] [876] [877] [878] [879] [880] [881] [882] [883] [884] [885] [886] [887] [888] [889] [890] [891] [892] [893] [894] [895] [896] [897] [898] [899] [900] [901] [902] [903] [904] [905] [906] [907] [908] [909] [910] [911] [912] [913] [914] [915] [916] [917] [918] [919] [920] [921] [922] [923] [924] [925] [926] [927] [928] [929] [930] [931] [932] [933] [934] [935] [936] [937] [938] [939] [940] [941] [942] [943] [944] [945] [946] [947] [948] [949] [950] [951] [952] [953] [954] [955] [956] [957] [958] [959] [960] [961] [962] [963] [964] [965] [966] [967] [968] [969] [970] [971] [972] [973] [974] [975] [976] [977] [978] [979] [980] [981] [982] [983] [984] [985] [986] [987] [988] [989] [990] [991] [992] [993] [994] [995] [996] [997] [998] [999] [1000] [1001] [1002] [1003] [1004] [1005] [1006] [1007] [1008] [1009] [1010] [1011] [1012] [1013] [1014] [1015] [1016] [1017] [1018] [1019] [1020] [1021] [1022] [1023] [1024] [1025] [1026] [1027] [1028] [1029] [1030] [1031] [1032] [1033] [1034] [1035] [1036] [1037] [1038] [1039] [1040] [1041] [1042] [1043] [1044] [1045] [1046] [1047] [1048] [1049] [1050] [1051] [1052] [1053] [1054] [1055] [1056] [1057] [1058] [1059] [1060] [1061] [1062] [1063] [1064] [1065] [1066] [1067] [1068] [1069] [1070] [1071] [1072] [1073] [1074] [1075] [1076] [1077] [1078] [1079] [1080] [1081] [1082] [1083] [1084] [1085] [1086] [1087] [1088] [1089] [1090] [1091] [1092] [1093] [1094] [1095] [1096] [1097] [1098] [1099] [1100] [1101] [1102] [1103] [1104] [1105] [1106] [1107] [1108] [1109] [1110] [1111] [1112] [1113] [1114] [1115] [1116] [1117] [1118] [1119] [1120] [1121] [1122] [1123] [1124] [1125] [1126] [1127] [1128] [1129] [1130] [1131] [1132] [1133] [1134] [1135] [1136] [1137] [1138] [1139] [1140] [1141] [1142] [1143] [1144] [1145] [1146] [1147] [1148] [1149] [1150] [1151] [1152] [1153] [1154] [1155] [1156] [1157] [1158] [1159] [1160] [1161] [1162] [1163] [1164] [1165] [1166] [1167] [1168] [1169] [1170] [1171] [1172] [1173] [1174] [1175] [1176] [1177] [1178] [1179] [1180] [1181] [1182] [1183] [1184] [1185] [1186] [1187] [1188] [1189] [1190] [1191] [1192] [1193] [1194] [1195] [1196] [1197] [1198] [1199] [1200] [1201] [1202] [1203] [1204] [1205] [1206] [1207] [1208] [1209] [1210] [1211] [1212] [1213] [1214] [1215] [1216] [1217] [1218] [1219] [1220] [1221] [1222] [1223] [1224] [1225] [1226] [1227] [1228] [1229] [1230] [1231] [1232] [1233] [1234] [1235] [1236] [1237] [1238] [1239] [1240] [1241] [1242] [1243] [1244] [1245] [1246] [1247] [1248] [1249] [1250] [1251] [1252] [1253] [1254] [1255] [1256] [1257] [1258] [1259] [1260] [1261] [1262] [1263] [1264] [1265] [1266] [1267] [1268] [1269] [1270] [1271] [1272] [1273] [1274] [1275] [1276] [1277] [1278] [1279] [1280] [1281] [1282] [1283] [1284] [1285] [1286] [1287] [1288] [1289] [1290] [1291] [1292] [1293] [1294] [1295] [1296] [1297] [1298] [1299] [1300] [1301] [1302] [1303] [1304] [1305] [1306] [1307] [

2 Press **▶/⏮** [5] and **I/⏮** [2] on the unit until "RESET" appears in the display.

- All user-configured settings, such as preset radio stations, timer, and the clock, are deleted. If the problem persists after doing all of the above, consult your nearest Sony dealer.

Messages

CANNOT PLAY: The system cannot play audio files due to an unsupported file format or playback restriction.

CAN'T PLAY: You have inserted a disc that cannot be played back on this system, such as CD-ROM and DVD disc.

COMPLETE: The station preset operation ended normally.

DATA ERROR: You tried to play an unplayable file. **ERROR:** You operated the system during initialization. Wait for a while until the initialization is completed.

FULL: You tried to program more than 25 tracks or files (steps).

LOCKED: The disc slot is locked and you cannot remove the disc. Contact your nearest Sony dealer.

NO DEVICE: No USB device is connected or the connected USB device has been removed.

NO DISC: There is no disc in the player, or you have loaded a disc that cannot be played.

NO MEMORY: The memory media is not inserted in the USB device, or the system does not identify the memory media.

NO STEP: All of the programmed tracks have been erased.

NO SUPPORT: The system does not support the connected USB device.

NO TRACK: There are not playable files on the USB device or disc.

NO USED: You pressed an unplayable button.

OVER CURRENT: Remove the USB device from the port and turn off the system then turn on the system.

PUSH STOP: You pressed PLAY MODE [26] during playback in the CD or USB function.

READING: The system is reading the information on the disc or USB device. Some buttons do not work during reading.

TIME NG: The Play Timer start and end times are set to the same time.

Precautions

Discs that this system CAN play

- Audio CD-DA discs
- CD-R/CD-RW (audio data of CD-DA tracks and MP3 files)

Do not use a CD-R/CD-RW disc with no data stored. Doing so may damage the disc.

Discs that this system CANNOT play

- CD-ROM
- 8 cm discs
- CD-R/CD-RW other than those recorded in music CD format or MP3 format conforming to ISO9660 Level 1/Level 2, Joliet
- CD-R/CD-RW recorded in multi-session format and not closed the session
- CD-R/CD-RW of poor recording quality, CD-R/CD-RW that have scratches or are dirty, or CD-R/CD-RW recorded with an incompatible recording device
- CD-R/CD-RW which is finalized incorrectly
- Discs containing files other than MPEG 1 Audio Layer-3 (MP3) files
- Discs of non-standard shape (for example, heart, square, star)
- Discs that have adhesive tape, paper, or sticker attached to them
- Rental or used discs with attached seals where the glue extends beyond the seal
- Discs that have labels printed using ink that feels tacky when touched

Notes on CD-DA discs

- Before playing, wipe the disc with a cleaning cloth from the center out to the edge.
- Do not clean discs with solvents, such as benzine, thinner, or commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose discs to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.

On safety

- Completely disconnect the power cord (mains lead) from the wall outlet (mains) if it is not going to be used for an extended period of time. When unplugging the system, always grip the plug. Never pull the cord itself.
- Should any solid object or liquid get into the system, unplug the system, and have it checked by qualified personnel before operating it again.
- The AC power cord can be changed only by a qualified service facility.

On placement

- Do not place the system in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.

2 Set your smartphone to enable NFC function.

For details, refer to the user's guide supplied with your smartphone.



2 Set your smartphone to enable NFC function.

For details, refer to the user's guide supplied with your smartphone.

About the "NFC Easy Connect" application
This is a free application especially used for Android. Search the internet for detailed information on "NFC Easy Connect" and download the application.

- In some countries and regions, NFC-compliant application may not be downloaded.

Making a connection with your smartphone by one-touch action

Just touch your smartphone to the system. The system is turned on automatically, and pairing and BLUETOOTH connection are established.

- 1 Start the "NFC Easy Connect" application on your smartphone.
Check that the application display appears.

- 2 Touch your smartphone to the unit.

Touch the smartphone to the N-Mark [14] on the unit and maintain contact until the smartphone vibrates.

Complete the connection with your smartphone, following the instructions on the screen.

Refer to the user's guide of your smartphone for the part of your smartphone used touch contact.

- To disconnect the established connection, touch your smartphone to the N-Mark [14] on the unit.
- When you touch an NFC-compliant smartphone to the unit while another BLUETOOTH device is connected with this system, the BLUETOOTH device is disconnected and the system is connected with the smartphone.
- If you touch the smartphone connected with this system to another NFC-compliant BLUETOOTH headset or speaker, the smartphone is disconnected from the system and connected with the touched BLUETOOTH device.

Listening to music through a BLUETOOTH connection

You can operate a BLUETOOTH device by connecting the system and a BLUETOOTH device using AVRCP.

Check the following before playing music:

- The BLUETOOTH function of the BLUETOOTH device is enabled.
- Pairing has been completed.

- 1 Press BLUETOOTH FUNCTION [3] on the remote or press FUNCTION [3] on the unit repeatedly until "BT AUDIO" appears in the display [13].

- 2 Establish BLUETOOTH connection with the BLUETOOTH device.

Once the connection is established, "LINKED" appears in the display [13] then the BLUETOOTH device name set with the BLUETOOTH device appears.

If the BLUETOOTH device has been connected with this system in the past, it may be connected automatically with no user operation required.

- 3 Press **▶/⏮** [4] to start playback.

Depending on the BLUETOOTH device, you may have to press **▶/⏮** [4] twice.

Depending on the BLUETOOTH device, you may have to start up the AV software of the BLUETOOTH device beforehand.

- 4 Press VOLUME +/– [12] on the remote or press VOL +/– [12] on the unit to adjust the volume.

Other operations	
To	Do the following:
Pause playback	Press ▶/⏮ [4].
Stop playback	Press ■ [5].
Select a folder	Press ◀/▶ +/– [23].
Select a file	Press ◀◀/▶▶ [6].
Find a point in a file	Hold down ◀◀/▶▶ [6] (or ◀◀/▶▶ [6] on the unit) during playback and release the button at the desired point.
* Depending on the BLUETOOTH device, you may have to press ▶/⏮ [4] twice.	

Note
These operations may not be available for certain BLUETOOTH devices. In addition, the actual operations may differ depending on the connected BLUETOOTH device.

To check the address of a connected BLUETOOTH device

Press DISPLAY [27] while the BLUETOOTH device name set on the connected BLUETOOTH device is shown in the display [13]. The BLUETOOTH device address appears in two installments on the system display for 8 seconds.

² The information does not appear in BLUETOOTH mode.

CD-DA disc

- remaining playing time of a track during playback
- total remaining playing time

MP3 disc

- track or file name ("T")
- artist name ("A")
- album name ("A")

Using optional audio components

- 1 Press VOLUME – [12] on the remote or press VOL – [12] on the unit to turn down the volume.

- 2 Connect additional audio component to the AUDIO IN jack [1] using an audio connecting cable (not supplied).

- 3 Press AUDIO IN FUNCTION [3] on the remote or press FUNCTION [3] on the unit repeatedly until "AUDIO IN" appears in the display [13].

- 4 Start playback of the connected component. Adjust the volume on the connected component during playback.

- 5 Press VOLUME +/– [12] on the remote or press VOL +/– [12] on the unit to adjust the volume.

Note
The system may enter Standby mode automatically if the volume level of the connected component is too low. Adjust the component's volume accordingly.

Setting the Automatic Standby function

With the Automatic Standby function, the system enters Standby mode automatically in about 30 minutes when there is no operation or audio signal output. "AUTO: STBY" appears in the display [13] for 2 minutes before the system enters Standby mode. By default, the Automatic Standby function is turned on. You can turn off the function using the OPTION menu.

- 1 Press OPTIONS [23] to display the setting menu.

- 2 Press **♦/♦** [23] repeatedly to select "AUTO:STBY," then press **⊕** [22].

- 3 Press **♦/♦** [23] repeatedly to select "ON" or "OFF," then press **⊕** [22].

- Notes**
 - The Automatic Standby function is invalid for the tuner function (FM/AM), even when you have enabled it.
 - The system may not enter Standby mode automatically in the following cases:
 - while an audio signal is being detected
 - during playback of audio tracks or files
 - while the preset Sleep Timer or Play Timer is in process
 - The system counts down the time (30 minutes) again until it enters Standby mode, even when Automatic Standby function is when a USB device is connected or when a button on the remote or unit is pressed.

Setting the BLUETOOTH Standby mode

When BLUETOOTH Standby mode is enabled, the system enters Wait mode for BLUETOOTH connection even when the system is turned off. If the system receives a playback command from the connected BLUETOOTH device, it turns on and music is played back. The BLUETOOTH Standby mode is disabled by default.

- 1 Press OPTIONS [23] to display the setting menu.

- 2 Press **♦/♦** [23] repeatedly to select "BT STBY," then press **⊕** [22].

- 3 Press **♦/♦** [23] repeatedly to select "ON" or "OFF," then press **⊕** [22].

- 4 Press I/⏮ [2] to turn off the system.

When "BT STBY" is set to "ON," the system turns on and you can listen to music by activating BLUETOOTH on the connected component.

Adjusting the sound

Setting the bass boost
Press BASS BOOST [11] repeatedly to select "ON" or "OFF."

Adjusting the bass and treble
Press BASS +/– [28] on the remote to adjust bass or TREBLE +/– [29] to adjust treble.

Tip
This system is equipped with the DSEE function to reproduce clear treble despite degradation caused by compression. The DSEE function is usually activated automatically by recognizing the sound source, but it may not be activated depending on the function in use.

Changing the display

To	Do the following:
Change information on the display [13] ¹	Press DISPLAY [27] repeatedly when the system is on.
Display clock	Press DISPLAY [27] repeatedly when the system is off. ² The clock appears for about 8 seconds.

¹ You can view the information described below during playback of a CD-DA/MP3 disc.

- Notes**
 - When the sound source for a Play Timer is set to a radio station that you set using Automatic Scanning (AUTO) or Manual Tuning (MANUAL) and you change the radio frequency or band after setting the timer, the radio station setting for the timer also will be changed.
 - When the sound source for a Play Timer is set to a radio station tuned from a preset radio station (preset number 1 to 20) and if you change the frequency of the radio station or band after setting the timer, the radio station setting for the timer will not change. The radio station tuning for the timer is fixed at what you set for it.

Tip
The Play Timer setting remains as long as the setting is not cancelled manually.

Troubleshooting

- 1 Make sure the power cord is firmly connected.

- 2 Find your problem in the checklist below, and take the indicated corrective action.
If the issue persists, contact your nearest Sony dealer.

If the STANDBY indicator flashes

Immediately unplug the power cord, and check the following item.

- Is anything blocking the ventilation holes of the system?
After the STANDBY indicator [1] stops flashing, reconnect the power cord, and turn on the system. If the issue persists, contact your nearest Sony dealer.

General

The system does not turn on.

- Is the power cord plugged in correctly?

The system has entered Standby mode unexpectedly.

- This is not a malfunction. The system enters Standby mode automatically in about 30 minutes when there is no operation or audio signal output. See "Setting the Automatic Standby function."

The clock setting or the Play Timer operation has been cancelled unexpectedly.

- If about a minute elapses with no operation, the clock setting or Play Timer setting is cancelled automatically. Perform the operation again from the beginning.

There is no sound.

- Press VOLUME + [12] to turn up the volume.
- Make sure additional audio components are connected correctly and set the function to AUDIO IN.
- The specified station may have temporarily stopped broadcast.

Severe hum or noise.

- Move the system away from sources of noise.
- Connect the system to a different wall outlet.
- Use of an AC power tap with a noise filter (not supplied) is recommended.

The remote does not function.

- Remove any obstacles between the remote and the remote sensor [16] on the unit, and position the unit away from fluorescent lights.
- Point the remote at the system's remote sensor [16].
- Move the remote closer to the system.

CD-DA/MP3 disc

The system does not eject the disc and "LOCKED" appears in the display [13].

- Consult your nearest Sony dealer or local authorized Sony service facility.

The disc cannot be inserted.

- Check that the system is turned on.
- Do not insert a disc into the disc slot until "NO DISC" appears in the display [13].

The disc or file will not play.

- The disc that has not been finalized (a CD-R or CD-RW disc to which data can be added).

The sound skips, or the disc will not play.

- Wipe the disc clean, and replace it.
- Move the system to a location away from vibration (for example, on top of a stable stand).

Play does not start from the first track.

- Return to normal play by pressing PLAY MODE [26] repeatedly until both "PGM" and "SHUF" in the display [13] disappear.

Starting playback takes more time than usual.

- The following discs can increase the time it takes to start playback:
 - a disc recorded with a complicated tree structure.
 - a disc recorded in multi-session format.
 - a disc that has many folders.

Notes
•This system supports security functions that comply with the BLUETOOTH specification as a means of ensuring security during communication using BLUETOOTH technology. However, this security may be insufficient depending on the setting contents and other factors, so always be careful when performing communication using BLUETOOTH technology.

- Sony cannot be held liable in any way for damages or other loss resulting from information leaks during communication using BLUETOOTH technology.
- BLUETOOTH communication is not necessarily guaranteed with all BLUETOOTH devices that have the same profile as this system.
- BLUETOOTH devices connected with this system must comply with the BLUETOOTH specification prescribed by the BLUETOOTH SIG, Inc., and must be certified to comply. However, even when a device complies with the BLUETOOTH specification, there may be cases where the characteristics or specifications of the BLUETOOTH device make it impossible to connect, or may result in different control methods, display or operation.
- Noise may occur or the audio may cut off depending on the BLUETOOTH device connected with this system, the communications environment, or surrounding conditions.

Specifications

Amplifier section

AUDIO POWER SPECIFICATIONS
POWER OUTPUT AND TOTAL HARMONIC DISTORTION:
(The United States model only)
With 8 ohm loads, both channels driven, from 120 - 10,000 Hz; rated 12 watts per channel minimum RMS power, with no more than 0.7% total harmonic distortion from 250 milliwatts to rated output.

Power output (rated): 16 watts + 16 watts
(8 ohms at 1 kHz, 1% THD)
Continuous RMS power output (reference): 20 watts + 20 watts (8 ohms at 1 kHz, 10% THD)

Input/Outputs
AUDIO IN (stereo mini jack): Sensitivity 700 mV, impedance 47 kilohms

USB:
Supported bit rate: MP3 (MPEG 1 Audio Layer-3): 32 kbps - 320 kbps, VBR
WMA: 48 kbps - 192 kbps, VBR
AAC: 48 kbps - 320 kbps
Sampling frequencies: MP3 (MPEG 1 Audio Layer-3): 32/44.1/48 kHz
WMA: 44.1 kHz
AAC: 44.1 kHz
USB port: Type A, 5 V DC 2.1 A

CD-DA/MP3 player section

System: Compact disc and digital audio system
Laser Diode Properties
Emission Duration: Continuous
Laser Output*: Less than 44.6 μW
*This output is the value measurement at a distance of 200mm from the objective lens surface on the Optical Pick-up Block with 7mm aperture.
Frequency response: 20 Hz – 20 kHz
Signal-to-noise ratio: More than 90 dB
Dynamic range: More than 90 dB

Tuner section

AM tuner section:
Tuning range*: 530 kHz - 1,710 kHz (with 10 kHz tuning interval)
531 kHz - 1,710 kHz (with 9 kHz tuning interval)
Antenna: AM loop antenna
Intermediate frequency: 400 kHz
FM tuner section:
FM stereo, FM superheterodyne tuner
Antenna: FM lead antenna
Tuning range: 87.5 MHz – 108.0 MHz (100 kHz step)

BLUETOOTH section

Communication system:
BLUETOOTH Standard version 3.0
Output:
BLUETOOTH Standard Power Class 2
Maximum communication range:
Line of sight approx. 10 m¹
Frequency band:
2.4 GHz band (2,400 GHz - 2,4835 GHz)
Modulation method:
FHSS
Compatible BLUETOOTH profiles²:
A2DP (Advanced Audio Distribution Profile)
AVRCP (Audio Video Remote Control Profile)
Supported codec:
SCMS-T
Transmission bandwidth:
20 Hz - 20,000 Hz (with 44.1 kHz sampling)
¹The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna's performance, operating system, software application, etc.
²BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices.

Effects of other devices

BLUETOOTH devices and wireless LAN (IEEE 802.11b/g) use the same frequency band (2.4 GHz). When using your BLUETOOTH device near a device with wireless LAN capability, electromagnetic interference may occur. This could result in lower data transfer rates, noise, or inability to connect. If this happens, try the following remedies:

- Try connecting this system and BLUETOOTH mobile phone or BLUETOOTH device when you are at least 10 meters away from the wireless LAN equipment.
- Turn off the power to the wireless LAN equipment when using your BLUETOOTH device within 10 meters

Effects on other devices

The radio waves broadcast by this system may interfere with the operation of some medical devices. Since this interference may result in malfunction, always turn off the power on this system, BLUETOOTH mobile phone and BLUETOOTH device in the following locations:

- In hospitals, on trains, in airplanes, at gas stations, and any place where flammable gasses may be present
- Near automatic doors or fire alarms