



## Instructions for updating the LEICA M (Typ 240) Firmware

1. Format an SD memory card in your LEICA M.
2. Turn off the camera and insert the card into an SD card reader – either integrated or connected to your computer. (A reader is required for Firmware updates).
3. Download the Firmware file from the Leica M site using the “UPDATES” link.
4. Save the file FW\_M240\_2\_0\_0\_12.FW at the top level of the card’s folder structure.
5. Remove the card properly from your card reader, insert the card into the camera and close the bottom cover.
6. Press the “INFO” button and hold it, simultaneously turn on the camera using the main switch.
7. The update process takes several 2-4 minutes. “Loading file...” appears on the screen.
8. When the update is done, a corresponding message appears on the screen. The Message disappears after some seconds.

### **Note:**

- If the battery does not have sufficient charge, you will see a corresponding warning message.