

# Personal Audio System

## Operating Instructions



©2014 Sony Corporation Printed in China

ZS-RS60BT

http://www.sony.net/



### WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc. Do not expose the appliance to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Excessive sound pressure from earphones and headphones can cause hearing loss.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

The nameplate is located on the bottom exterior.

### Owner's Record

The model and serial numbers are located on the bottom of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. ZS-RS60BT  
Serial No. \_\_\_\_\_

### Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons, wrists, feet and ankles.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This graphical symbol is located on the bottom of the unit.

### Notice for the customers in Canada


This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for that transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Personal Audio System is designed to be used for playing back music sources on CDs or USB devices, transferring music to USB devices, listening to radio stations, and listening to music on BLUETOOTH devices.


### Power Sources

Connect the AC power cord **A**, or insert six LR14 (size C) batteries (not supplied) into the battery compartment **B**.

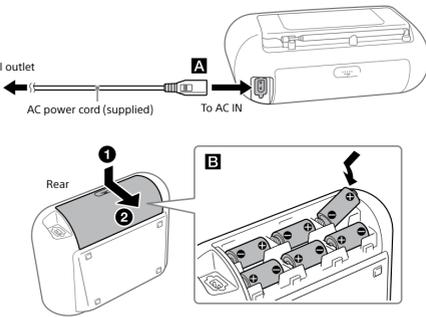

- Notes**
- Replace the batteries when the OPR/BATT indicator **18** dims, or when the unit becomes inoperable. Replace all of the batteries with new ones. Before you replace the batteries, be sure to remove any CD and disconnect any USB devices or optional components from the unit.
  - To use the unit on batteries, disconnect the AC power cord from the unit and the wall outlet.
  - In standby mode with the AC power cord connected, "STANDBY" appears on the display.

### Basic Operations

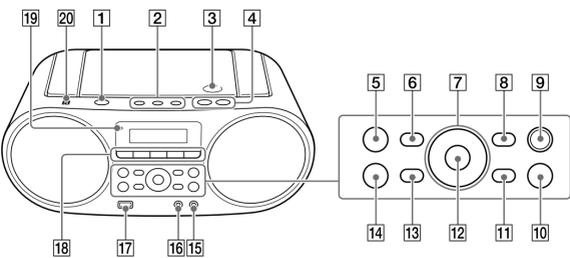

\* **▶▶** **5** and **VOL** **+/-** **4** have a tactile dot.

### Before using the unit

**To turn the power on or off**  
Press **POWER** **1**. You can also turn on the power if this unit using the direct power-on function (below). In this manual, operations are mainly explained using the direct power-on function.

**To use the direct power-on function**  
Press **CD** **18**, **USB** **19**, **BLUETOOTH** **18**, **FM/AM** **18**, **AUDIO IN** **18** or **FAVORITE RADIO STATIONS** (1-3) **2** while the unit is turned off. The power turns on with the relevant function selected.

### To adjust the volume

Press **VOL** **+/-** **4**.

### To listen through headphones


Connect headphones to the **17** (headphones) jack **16**.

### To reinforce the bass

Press **MEGA BASS** **10**.  
"MEGA BASS" lights up on the display.  
To return to normal sound, press the button again.


### Playing a music disc

- Press **CD** **18** to turn on the CD function.
- Press **PUSH OPEN/CLOSE** **▲** **3**, place a disc in the CD compartment and then close the compartment cover.

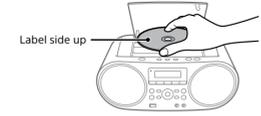


The disc is loaded and the disc information appears on the display.

### Audio CD

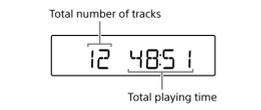

\* If MP3/WMA files are present only in the root directory ("ROOT" folder), "FLDR" appears on the display.

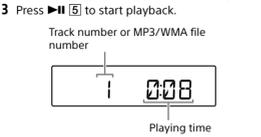

When you play an MP3/WMA disc, the folder name\*1 and song title are displayed before the playing time\*2 appears.

\*1 If MP3/WMA files are present only in the root directory, "ROOT" appears on the display.

\*2 If the playing time is longer than 100 minutes, ":-:--" appears on the display.

### Other operations

**To** **Do this**  
Pause playback Press **▶▶** **5**. To return to playback, press the button again.

Stop playback Press **■** **14**. When you press **▶▶** **5** after playback is stopped, playback starts from the point where you stopped playback (Resume Play).

Select a folder Press **◀** **+/-** **7**.


Select a track/file Press **◀** **4** or **▶▶** **7**. You can skip tracks/files one by one.

Find a point in a track/file Hold down **◀** **4** or **▶▶** **7** during playback, and release the button at the desired point. When locating a point while paused, press **▶▶** **5** to start playback after the desired point is found.

**Tip**  
To cancel the Resume Play, press **■** **14** while the CD is stopped.

**Notes**  
Resume Play is cancelled in the following cases:  
— When you open the CD compartment.  
— When you turn off the power.

**Example of folder structure and playing order**  
The playing order of the folders and files is as follows. However, the playing order may differ from the original order on the USB device, depending on the recording method used.

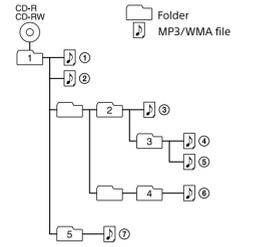

### Notes on MP3/WMA discs

- When a disc is loaded, the unit reads all the files on that disc. During this time, "READING" is flashing. If there are many folders or non-MP3/WMA files on the disc, it may take a long time for play to begin or for the next MP3/WMA file to start to play.
- We recommend that non-MP3/WMA files or unnecessary folders are excluded when creating MP3/WMA discs.
- During playback, audio files other than MP3 and WMA files are skipped even if those files are included in a folder.
- The audio formats supported by this unit are as follows:
  - MP3: File extension ".mp3"
  - WMA: File extension ".wma"
 Note that even if the file name has the correct file extension but the actual file was created in a different audio format, this unit may produce noise or may malfunction.
- MP3 PRO format is not supported.

• WMA files encoded in WMA DRM, WMA Lossless and WMA PRO formats cannot be played back.

• This unit cannot play audio files on a disc in the following cases:  
— When the total number of audio files exceeds 999.  
— When the total number of folders on a single disc exceeds 256 (including the "ROOT" folder).

— When the directory level (folder depths) exceeds 8 (including the "ROOT" folder).

• Folder names can be displayed with up to 32 characters, including quotation marks.

• File names can be displayed with up to 32 characters, including quotation marks and file extensions.

• Characters and symbols that cannot be displayed by the unit will appear as ".".

• This unit conforms to version 1.0, 1.1, 2.2, 2.3 and 2.4 of the ID3 tag format for MP3 files and the WMA tag format defined by the ASF specification (Advanced Systems Format) for WMA files. When a file has the ID3 or WMA tag information, the song title, artist name, and album name will be displayed. If a file does not have the tag information, the unit displays as follows:  
— File name instead of the song title.  
— "NO ARTIST" message instead of the artist name.  
— "NO ALBUM" message instead of the album name.

ID3 tag information can be displayed up to 64 characters, and WMA tag information can be displayed up to 32 characters.

### Listening to music on a USB device

You can listen to audio files stored on a USB device (a digital music player or USB storage media). Audio files in MP3, WMA and AAC formats\* can be played on this unit.

\* Files with copyright protection (Digital Rights Management) cannot be played on this unit.

- Connect the USB device to the **17** (USB) port **17**.
- Press **USB** **19** to turn on the USB function. The volume label scrolls once, then the total number of folders appears on the display.



- Press **▶▶** **5** to start playback. The folder name and song title are displayed, and then the file number and playing time appear.



\* If the playing time is longer than 100 minutes, ":-:--" appears on the display.

### Other operations

**To** **Do this**  
Pause playback Press **▶▶** **5**. To return to playback, press the button again.

Stop playback Press **■** **14**. When you press **▶▶** **5** after playback is stopped, playback starts from the point where you stopped playback (Resume Play).


Select a folder Press **◀** **+/-** **7**.

Select a file Press **◀** **4** or **▶▶** **7**. You can skip files one by one. To skip files continuously, hold down **◀** **4** or **▶▶** **7** and release the button at the desired file.

Find a point in a file Hold down **◀** **4** or **▶▶** **7** during playback, and release the button at the desired point. When locating a point while paused, press **▶▶** **5** to start playback after the desired point is found.

**Notes**  
When applying a USB device, hold down **■** **14** until "NO DEV" appears, and then turn off the unit or switch to other functions beforehand. Removing the USB device without performing these steps may corrupt the data on the USB device or damage the device itself.

**Example of folder structure and playing order**  
The playing order of the folders and files is as follows. However, the playing order may differ from the original order on the USB device, depending on the recording method used.

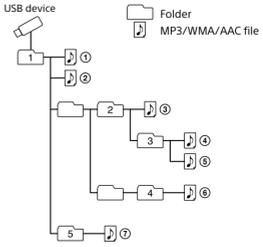

### Notes on the USB device

- It may take a long time before playback starts when:  
— the folder structure is complex.  
— the USB device is close to capacity.
- Do not save non-MP3/WMA/AAC files or unnecessary folders to a USB device that contains MP3/WMA/AAC files.
- During playback, audio files other than MP3, WMA and AAC files are skipped even if those files are included in a folder.
- The audio formats supported by this unit are as follows:  
— MP3: file extension ".mp3"  
— WMA: file extension ".wma"  
— AAC: file extension ".m4a", ".3gp" and ".mp4"  
Note that even if the file name has the correct file extension but the actual file was created in a different audio format, this unit may produce noise or may malfunction.
- MP3 PRO format is not supported.
- WMA files encoded in WMA DRM, WMA Lossless and WMA PRO formats cannot be played back.
- AAC files encoded in copyright-protected AAC format cannot be played back.
- This unit supports the AAC-LC (AAC Low Complexity) profile.
- This unit cannot play audio files on a USB device in the following cases:  
— When the total number of audio files in a single folder exceeds 999.  
— When the total number of folders on a single USB device exceeds 5,000.  
— When the total number of folders on a single USB device exceeds 256 (including the "ROOT" folder).  
— When the directory level (folder depths) exceeds 8 (including the "ROOT" folder).  
These numbers may vary depending on the file and folder structure.
- Compatibility with all encoding/writing software is not guaranteed. If audio files on the USB device were originally encoded with incompatible software, those files may produce noise or interrupted sound, or may not be played back at all.

- Folder names can be displayed with up to 32 characters, including quotation marks.
- File names can be displayed with up to 32 characters, including quotation marks and file extensions.
- Characters and symbols that cannot be displayed by the unit will appear as ".".
- This unit conforms to version 1.0, 1.1, 2.2, 2.3 and 2.4 of the ID3 tag format for MP3 files, the WMA tag format defined by the ASF specification (Advanced Systems Format) for WMA files, and the AAC tag format for AAC files. When a file has the ID3, WMA or AAC tag information, the song title, artist name, and album name will be displayed. If a file does not have the tag information, the unit displays as follows:  
— File name instead of the song title.  
— "NO ARTIST" message instead of the artist name.  
— "NO ALBUM" message instead of the album name.  
ID3/AAC tag information can be displayed up to 64 characters, and WMA tag information can be displayed up to 32 characters.

### Transferring music from a disc to a USB device

You can transfer a whole disc (CD SYNC transfer) or the currently playing track or file (REC1 transfer) to a USB device (digital music player or USB storage media, etc.).

When transferring from a CD, the tracks are transferred as MP3 files with a sampling frequency of 44.1 kHz at 128 kbps (CBR). When transferring from an MP3/WMA disc, MP3/WMA files are transferred with the same bit rate as the original MP3/WMA files.

- Connect the USB device to the **17** (USB) port **17**.
- Press **CD** **18** to turn on the CD function.
- Place the disc you want to transfer in the CD compartment.

### ■ CD SYNC transfer

**To transfer a whole disc**  
Proceed to step 4.

**To transfer MP3/WMA files in a specific folder**  
Press **◀** **+/-** **7** repeatedly to select the folder you want.

**To transfer only your favorite tracks/files**  
Perform step 1 to 5 of "Creating your own program (Program Play)" on the back page.

### ■ REC1 transfer

**To transfer a single track/file**  
Select and start playback of the track/file you want to transfer.

- Press **REC** **9**. "REC" flashes on the display and the unit starts calculating the amount of free space on the USB device.



- Turn on the BLUETOOTH function of the BLUETOOTH device. If no devices have been paired, such as when you press BLUETOOTH **18** for the first time after you purchase the unit, the unit automatically enters pairing mode, and the BLUETOOTH indicator **8** and "PAIRING" flash on the display.

**When pairing with two or more BLUETOOTH devices**  
Hold down BLUETOOTH (PAIRING) **18** until two beeps are heard.

- Turn on the BLUETOOTH function of the BLUETOOTH device.
- Perform the pairing procedure on the BLUETOOTH device to detect the unit.
- Select "ZS-RS60BT" shown on the display of the BLUETOOTH device.

If "ZS-RS60BT" does not appear on the device's display, repeat from step 2.

- If Passcode\* input is required on the display of the BLUETOOTH device, input "0000". The BLUETOOTH connection is established. "BT AUDIO" appears on the display.

\* Passcode\* may be referred to as "Passkey," "PIN code," "PIN number," or "Password."

### BT AUDIO

**To stop transferring**  
Press **■** **14**. An MP3/WMA file is created up to the point the transferring was stopped.

### Folder and file generation rules

When first transferring to a USB device, a "MUSIC" folder and its sub folder "SONY" are created directly below the "ROOT" folder.

Folders and files are generated within the "CD" folder under the "SONY" folder based on the following rules.

### CD SYNC transfer

Transferring source	Folder name	File name
MP3/WMA	Same as the transferring source*1,*2	
CD-DA	"ALBUM001"~*3	"TRACK001"~*4

### REC1 transfer

Transferring source	Folder name	File name
MP3/WMA	"REC1"~*5	Same as the transferring source*2
CD-DA	"TRACK001"~*4	"TRACK001"~*4

\*1 In Program Play mode, the folder name is "FLDRxxx," and the file name depends on the transferring source.

\*2 Up to 32 characters (including a file extension for a file name) can be assigned.

\*3 Folder names are assigned in sequential order up to a maximum of 256 (including the "ROOT" and "MUSIC" folders).

\*4 File names are assigned in sequential order.

\*5 A new file is transferred to the "REC1" folder each time single track transfer is performed.

### To erase audio files or folders from the USB device

- Press **◀** **4** or **▶▶** **7** repeatedly to select an audio file, or press **◀** **+/-** **7** repeatedly to select a folder.
- Press **ERASE** **11**. "ERASE?" appears on the display.
- Press **ENTER** **12**. "TRACK ERASE?" or "FOLDER ERASE?" appears on the display.
- Press **ENTER** **12**. The selected audio file or folder is erased, and "COMPLETE" appears on the display.

- Notes**
- If you start transferring in shuffle play or repeat play mode, the selected play mode is automatically changed to normal play.
  - Do not remove the USB device during transferring or erase operations. Doing so may corrupt the data on the device or damage the device itself.
  - While transferring, no sound is output and "HI-SPEED" appears on the display.
  - CD-TEXT information is not transferred in the created MP3 files.
  - Transferring stops automatically if:  
— the USB device runs out of space during transferring,  
— the number of audio files and folders on the USB device reaches the limit that the unit can recognize.
  - Non-MP3/WMA/AAC format files or sub folders in the folder are not erased.
  - Radio sound and sound from an optional component cannot be transferred to a USB device.

### Note on copyright-protected content

The transferred music is limited to private use only. Use of the music beyond this limit requires permission from the copyright holders.

### Listening to music wirelessly on a BLUETOOTH device

Using the BLUETOOTH connection, you can listen to music from wirelessly connected BLUETOOTH devices such as mobile phones, smartphones, music players, etc.



### Pairing this unit with a BLUETOOTH device

BLUETOOTH devices must be "paired" with each other beforehand. Once BLUETOOTH devices are paired, there is no need for pairing again, unless the pairing information is cleared. Choose the pairing method below depending on your device.

**Pairing with an NFC-incompatible BLUETOOTH device:**  
**see (Pattern A)**

**Pairing with an NFC-compatible smartphone:**  
**see (Pattern B)**

### Pattern A

#### Pairing with an NFC-incompatible BLUETOOTH device

Keep the BLUETOOTH device and the unit within 1 meter (39 3/8 in) of each other for this operation.

- Press BLUETOOTH **18** to turn on the BLUETOOTH function. If no devices have been paired, such as when you press BLUETOOTH **18** for the first time after you purchase the unit, the unit automatically enters pairing mode, and the BLUETOOTH indicator **8** and "PAIRING" flash on the display.

**When pairing with two or more BLUETOOTH devices**  
Hold down BLUETOOTH (PAIRING) **18** until two beeps are heard.

- Turn on the BLUETOOTH function of the BLUETOOTH device.
- Perform the pairing procedure on the BLUETOOTH device to detect the unit.
- Select "ZS-RS60BT" shown on the display of the BLUETOOTH device.

If "ZS-RS60BT" does not appear on the device's display, start over from step 1.

- If Passcode\* input is required on the display of the BLUETOOTH device, input "0000". The BLUETOOTH connection is established. "BT AUDIO" appears on the display.

\* Passcode\* may be referred to as "Passkey," "PIN code," "PIN number," or "Password."

### BT AUDIO

**Tip**  
You can pair up to 8 BLUETOOTH devices. If the 9th BLUETOOTH device is paired, the oldest paired device will be deleted.

**Notes**

- Pairing mode of the unit is cancelled after about 5 minutes, and the BLUETOOTH indicator **8** flashes, if pairing mode is cancelled while performing this procedure, start over from step 1.
- The passcode of the unit is fixed as "0000". The unit cannot be paired with a BLUETOOTH device whose Passcode is not "0000."

### Pattern B

