

# SONY®

## Television

### Operating Instructions

---

Parts and Controls

---

Watching TV

---

Navigating through Home Menu

---

Viewing Pictures from Connected  
Equipment

---

Additional Information

## BRAVIA

KDL-40R350C / 32R304C / 32R300C

---

# Table of Contents

Safety Information .....	3
Precautions .....	5

---

## Parts and Controls

TV .....	6
Remote Control .....	7

---

## Watching TV

Changing the Viewing Style .....	9
Changing the Wide Mode .....	9
Setting Scene Select .....	9

---

## Navigating through Home Menu

Digital Programme List .....	10
Digital EPG .....	10
Applications .....	11
Using the TV as a Photo Frame .....	11
Listening to FM Radio .....	11
Media .....	12
Playback Photo/Music/Video via USB .....	12
Settings .....	13
System Settings .....	13
Customer Support .....	21

---

## Viewing Pictures from Connected Equipment

Connection Diagram .....	22
Using Audio and Video Equipment .....	23

---

## Additional Information

Installing the TV to the Wall .....	24
Troubleshooting .....	27
Picture .....	27
Sound .....	27
Channels .....	28
General .....	28
Specifications .....	29

## Introduction

Thank you for choosing this Sony product. Before operating the TV, please read this manual thoroughly and retain it for future reference.

### Note

- Before operating the TV, please read "Safety Information" (page 3).
- Instructions about "Installing the TV to the Wall" are included within this TV's instructions manual.
- Images and illustrations used in Startup Guide and this manual are for reference only and may differ from actual product appearance.

## Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV. Labels for the AC adapter Model No. and Serial No. are located on the bottom of the AC adapter.

## Safety Information

### WARNING


Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

### Installation/Set-up

Install and use the TV set in accordance with the instructions below in order to avoid any risk of fire, electrical shock or damage and/or injuries.


#### Installation

- The TV set should be installed near an easily accessible AC power outlet (mains socket).
- Place the TV set on a stable, level surface to avoid it from falling down and cause personal injury or damage to the TV.
- Install the TV so that the TV's Table-Top Stand does not protrudes out from the TV stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.

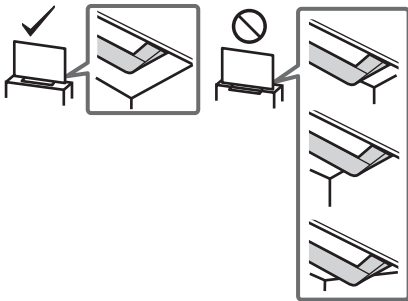


- Only qualified service personnel should carry out wall installations.
- For safety reasons, it is strongly recommended that you use Sony accessories, including: Wall-Mount Bracket: SU-WL450
- Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Mounting Hooks to the TV set. The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Mounting Hook. The diameter and length of the screws differ depending on the Wall-Mount Bracket model.

Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

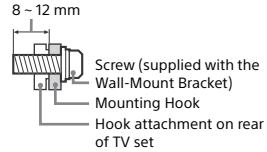

### Transporting

- Before transporting the TV set, disconnect all cables.
- Two or three people are needed to transport a large TV set.
- When transporting the TV set by hand, hold it as shown below. Do not put stress on the LCD panel and the frame around the screen.

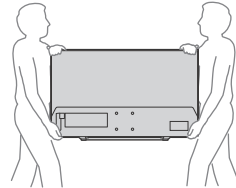


- When transporting the TV set, do not subject it to jolts or excessive vibration.
- When transporting the TV set for repairs or when moving, pack it using the original carton and packing material.

### Ventilation


- Never insert anything in the cabinet.
- Leave space around the TV set as shown below.
- It is strongly recommended that you use a Sony Wall-Mount Bracket in order to provide adequate air circulation.

#### Installed on the wall

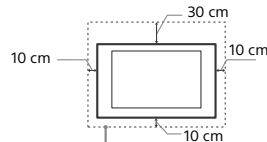


Leave at least this space around the set.

#### Installed with stand

 

Leave at least this space around the set.

- To ensure proper ventilation and prevent the collection of dirt or dust:
  - Do not lay the TV set flat, install upside down, backwards, or sideways.
  - Do not place the TV set on a shelf, rug, bed or in a closet.
  - Do not cover the TV set with a cloth, such as curtains, or items such as newspapers, etc.
  - Do not install the TV set as shown below.

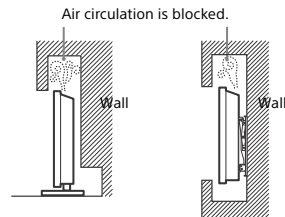

## AC power cord (mains lead)

Handle the AC power cord (mains lead) and outlet (mains socket) as follows in order to avoid any risk of fire, electrical shock or damage and/or injuries:

- The shape of AC power plug (mains plug), which is supplied with the TV set, varies depending on the regions. Be sure to connect the appropriate supplied AC power cord (mains lead) with the plug that fits into the AC power outlet (mains socket).
- Use only Sony supplied AC power cords (mains lead), not those of other brands.
- Insert the plug fully into the AC power outlet (mains socket).
- Operate the TV set on a 100 V - 240 V AC supply only.
- When wiring cables, be sure to unplug the AC power cord (mains lead) for your safety and take care not to catch your feet on the cables.
- Disconnect the AC power cord (mains lead) from the AC power outlet (mains socket) before working on or moving the TV set.
- Keep the AC power cord (mains lead) away from heat sources.
- Unplug the AC power plug (mains plug) and clean it regularly. If the plug is covered with dust and it picks up moisture, its insulation may deteriorate, which could result in a fire.

## Notes

 
- Do not use the supplied AC power cord (mains lead) on any other equipment.
- Do not pinch, bend, or twist the AC power cord (mains lead) excessively. The core conductors may be exposed or broken.
- Do not modify the AC power cord (mains lead).
- Do not put anything heavy on the AC power cord (mains lead).
- Do not pull on the AC power cord (mains lead) itself when disconnecting the AC power cord (mains lead).
- Do not connect too many appliances to the same AC power outlet (mains socket).
- Do not use a poor fitting AC power outlet (mains socket).

## NOTE ON AC ADAPTER

### Warning

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus. Do not install this equipment in a confined space, such as a bookshelf or similar unit.

- Please ensure that the AC power outlet (mains socket) is installed near the equipment and shall be easily accessible.
- Be sure to use the supplied AC adapter and AC power cord (mains lead). Otherwise it may cause a malfunction.
- Connect the AC adapter to an easily accessible AC power outlet (mains socket).
- Do not coil the AC power cord (mains lead) around the AC adapter. The core wire may be cut and/or it may cause a malfunction of the TV.



- Do not touch the AC adapter with wet hands.
- If you notice an abnormality in the AC adapter, disconnect it from the AC power outlet (mains socket) immediately.
- The set is not disconnected from the AC source as long as it is connected to the AC power outlet (mains socket), even if the set itself has been turned off.
- As the AC adapter will become warm when it is used for a long time, you may feel hot when touching it by hand.

## Prohibited Usage

Do not install/use the TV set in locations, environments or situations such as those listed below, or the TV set may malfunction and cause a fire, electrical shock, damage and/or injuries.

### Location:

- Outdoors (in direct sunlight), at the seashore, on a ship or other vessel, inside a vehicle, in medical institutions, unstable locations, near water, rain, moisture or smoke.
- If the TV is placed in the changing room of a public bath or hot spring, the TV may be damaged by airborne sulphur, etc.



- For best picture quality, do not expose the screen to direct illumination or sunlight.
- Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation. This may cause the TV to show poor picture and/or poor colour. Should this occur, allow moisture to evaporate completely before powering the TV on.

## Environment:

- Places that are hot, humid, or excessively dusty; where insects may enter; where it might be exposed to mechanical vibration, near flammable objects (candles, etc.). The TV set shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the TV.
- Do not place the TV in a humid or dusty space, or in a room with oily smoke or steam (near cooking tables or humidifiers). Fire, electric shock, or warping may result.
- Do not install the TV in places subject to extreme temperature, such as in direct sunlight, near a radiator or a heating vent. The TV may overheat in such conditions which can cause deformation of the enclosure and/or TV malfunction.



## Situation:

- Do not use when your hands are wet, with the cabinet removed, or with attachments not recommended by the manufacturer. Disconnect the TV set from AC power outlet (mains socket) and antenna during lightning storms.
- Do not install the TV so that it sticks out into an open space. Injury or damage from a person or object bumping into the TV may result.



## Broken pieces:

- Do not throw anything at the TV set. The screen glass may break by the impact and cause serious injury.
- If the surface of the TV set cracks, do not touch it until you have unplugged the AC power cord (mains lead). Otherwise electric shock may result.

## When not in use

- If you will not be using the TV set for several days, the TV set should be disconnected from the AC power (mains) for environmental and safety reasons.
- As the TV set is not disconnected from the AC power (mains) when the TV set is just turned off, pull the plug from the AC power outlet (mains socket) to disconnect the TV set completely.
- However, some TV sets may have features that require the TV set to be left in standby to work correctly.

## For children

- Do not allow children to climb on the TV set.
- Keep small accessories out of the reach of children, so that they are not mistakenly swallowed.

## If the following problems occur...

**Turn off** the TV set and unplug the AC power cord (mains lead) immediately if any of the following problems occur.

Ask your dealer or Sony service centre to have it checked by qualified service personnel.

### When:

- AC power cord (mains lead) is damaged.
- Poor fitting of AC power outlet (mains socket).
- TV set is damaged by being dropped, hit or having something thrown at it.
- Any liquid or solid object falls through openings in the cabinet.

## About LCD Monitor Temperature

When the LCD Monitor is used for an extended period, the panel surrounds become warm. You may feel hot when touching there by the hand.

### Precautions

#### Viewing the TV

- For best picture quality, do not expose the screen to direct illumination or sunlight.
- View the TV in moderate light, as viewing the TV in poor light or during long period of time, strains your eyes.
- When using headphones, adjust the volume so as to avoid excessive levels, as hearing damage may result.

#### LCD Screen

- Although the LCD screen is made with high-precision technology and 99.99% or more of the pixels are effective, black dots may appear or bright points of light (red, blue, or green) may appear constantly on the LCD screen. This is a structural property of the LCD screen and is not a malfunction.
- Do not push or scratch the front filter, or place objects on top of this TV set. The image may be uneven or the LCD screen may be damaged.
- If this TV set is used in a cold place, a smear may occur in the picture or the picture may become dark. This does not indicate a failure. These phenomena disappear as the temperature rises.
- Ghosting may occur when still pictures are displayed continuously. It may disappear after a few moments.
- The screen and cabinet get warm when this TV set is in use. This is not a malfunction.
- The LCD screen contains a small amount of liquid crystal. Follow your local ordinances and regulations for disposal.

#### Handling and cleaning the screen surface/ cabinet of the TV set

Be sure to unplug the AC power cord (mains lead) connected to the TV set from AC power outlet (mains socket) before cleaning. To avoid material degradation or screen coating degradation, observe the following precautions.

- To remove dust from the screen surface/cabinet, wipe gently with a soft cloth. If dust is persistent, wipe with a soft cloth slightly moistened with a diluted mild detergent solution.
- Never spray water or detergent directly on the TV set. It may drip to the bottom of the screen or exterior parts and enter the TV set, and may cause damage to the TV set.



- Never use any type of abrasive pad, alkaline/acid cleaner, scouring powder, or volatile solvent, such as alcohol, benzene, thinner or insecticide. Using such materials or maintaining prolonged contact with rubber or vinyl materials may result in damage to the screen surface and cabinet material.
- When adjusting the angle of the TV set, move it slowly so as to prevent the TV set from moving or slipping off from its table stand.

#### Optional Equipment

Keep optional components or any equipment emitting electromagnetic radiation away from the TV set. Otherwise picture distortion and/or noisy sound may occur.

## Caution about handling the remote control

- Observe the correct polarity when inserting batteries.
- Do not use different types of batteries together or mix old and new batteries.
- Dispose of batteries in an environmentally friendly way. Certain regions may regulate the disposal of batteries. Please consult your local authority.
- Handle the remote control with care. Do not drop or step on it, or spill liquid of any kind onto it.
- Do not place the remote control in a location near a heat source, a place subject to direct sunlight, or a damp room.

## Disposal of the TV set






### Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol is on the remote control and AC adapter.

GB

## Parts and Controls

### TV

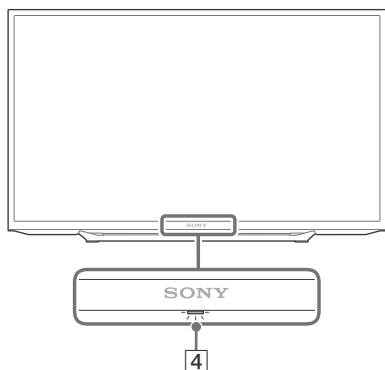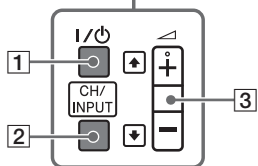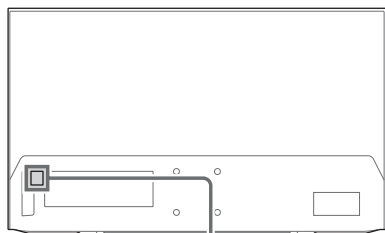

#### 1 I/O (Power)

Turns the TV on or switches to standby mode.

##### Note

- To disconnect the TV from the AC power completely, pull the plug from the mains socket.

#### 2 CH/INPUT

Switches between the CH Up/Down screen and the input select screen.

#### 3 (Volume / Item select)

- Increases/decreases the volume, or selects the next (+) or previous (-) channel when the CH Up/Down notification is displayed by pressing the **CH/INPUT** button.
- Moves the selected input source up/down when the input select menu is displayed by pressing the **CH/INPUT** button.

 
#### 4 (Sensors/LED indicator)

- Receives signals from the remote control. Do not put anything over the sensor. Doing so may affect its function.
- Lights up in amber when the [Sleep Timer] or [On Timer] is set (page 18), or the TV is in Photo Frame Mode (page 11).
- Lights up in green when [Power Saving] is set to [Picture Off] (page 20).
- Lights up in green when the TV is turned on.
- Does not light up when the TV is in standby mode.
- Flashes while the remote control is being operated.


##### Note

- Make sure that the TV is completely turned off before unplugging the AC power cord (mains lead).

##### Hint

- The  + button has a tactile dot. Use it as a reference when operating the TV.

# Remote Control

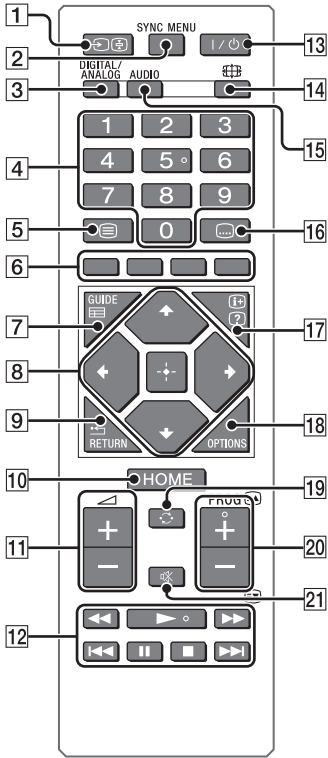

- 1** **(Input select / Text hold)**
  - Displays and selects the input source (page 23).
  - In text mode, holds the current page.
- 2** **SYNC MENU**

Press to display the BRAVIA Sync Menu and then select connected HDMI equipment from [Device Selection]. The following options can be selected from BRAVIA Sync Menu.

**Device Control:**  
Use the [Device Control] to operate equipment that is compatible with BRAVIA Sync Control. Select options from [Home (Menu)], [Options], [Content List] and [Power Off] to operate the equipment.

**Speakers:**  
Select [TV Speakers] or [Audio System] to output the TV's sound from the TV speakers or connected audio equipment.

**TV Control:**  
Use the [TV Control] menu to operate the TV from the [Home (Menu)] or [Options] menu.

**Return to TV:**  
Select this option to return to TV programme.

- 3** **DIGITAL/ANALOG**  
Switches to digital or analogue input.
- 4** **Number buttons**
  - Select channels. For channel numbers 10 and above, enter the next digit quickly.
  - In text mode, enter the three digit page number to select the page.
- 5** **(Text)**  
In text mode, displays Text broadcast. Each time you press , the display changes cyclically as follows:  
Text → Text over the TV picture (mix mode) → No Text (exit the Text service)
- 6** **Colour buttons**  
Displays operation guide (when colour buttons are available).
- 7** **GUIDE (EPG)**  
Displays the Digital EPG (Electronic Programme Guide) (page 10).
- 8** **(Item select / Enter)**
  - Select or adjust items.
  - Confirm selected items.
- 9** **RETURN**
  - Returns to the previous screen of any displayed menu.
  - Stops playback when playing photo/ music/video file.
- 10** **HOME**  
Displays or cancels the menu.
- 11** **(Volume)**  
Adjusts volume.
- 12**
  - Operate the connected BRAVIA Sync-compatible equipment.
  - These keys also can be used to operate USB media playback.

**13** I/⏻ (**TV standby**)

Turns the TV on or switches to standby mode.

**14** 📺 (**Wide Mode**)

Adjusts the screen display. Press repeatedly to select the desired wide mode (page 9).

**15** **AUDIO**

Select the sound of multilingual source or dual sound for the programme current being viewed (Depend on programme source).

**16** ⋮ (**Subtitle**)

Changes the subtitle setting (page 16).

**17** ⓘ/? (**Info / Text reveal**)

- Displays information. Press once to display information about the programme/input you are viewing. Press again to remove the display from the screen.
- In text mode, reveals hidden information (e.g. answers to a quiz).

**18** **OPTIONS**

Displays a list that contains shortcuts to some setting menus.  
The listed options vary depending on the current input and content.

**19** ↻ (**Jump**)

Returns to the previous channel or input viewed more than 15 seconds.

**20** **PROG +/-/⏪/⏩**

- Selects the next (+) or previous (-) channel.
- In text mode, selects the next (⏪) or previous (⏩) page.

**21** 🔇 (**Mute**)

Mutes the sound. Press again to restore the sound.

\* The location, availability and function of remote control button may vary depending on your countries/region/TV model.

**Hint**

- The number **5**, **▶**, **PROG +** and **AUDIO** buttons have tactile dots. Use the tactile dots as references when operating the TV.

## Watching TV

 
- 1 Press I/⏻ on the TV or remote control to turn on the TV.
- 2 Press DIGITAL/ANALOG to switch between digital and analogue modes.
- 3 Press the number buttons or PROG +/- to select a TV channel.
- 4 Press ▲ +/- to adjust the volume.

## Changing the Viewing Style


### Changing the Wide Mode

- 1 Press [WIDE] repeatedly to select the wide mode.


[Wide Zoom]\*




[Normal]

 


[Full]

 

[Zoom]\*

 


[14:9]\*

 


\* Parts of the top and bottom of the picture may be cut off.

### For HDMI PC Input (PC timing)

 
[Normal]



[Full 1]

 

[Full 2]

 

### Setting Scene Select


- 1 Press OPTIONS.
- 2 Press ⬆/⬆ then [SCENE] to select [Scene Select].

When you select the desired scene option, the optimum sound and picture quality for selected scene are automatically set. The options you can select may vary. Unavailable options are greyed out.

## Navigating through Home Menu

The **HOME** button allows you to access a variety of TV settings and features.


### 1 Press HOME.

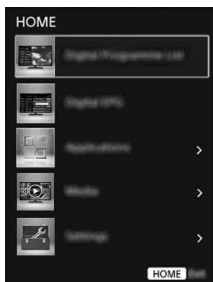

### 2 Press $\uparrow/\downarrow$ to select an option, then press $\square$ .

## Digital Programme List

- 1 Press **HOME** in digital mode.
- 2 Press  $\uparrow/\downarrow$  then  $\square$  to select [Digital Programme List].

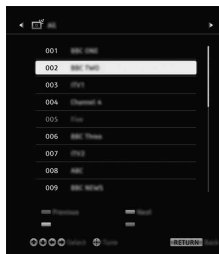

- 3 Press  $\uparrow/\downarrow/\leftarrow/\rightarrow$  then  $\square$  to select a programme.

### To use the Favourite list


The Favourite feature allows you to specify up to four lists of your favourite programmes. While watching TV, press  $\square$  to create or display a Favourite list.

#### Hint

- Press the blue button to edit the Favourite list. Follow the guides at the bottom of the screen.

## Digital EPG

- 1 Press  $\equiv$  **GUIDE** in digital mode.

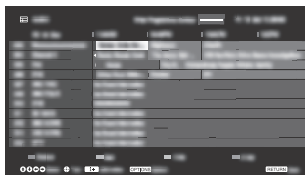

- 2 Press  $\uparrow/\downarrow/\leftarrow/\rightarrow$  then  $\square$  to select a programme.

# Applications

## Using the TV as a Photo Frame

Photo Frame displays the clock and calendar at the same time as displaying a photo, and listening to music or FM radio.

- 1 Press **HOME**.
- 2 Press  $\uparrow/\downarrow$  then  $\square$  to select [Applications].
- 3 Press  $\uparrow/\downarrow$  then  $\square$  to select [Photo Frame Mode].



## To launch Photo Frame while playback USB media

- 1 Press **OPTIONS** while playback a photo or music file.
- 2 Press  $\uparrow/\downarrow$  then  $\square$  to select [Photo Frame Mode] to launch Photo Frame.

## To select Display mode

You can change the photo frame display by selecting [Display Mode] in the [Photo Frame Settings] (page 18).

## To select Clock Display mode

You can select among three clock display modes by selecting [Clock Display] in the [Photo Frame Settings] (page 18).

### Note

- This TV does not have a battery powered backup for the clock. If there is a power failure or if you disconnect the power cord, the current date and time will reset automatically.

## Duration

To save power, the TV continually plays back in Photo Frame Mode for up to 24 hours before powering off automatically. After automatic power off, do not use Photo Frame Mode for at least one hour to avoid panel burn-in. You can change the setting of the [Duration] in the [Photo Frame Settings] (page 18).

To avoid panel burn-in, the position of the photo, clock and calendar are switched automatically every hour.

## Listening to FM Radio

- 1 Press **HOME**.
- 2 Press  $\uparrow/\downarrow$  then  $\square$  to select [Applications].
- 3 Press  $\uparrow/\downarrow$  then  $\square$  to select [FM Radio].
- 4 Press **PROG +/-** to select an FM radio station.

## To exit FM Radio mode

- 1 Press **RETURN**.

## Presetting Radio Stations

When you use FM Radio function for the first time, press **HOME** and select [Settings] → [System Settings] → [Channel Set-Up] → [FM Radio Set-up] → [Auto Tuning].

## To change preset radio stations

- 1 Press **OPTIONS** in FM Radio mode.
- 2 Press  $\uparrow/\downarrow$  then  $\square$  to select [FM Radio Presets].
- 3 Press  $\uparrow/\downarrow$  then  $\square$  to select the radio station you want to change.
- 4 Press  $\uparrow/\downarrow$  then  $\square$  to change the FM frequency then to edit FM Radio station name.

### Note

- If the station has a noisy sound, you may be able to improve the sound quality by pressing  $\leftarrow/\rightarrow$ .
- When an FM stereo programme has static noise, press **AUDIO** until [Mono] appears. There will be no stereo effect, but the noise will be reduced.

# Media

## Playback Photo/Music/Video via USB

You can enjoy photo/music/video files stored in a Sony digital still camera or camcorder through a USB cable or USB storage device on your TV.

- 1 Connect a supported USB device to the TV.
- 2 Press **HOME**.
- 3 Press  $\uparrow/\downarrow$  then  $\square$  to select [Media].
- 4 Press  $\uparrow/\downarrow$  then  $\square$  to select [Photo], [Music] or [Video].
- 5 Press  $\uparrow/\downarrow/\leftarrow/\rightarrow$  then  $\square$  to select a file or folder.

## Playback Options

Press the red button in thumbnail view to display the list of USB playback settings.

## To adjust the picture and sound quality of USB media

- 1 Press **OPTIONS** during media playback.
- 2 Press  $\uparrow/\downarrow$  then  $\square$  to select [Picture] or [Sound].
- 3 Press  $\uparrow/\downarrow/\leftarrow/\rightarrow$  then  $\square$  to select and adjust an item.

## To play a photo as a slideshow (Photo)

- 1 Press the green button in thumbnail view to start slideshow.  
To set [Slideshow Effect] and [Slideshow Speed], press **OPTIONS**  $\rightarrow$  [Playback Options].  
To stop a slideshow, press  $\leftarrow$  **RETURN**.

## Note

- While the TV is accessing the data on a USB device, observe the following:
  - Do not turn off the TV.
  - Do not disconnect the USB cable.
  - Do not remove the USB device.The data on the USB device may be damaged.
- Sony will not be held liable for any damage to, or loss of, data on the recording media due to a malfunction of any connected devices or the TV.
- The file system on the USB device supports FAT16, FAT32 and NTFS.
- The file name and folder name may not display correctly in some cases.
- When you connect a Sony digital still camera, set the camera's USB connection mode to Auto or Mass Storage. For more information about USB connection mode, refer to the instructions supplied with your digital camera.
- Use a USB storage device that is compliant with USB mass storage device class standards.
- If a selected file has incorrect container information, or is incomplete, it cannot be played back.

## USB Video format

- AVI (.avi)
  - Video Codec: MPEG1, MPEG2, Xvid, MPEG4, H.264, Motion JPEG
  - Audio Codec: PCM, MPEG1 Layer1/2, MPEG2 AAC (2ch), MPEG4 AAC (2ch), MPEG4 HE-AAC (2ch), Dolby Digital Plus (2ch), WMA v8, MP3
- ASF (.wmv, .asf)
  - Video Codec: WMV v9, Xvid, VC-1
  - Audio Codec: MP3, WMA v8
- MP4 (.mp4, .mov, .3gp)
  - Video Codec: MPEG4, H.264, H.263, Motion JPEG
  - Audio Codec: MPEG1 Layer1/2, MP3, MPEG2 AAC, MPEG4 AAC, MPEG4 HE-AAC
- MKV (.mkv)
  - Video Codec: WMV v9, MPEG4, H.264, VC-1, VP8
  - Audio Codec: PCM, MPEG1 Layer1/2, MP3, MPEG2 AAC (2ch), MPEG4 AAC (2ch), MPEG4 HE-AAC (2ch), WMA v8, Dolby Digital Plus (2ch), DTS, DTS 2.0, VORBIS
- WebM (.webm)
  - Video Codec: VP8
  - Audio Codec: VORBIS
- PS (.mpg, .mpeg, .vro, .vob)
  - Video Codec: MPEG1, MPEG2
  - Audio Codec: MPEG1 Layer1/2, MP3, Dolby Digital Plus (2ch), DTS, DTS 2.0

- TS (.ts, .m2ts)
  - Video Codec: MPEG2, H.264, VC-1
  - Audio Codec: MPEG1 Layer1/2, MP3, MPEG2 AAC, MPEG4 AAC, MPEG4 HE-AAC, Dolby Digital Plus (2ch), DTS, DTS 2.0

#### USB Music format

- LPCM (.wav)
- MPEG1 audio layer3 (.mp3)
- WMA V8 (.wma)

#### USB Photo format

- JPEG (.jpg, .jpeg)

#### Note

- Playback of the above file formats is not guaranteed.

## Settings

### System Settings

#### Note

- The options you can adjust vary depending on the situation. Unavailable options are greyed out or not displayed.

### Picture

#### Picture Mode

Sets a picture mode. The options that can be selected differ depending on the [Scene Select] settings.

#### Reset

Resets all the [Picture] settings except [Picture Mode] and [Intelligent Picture Plus] to the default settings.

#### Backlight

Adjusts the brightness of the backlight.

#### Picture

Increases or decreases picture contrast.

#### Brightness

Brightens or darkens the picture.

#### Colour

Increases or decreases colour intensity.

#### Hue

Increases or decreases the green tones and red tones.

#### Sharpness

Sharpens or softens the picture.

#### Colour Temperature

Adjusts the whiteness of the picture.

#### Noise Reduction

Reduces the picture noise (snowy picture) in a weak broadcast signal.

#### MPEG Noise Reduction

Reduces the picture noise in MPEG-compressed video.

---

## Cinema Drive

Provides improved picture movement when playing BD (Blu-ray Disc), DVD or VCR images taken on film, reducing picture blur and graininess. Select [Auto] to represent original film-based content as it is.

### Note

- If the image contains irregular signals or too much noise, [Cinema Drive] is automatically turned off even if [Auto] is selected.

---

## Advanced Settings

Sets [Picture] settings in more detail.

**Reset:** Resets all the advanced settings to the default settings.

**Adv. Contrast Enhancer:** Automatically adjusts [Backlight] and [Picture] to the most suitable settings judging from the brightness of the screen. This setting is especially effective for dark images scenes, and will increase the contrast distinction of the darker picture scenes.

**Black Corrector:** Enhances black areas of the picture for stronger contrast.

**Gamma:** Adjusts the balance between bright and dark areas of the picture.

**Clear White:** Emphasises white colours.

**Live Colour:** Makes colours more vivid.

**LED Motion Mode:** Reduces blur in movies by controlling the LED backlight source, but the brightness decreases.

---

## Intelligent Picture Plus Set-up

**Intelligent Picture Plus:** Enhances picture quality according to preferred settings, channel or video input. The options that can be selected differ depending on the [Scene Select] settings.

**Signal Level Indicator:** When [On] is selected, the signal level bar will be displayed when you select analogue channel or video input.

**Picture Optimisation:** Allows you to enhance the picture to your preferred settings.

---

## Sound

### Sound Mode

Select according to content you want to enjoy.

---

### Reset

Reset [Equaliser], [Clear Voice], [Intelligent Volume], [Balance] and [Volume Offset] settings.

---

### Equaliser

Adjusts sound frequency settings.

---

### Clear Voice

Makes voices sound clearer.

---

### Intelligent Volume

Minimizes the difference in volume level between all programmes and adverts (e.g. adverts tend to be louder than programmes).

---

### Balance

Emphasises left or right speaker balance.

---

### Volume Offset

Adjusts the volume level of the current input relative to other inputs.

---

### Dual Sound

Sets the sound from the speaker to [Mono], [Stereo], [Main] or [Sub].

### Note

- If the signal is very weak, the sound becomes monaural automatically.
- If the stereo sound is noisy when receiving a NICAM programme, select [Mono]. The sound becomes monaural, but the noise is reduced.
- The [Dual Sound] setting is memorized for each programme position.
- You cannot listen to stereo broadcast sound when [Mono] is selected.

### Hint

- If you select other equipment connected to the TV, set [Dual Sound] to [Stereo], [Main] or [Sub].

---

## Advanced Settings

**Dynamic Range:** Compensates for differences in the audio level between different channels.

### Note

- The effect may not function or may vary depending on the programme regardless of the [Dynamic Range] setting.

**HE-AAC Audio Level:** Adjust the HE-AAC audio sound level.

**MPEG Audio Level:** Adjusts the MPEG audio sound level.

---

## Screen

### Wide Mode


For details about wide mode, see page 9.

---

### Auto Wide

Automatically changes the wide mode according to the input signal from an external equipment. To keep your setting, select [Off].

### Hint

- Even if [Auto Wide] is set to [On] or [Off], you can always modify the format of the screen by pressing  repeatedly.

---

### 4:3 Default

Sets the default [Wide Mode] for a 4:3 input signal.

---

### Auto Display Area

Select [On] to automatically adjust the display area based upon the content or [Off] to choose from the [Display Area] options.

---

### Display Area

Adjusts the picture display area.

---

### Horizontal Shift

Adjusts the horizontal position of the picture.

---

### Vertical Shift

Adjusts the vertical position of the picture.

---

### PC Settings

Adjust the picture size, see page 9.

---

## Channel Set-up

### Analogue Set-up

**Analogue Auto Tuning:** Tunes in all the available analogue channels. Usually you do not need to do this operation because the channels are already tuned when the TV was first installed. However, this option allows you to repeat the process (e.g., to retune the TV after moving house, or to search for new channels that have been launched by broadcasters).

**Manual Programme Preset:** Before selecting [Channel]/[AFT]/[Audio Filter]/[Skip]/[Colour System], press **PROG +/-** to select the programme number with the channel. You cannot select a programme number that is set to [Skip:] (page 15).

**Programme/TV System:** Presets programme channels manually.

**Channel:**

Selects a channel number.

**AFT:**

Allows you to fine-tune the selected channel manually. When [On] is selected, the fine tuning is performed automatically.

**Audio Filter:**

Improves the sound of individual channels when distortion occurs in mono broadcasts in TV system [B/G], [I], [D/K] and [M].

**Note**

- You cannot receive stereo or dual sound when [Low]/[High] is selected.

**Skip:**

Skips unused channels.

**Colour System:**

Select the colour system ([Auto], [PAL], [SECAM], [NTSC3.58], [NTSC4.43] or [PAL60]) according to the channel.

**Signal Level:**

Displays the signal level for programme currently being watched.

**Programme Sorting:** Changes the order in which the channels are stored on the TV.

---

## Digital Set-up

### Digital Tuning:

#### Digital Auto Tuning

Tunes in the available digital channels. This option allows you to retune the TV after moving house, or to search for new channels that have been launched by broadcasters.

#### Auto Tuning Range

[Normal]: Searches for available channels within your region/country.

[Full]: Searches for available channels regardless of region/country.

#### Note

- You can run [Digital Auto Tuning] after moving to a new residence, changing service providers, or to search for newly launched channels.

#### Programme List Edit

Removes any unwanted digital channels stored on the TV, and changes the order of the digital channels stored on the TV.

#### Digital Manual Tuning

Tunes the digital channels manually.

### Subtitle Set-up:

#### Subtitle Setting

When [For Hard Of Hearing] is selected, some visual aids may also be displayed with the subtitles (if TV channels broadcast such information).

#### Primary Preferred Language

Select preferred language which subtitles are displayed in.

#### Secondary Preferred Language

Select secondary preferred language which subtitles are displayed in.

### Audio Set-up:

#### Audio type (Audio description)

##### Normal

Provide normal audio type.

##### Audio Description

Provides audio description (narration) of visual information if TV channels broadcast such information.

##### For Hard Of Hearing

Switches to broadcast for the hearing impaired when [For Hard Of Hearing] is selected.

##### Spoken subtitle

Switches to broadcast for the spoken subtitle audio if TV channels broadcast such information.

#### Primary Preferred Language

Select the preferred language used for a programme. Some digital channels may broadcast several audio languages for a programme.

#### Secondary Preferred Language

Select the secondary preferred language used for a programme. Some digital channels may broadcast several audio languages for a programme.

#### Mixing Level

Adjusts the TV main audio and Audio Description output levels.

#### Hint

- This option is only available when [Audio Description] in [Audio Type (Audio Description)] is set.

### Guide set-up:

#### Preferred Language

Select the preferred language used for an event information display. Some digital channels may broadcast several languages for event information display.

#### Update Guide in standby

TV obtains EPG data during standby mode.

### Technical Set-up:

#### Auto Service Update

Enables the TV to detect and store new digital services as they become available.

#### Service Replacement

Select [On] to automatically change the channel when broadcaster changes transmission of the viewing programme to a different channel.

---

## FM Radio Set-up

Presents up to 30 FM radio stations that can be received in your area.

**Auto Tuning:** Allows you to automatically tune and store all the available channels.

**FM Radio Presets:** Allows you to manually tune and store each available channel one at a time.

### Note

- To enable this feature, access to FM Radio mode by using Home (Menu) (page 11), then preset your desired FM radio stations according to the steps mentioned above.



## Parental Lock

### PIN Code

Sets a PIN code. Use **0-9** on the remote control to enter a four-digit PIN code.

---

### Change PIN Code

Select to change your PIN code.

---

### Parental Rating

**Except Australian, New Zealand, Singapore and South Africa model:**

Sets an age restriction to viewing. To view any programme rated for ages above the age you specify, enter the correct PIN code.

**Australian model and New Zealand model:**

Sets a parental guidance level. Programmes that exceed the set level can only be watched after entering the correct PIN code.

**Australian model:**

**Block All:** All programmes need a password to view.

**G and above:** To lock "General" and above programmes.

**PG and above:** To lock "Parental Guidance" and above programmes.

**M and above:** To lock "Mature" and above programmes.

**MA and above:** To lock "Mature Adult" and above programmes.

**AV and above:** To lock "Adult/Violence" and above programmes.

**R and above:** To lock "Restricted" and above programmes.

**No block:** No programmes need a password to view.

**New Zealand model:**

**Block All:** All programmes need a password to view.

**G and above:** To lock "General" and above programmes.

**PGR and above:** To lock "Parental Guidance Recommended" and above programmes.

**AO and above:** To lock "Adults Only" and above programmes.

**No block:** No programmes need a password to view.

**Singapore model:**

**G:** To lock "General" and above programmes.

**PG:** To lock "Parental Guidance" and above programmes.

**PG13:** To lock "Parental Guidance 13" and above programmes.

**NC16:** To lock "No Children Under 16" and above programmes.

**M18:** To lock "Mature 18" and above programmes.

**R21:** To lock "Restricted 21" and above programmes.

**No block:** No programmes need a password to view.

**South Africa model:**

**PG10:** To lock "Parental Guidance 10" and above programmes.

**10:** Set parental restriction for age 10 and below.

**PG13:** To lock "Parental Guidance 13" and above programmes.

**13:** Set parental restriction for age 13 and below.

**16:** Set parental restriction for age 16 and below.

**18:** Set parental restriction for age 18 and below.

**R18:** To lock "Restricted 18" and above programmes.

**No block:** No programmes need a password to view.

---

## Digital Programme Block

Locks a digital channel from being watched. To view a blocked channel, select [Unblocked].

---

## External Input Lock

Locks an external input from being watched. To view a blocked external input, select [Unblocked].

### Note

- Entering the correct PIN code for blocked channel or external input will temporarily deactivate the [Parental Lock] feature. To reactivate the [Parental Lock] settings, turn off and on the TV.

### Hint

- If you lost your PIN code, see page 28.

## Set-up

### Photo Frame Settings

**Display Mode:** Allows you to select the display mode. See page 11.

**Clock Display:** Allows you to select the clock display.

#### Note

- This option is available when [Display Mode] is set to [Image and Clock] or [Full Screen Clock].

**Audio Application:** Sets [FM Radio], [Music] or [Off] as audio application.

**Image Selection:** Select image.

**Music Selection:** Select music.

**Slideshow Setting:** Select from showing slideshow mode or single view photo.

**Music Playback Setting:** Select from listening to all tracks or a single music track.

**Duration:** Select the time period ([1 h], [2 h], [4 h] or [24 h]) after which the TV automatically switches to standby mode.

**First day of the week:** Sets [Sunday] or [Monday] as the first day of the week on the calendar.

---

## USB Auto Start

When USB device is connected to the USB port, select [On] to automatically view the thumbnail of the last played Photo/Music/Video.

---

## Clock/Timers

Sets the timer and clock.

**Sleep Timer:** Sets the time in minutes that you would like the TV to remain on before shutting off automatically.

**On Timer:** Turns on the TV from standby mode at a time you set, and tuned to a channel or input of your preference. Before setting this function, make sure you set the correct current time.

**Clock Set:** Sets the current time and date. This feature also can be set from initial set-up.

### Auto/Manual

Select [Manual] to set current time manually.

### Automatic time zone

Sets whether or not to automatically select the time zone you are in.

**On:** Automatically switches between summer time and winter time according to the calendar.

**Off:** The time is displayed according to the time difference set by [Time Offset].

### Automatic daylight saving time

Sets whether or not to automatically switch between summer time and winter time.

### Date

Set current date.

### Time

Set Current Time.

### Time Offset

Allows you to manually select the time zone you are in, if it is not the same as the default time zone setting for your country/region.

---

### Auto Start-up

Starts the initial set-up procedure. This option allows you to retune the TV after moving houses, or to search for new channels that have been launched by broadcasters.

---

### Language

Select the language in which the menus are displayed.

---

### Start-up Logo

Select [On] to display the logo when the TV is turned on. Select [Off] to disable it.

---

### LED Indicator

Select [On] to light up the LED indicator. Select [Off] to disable it.

---



 

### AV Set-up

**Video Labels:** Assigns name to external equipment input.

**Enable:** Select [Auto] to display names only when the equipment is connected, or [Always] to display regardless of connection status.

**Label Inputs:** Uses one of the preset labels to assign a name to connected equipment. Select [Edit] to create your own label.

**Colour System:** Selects the colour system ([Auto], [PAL], [SECAM], [NTSC3.58], [NTSC4.43], [PAL60]) according to the composite video signal from the input source.

**Video/Component Input:** Select [Auto] to have the TV detect and switch between the component video jack  or the video jack  when component video jack  or video jack  is connected.

#### Note

- You cannot use the component video jack and the video jack at the same time.

**Speakers:** Select sound output from the TV speakers or external audio equipment.

**Headphone/Audio Out:** Sets the sound output to headphone, external audio systems or Active Subwoofer connected to the TV. Disconnect headphone from the TV when you select [Audio Out] or [Subwoofer].

**Headphone Speaker Link:** Switches the TV's internal speakers on/off when you connect headphone to the TV.

**Headphone Volume:** Adjusts the volume of the headphone.

#### Note

- This option is not available, when [Headphone/Audio Out] is set to [Audio Out] or [Subwoofer].

### Audio Out:

**Variable:** When using an external audio system, volume output from audio out can be controlled using the TV's remote control.

**Fixed:** The audio output of the TV is fixed. Use your audio receiver's volume control to adjust the volume (and other audio settings) through your audio system.

#### Hint

- This option is only available when [Headphone/Audio Out] is set to [Audio Out].

**Digital Audio Out:** Sets the audio signal that is output by connecting using digital audio output (optical) cable or HDMI cable. Set to [Auto], when connecting equipment compatible with Dolby Digital or DTS. Set to [PCM], when connecting equipment not compatible with Dolby Digital or DTS.

**TV Position:** Improves the speaker settings when set as [Table-Top Stand] or [Wall Mount] according to your TV's position.

---

### **BRAVIA Sync Settings**

Allows the TV to communicate with equipment that is compatible with the BRAVIA Sync Control function, and connected to the HDMI ports of the TV. Note that communication settings must also be made on the connected equipment.

**BRAVIA Sync Control:** Sets whether or not to link the operations of the TV and the connected equipment that is compatible with BRAVIA Sync Control. When set to [On], the following functions are available. If the specific Sony equipment that is compatible with BRAVIA Sync Control is connected, this setting is applied to the connected equipment automatically.

**Auto Devices Off:** When set to [On], the connected equipment that is compatible with BRAVIA Sync Control turns off when your TV goes to standby mode.

**Auto TV On:** When set to [On], the TV turns on when you turn on the connected equipment that is compatible with BRAVIA Sync Control.

**BRAVIA Sync Device List:** Displays a list of connected equipment that is compatible with BRAVIA Sync Control. Select [Enable] to update the [BRAVIA Sync Device List].

**Device Control Keys:** Select button functions of the TV's remote control to operate the connected equipment.

#### **None**

Deactivates the control by the TV's remote control.

#### **Normal**

For basic operations, such as navigation buttons (up, down, left or right, etc).

#### **Tuning Keys**

For basic operations and operation of channel-related buttons, such as **PROG +/-** or **(0-9)**, etc. Useful when you control a tuner or set-top box, etc; via the remote control.

#### **Menu Keys**

For basic operations and operation of the **HOME/OPTIONS** buttons. Useful when you select menus of a BD player, etc; via the remote control.

#### **Tuning and Menu Keys**

For basic operations and operation of channel-related buttons and **HOME/OPTIONS** button.

#### **Note**

- Some equipment with [BRAVIA Sync Control] does not support the [Device Control Keys] feature.

---

## **Customer Support**

Provides information of your TV's model, software, and others. For details, see page 21.



### **Reset**

Resets the current Eco settings to the default values.

---

### **Power Saving**

Reduces power consumption of the TV by adjusting the backlight.

When you select [Picture Off], the picture is switched off. The sound remains unchanged.

---

### **Idle TV Standby**

Turns the TV off after it has been kept idle for the preset length of time.

## Customer Support

### Model Name

Displays model name of your TV.

---

### Software Version

Displays current software version of your TV.

---

### Digital

Select [System Information] to display digital channel information of your TV.

---

### External Inputs

**View Video Labels:** Allows you to view or manage the TV and external inputs.

---

### Picture Check

**View Test Picture:** Allows you to check the picture condition on the display.

---

### Software Update

Select to perform system update.

---

### Automatic Software Download

Select [On] to download the software automatically by broadcast signal. Select [Off] to disable it.

---

### Factory Settings

Resets all settings to factory settings. After completing this process, the initial set-up screen is displayed.

#### Note

- Be sure not to turn the TV off during this period (it takes about 30 seconds) or press any buttons.
- 

### Product Information

Displays your TV's product information.


# Viewing Pictures from Connected Equipment

## Connection Diagram

You can connect a wide range of optional equipment to your TV.

### Note

- Depending on TV model, connecting a large USB device may interfere with other connected devices beside it.

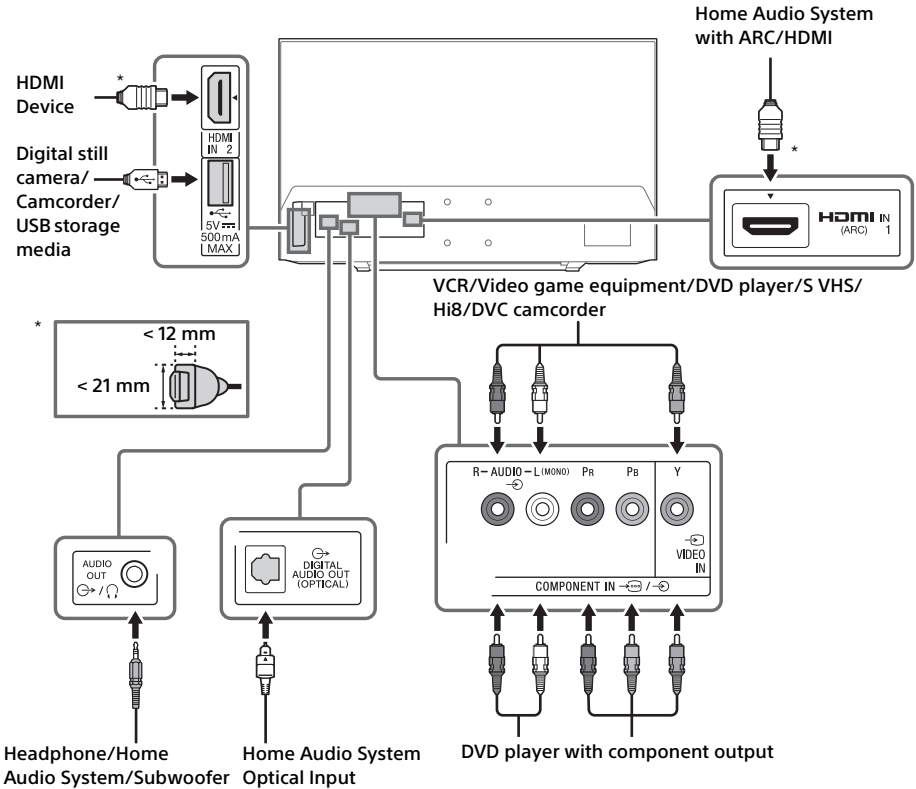

### Picture Quality

- AV composite cable
- Antenna (aerial) cable
- Component cable
- HDMI cable


 
 
 


Standard definition (SD) videos have picture signals with a vertical resolution of 480 (NTSC) or 576 (PAL/SECAM) lines.



High definition (HD) videos have picture signals with a vertical resolution of 720 or 1,080 lines.

# Using Audio and Video Equipment

- 1 Turn on the connected equipment.
- 2 Press  to display the input source.
- 3 Press / then  to select the desired input source.  
The highlighted item is selected if 5 seconds pass without any operation.

## Note

- When connecting a digital audio system not compatible with Audio Return Channel (ARC) technology using an HDMI cable, you need to connect an optical audio cable to the DIGITAL AUDIO OUT (OPTICAL) to output digital sound.
- When connecting with an HDMI cable, be sure to use HighSpeed HDMI Cable with Cable Type Logo (Recommended SONY Cable).
- When connecting mono equipment, connect the audio cable to the L (mono) jack.

## To use BRAVIA Sync devices

When connecting the TV to BRAVIA Sync compatible equipment, you can control them together.

Be sure to perform the necessary settings in advance. The BRAVIA Sync Control settings must be set on both the TV and the connected equipment. See [BRAVIA Sync Settings] (page 20) for the settings on the TV side. Refer to the connected equipment operating instructions for the settings on the connected equipment side.

## Additional Information

### Installing the TV to the Wall

This TV's instruction manual only shows the steps on preparing the installation of the TV before installing to the wall.

#### To Customers:

For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

#### To Sony Dealers and Contractors:

Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Sufficient expertise is required for installing this product, especially to determine the strength of the wall for withstanding the TV's weight. Be sure to entrust the attachment of this product to the wall to Sony dealers or licensed contractors and pay adequate attention to safety during the installation. Sony is not liable for any damage or injury caused by mishandling or improper installation.


Use the Wall-Mount Bracket SU-WL450 (not supplied) to install the TV to the wall.

When installing the Wall-Mount Bracket, also refer to the Operating Instructions and Installation Guide supplied with the Wall-Mount Bracket.


#### Note

- If the Table-Top Stand is attached to the TV, detach the Table-Top Stand beforehand. See the Startup Guide and follow in reverse order the steps to detach the Table-Top Stand.
- Place the TV with its screen facing down on a level and stable surface covered with a thick and soft cloth, when securing the Mounting Hook or when removing the Table-Top Stand from the TV to prevent damaging the surface of the LCD display.

### To detach the Table-Top Stand from the TV

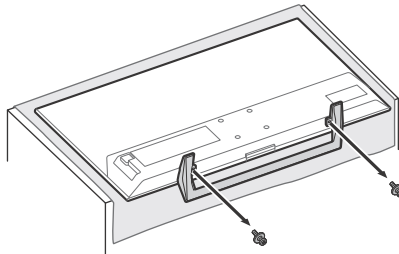

- 1 Make sure that the wall has enough space for the TV and is capable of supporting a weight of at least four times that of the TV. Refer to the following table on installing the TV to the wall. See page 29-30 (Specifications) for the TV's weight.

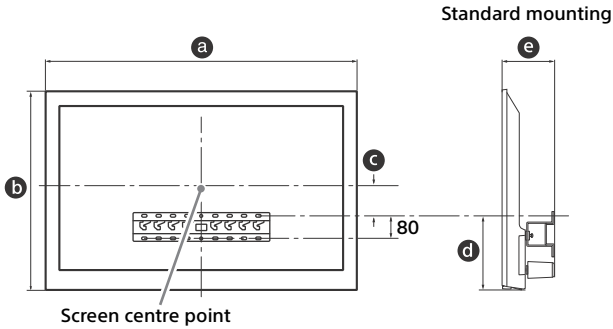


Unit: mm

Model Name KDL-	Display dimensions		Screen centre dimension	Length for mounting	
	a	b	c	d	e
40R350C	924	550	84	201	127
32R304C 32R300C	735	443	30	201	125

**Note**

- Figures in the table may differ slightly depending on the installation.
- When your TV is installed on the wall, the upper side of the TV slightly leans forward.

- 2 Remove screws from the rear of the TV. Be sure to store the removed screws in a safe place, keeping them away from children.

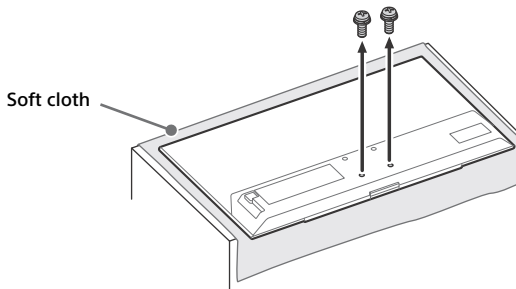


### 3 Attach the Attachment parts for Wall-Mount Bracket. Check the Attachment parts by referring to "1" of the Wall-Mount Bracket Installation Guide.

**Note**

- If using an electric screwdriver, set the torque at approximately 1.5 N·m (15 kgf·cm).
- Be sure to store the unused parts in a safe place for future use. Retain this manual for future reference.

#### Standard mounting

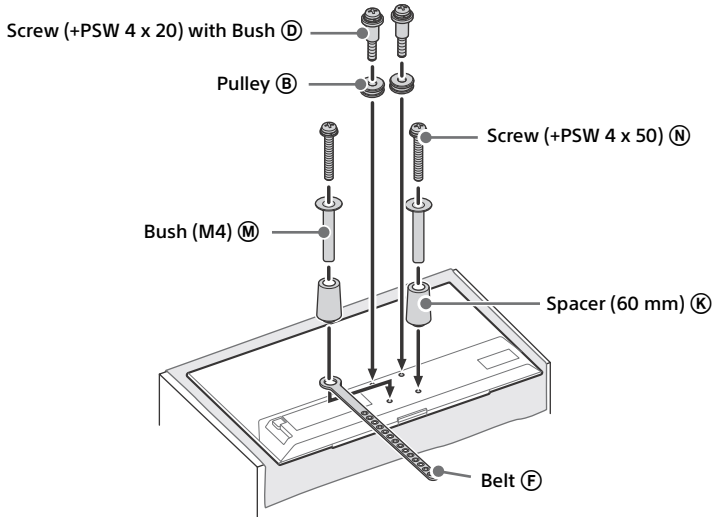


### 4 Connect necessary cables to the TV.

**Note**

- You cannot access to any terminal after installing the TV to the wall.

### 5 Install the TV to the Base. Refer to "5" of Installation Guide and "Installing the TV to the Wall" of Operating Instructions supplied with the Wall-Mount Bracket.

Model Name KDL-	Hook location
40R350C	d
32R304C	
32R300C	

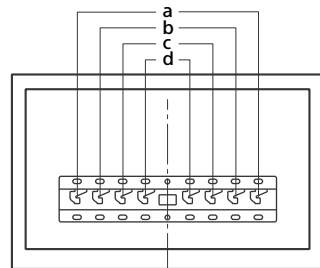

Refer to the instructions supplied with the Wall-Mount Bracket for your model to install the TV on the wall.

## Troubleshooting

**When the LED indicator is flashing red, count how many times it flashes (interval time is three seconds).**

If the LED indicator flashes red, reset the TV by disconnecting the AC power cord (mains lead) from the TV for two minutes, then turn on the TV.

If the problem persists, contact your dealer or Sony service centre with the number of times the LED indicator flashes red (interval time is three seconds). Press I/⏻ on the TV to turn it off, disconnect the AC power cord (mains lead), and inform your dealer or Sony service centre.

**When the LED indicator is not flashing, check the items as follows.**


If the problem persists, have your TV serviced by qualified service personnel.

### Picture

**No picture (screen is dark) and no sound**

- Check the antenna (aerial)/cable connection.
- Connect the TV to the AC power outlet (mains socket), and press I/⏻ on the TV or remote control.

**No picture or no menu information from equipment connected to the video input jack appears on the screen**

- Press  to display the connected equipment list, then select the desired input.
- Check the connection between the optional equipment and the TV.

**Double images or ghosting**

- Check the antenna (aerial)/cable connection, location or direction.

**Only snow and noise appear on the screen**

- Check if the antenna is broken or bent.
- Check if the antenna has reached the end of its serviceable life (three to five years in normal use, one to two years at the seaside).

**Distorted picture (dotted lines or stripes)**

- Keep the TV away from electrical noise sources such as cars, motorcycles, hair-dryers or optional equipment.
- When installing optional equipment, leave some space between the optional equipment and the TV.
- Check the antenna (aerial)/cable connection.

- Keep the antenna cable away from other connecting cables.

**Picture or sound noise when viewing a TV channel**

- Adjust [AFT] (Automatic Fine Tuning) to obtain better picture reception (page 15).

**Tiny black points and/or bright points appear on the screen**


- The picture of a display unit is composed of pixels. Tiny black points and/or bright points (pixels) on the screen do not indicate a malfunction.


**Picture contours are distorted**

- Change the current setting of [Cinema Drive] to other settings (page 14).


**No colour on programmes**

 - Select [Reset] (page 13).

**No colour or irregular colour when viewing a signal from the Y, Pb, Pr jacks of **

 - Check the connection of the Y, Pb, Pr jacks of  and check if each jacks are firmly seated in their respective jacks.

**No picture from the connected equipment appears on the screen**

 
 
- Turn the connected equipment on.
- Check the cable connection.
- Press  to display the connected equipment list, then select the desired input.
- Correctly insert the memory card or other storage device in the digital still camera.
- Use a digital still camera memory card or other storage device that has been formatted according to the instruction manual supplied with the digital still camera.
- Operations are not guaranteed for all USB devices. Also, operations differ depending on the features of the USB device and the video being played.

**Cannot select the connected equipment on the menu or cannot switch the input**

- Check the cable connection.

### Sound

**No sound, but good picture**

- Press  +/- or  (Mute).
- Check if [Speakers] in [AV Set-up] is set to [TV Speakers] (page 19).
- Check if the headphone plug is connected to the TV.

### No sound or noisy sound

- Check if the TV system setting is appropriate (page 14).

## Channels

### The desired channel cannot be selected

- Switch between digital and analogue mode and select the desired digital/analogue channel.

### Some channels are blank

- The channel is for scrambled/subscription service only. Subscribe to a pay TV service.
- Channel is used only for data (no picture or sound).
- Contact the broadcaster for transmission details.

### Digital channels are not displayed

- Contact a local installer to find out if digital transmissions are provided in your area.
- Upgrade to a higher gain aerial.

## General

### The TV turns off automatically (the TV enters standby mode)

- Check if the [Sleep Timer] is activated (page 18).
- Check if the [Duration] is activated by [On Timer] (page 18) or [Photo Frame Settings] (page 18).
- Check if the [Idle TV Standby] is activated (page 20).

### Some input sources cannot be selected

- Select [Video Labels] and select [Always] of the input source (page 19).

### The remote control does not function

- Replace the batteries.

### HDMI equipment does not appear on [BRAVIA Sync Device List]

- Check that your equipment is compatible with BRAVIA Sync Control.


### Cannot select [Off] in [BRAVIA Sync Control]

- If you have connected any audio system that is compatible with BRAVIA Sync Control, you cannot select [Off] in this menu. To change the audio output to the TV speaker, select [TV Speakers] in the [Speakers] menu (page 19).

### The [Parental Lock] password has been forgotten

- Press **HOME** and select [Settings] → [System Settings] → [Parental Lock] → [PIN Code] then enter 9999 for the PIN code (PIN code 9999 is always accepted).

### Store Display Mode or Promoting Feature Logo appears on the screen

- On the remote control, press  **RETURN** then press **HOME** and select [Settings] → [System Settings] → [Set-up] → [Auto Start-up]. Be sure to select [Home] in [Location].

# Specifications

## System

### Panel system

LCD (Liquid Crystal Display) Panel, LED backlight

### TV system

Depend on your country/area selection

Analogue: B/G, I, D/K, M or M/N

Digital: DVB-T/DVB-T2 or SBTVD

### Colour/video system

Analogue: PAL, SECAM, NTSC3.58, NTSC4.43

Digital: MPEG-2 MP@ML/HL, H.264/MPEG-4 AVC MP/HP@L4

### Channel coverage

Analogue: VHF/UHF/Cable, Depend on your country/area selection

Digital: VHF/UHF, Depend on your country/area selection

### Sound output (Only for 19.5 V supply)

5 W + 5 W

## Input/Output jacks

### Antenna (aerial)/cable

75 ohm external terminal for VHF/UHF

 COMPONENT IN /  VIDEO IN


 COMPONENT IN

Supported formats: 1080p(50, 60 Hz), 1080i(50, 60 Hz), 720p(50, 60 Hz), 576p, 576i, 480p, 480i

Y: 1 Vp-p, 75 ohms, 0.3V negative sync

Pe: 0.7 Vp-p, 75 ohms

Pr: 0.7 Vp-p, 75 ohms

 Video input (phono jack)

 COMPONENT IN /  AUDIO IN

Audio input (phono jacks)

### HDMI IN 1 (ARC), HDMI IN 2

HDMI Video: 1080p(30, 50, 60 Hz), 1080/24p, 1080i(50, 60 Hz), 720p(30, 50, 60 Hz), 720/24p, 576p, 576i, 480p, 480i

PC input: (Horizontal × Vertical, Horizontal frequency, Vertical frequency, Standard)

For KDL-40R350C

640 × 480, 31.5 kHz, 60 Hz

800 × 600, 37.9 kHz, 60 Hz

1,024 × 768, 48.4 kHz, 60 Hz

1,280 × 768, 47.4 kHz, 60 Hz

1,280 × 768, 47.8 kHz, 60 Hz

1,360 × 768, 47.7 kHz, 60 Hz

1,280 × 1,024, 64 kHz, 60 Hz

\*1,920 × 1,080, 67.5 kHz, 60 Hz

\* The 1080p timing when applied to the HDMI input will be treated as a video timing and not PC timing.

For KDL-32R304C / 32R300C

640 × 480, 31.5 kHz, 60 Hz

800 × 600, 37.9 kHz, 60 Hz


1,024 × 768, 48.4 kHz, 60 Hz

1,280 × 768, 47.4 kHz, 60 Hz



1,280 × 768, 47.8 kHz, 60 Hz

1,360 × 768, 47.7 kHz, 60 Hz

Audio: Two channel linear PCM: 32, 44.1 and 48 kHz, 16, 20 and 24 bits, Dolby Digital ARC (Audio Return Channel) (HDMI IN 1 only)

DIGITAL AUDIO OUT (OPTICAL) 



Digital optical jack (Two channel linear PCM, Dolby Digital, DTS)

 AUDIO OUT/ (Stereo mini jack)


 
Headphone, Audio output, Subwoofer



USB port

DC IN 19.5 V   (except KDL-32R304C)

AC adapter input

DC IN 12/19.5 V   (KDL-32R304C only)

AC adapter input: 19.5 V

DC input: 12 V

## Others

### Optional accessories

Wall-Mount Bracket: SU-WL450

### Operating temperature

0 °C – 40 °C

## Power and others

### Power requirements

19.5 V DC with AC adapter

Rating: Input 100 V - 240 V AC, 50/60 Hz

Energy Efficiency Class (Jordan and Mauritius only)

KDL-40R350C / 32R300C: A+

### Screen size (measured diagonally) (approx.)

KDL-40R350C: 40 inches / 101.6 cm

KDL-32R304C / 32R300C: 32 inches / 80.0 cm

### Power Consumption (Jordan and Mauritius only)

In [Standard] mode

KDL-40R350C: 42 W

KDL-32R300C: 29 W

In [Vivid] mode

KDL-40R350C: 51 W

KDL-32R300C: 37 W

Average annual energy consumption\*1

(Jordan and Mauritius Only)

KDL-40R350C: 61 kWh

KDL-32R300C: 42 kWh

Standby power consumption\*2 (Jordan and Mauritius Only)

KDL-40R350C / 32R300C: 0.40 W

## Display resolution

KDL-40R350C: 1,920 dots (horizontal) × 1,080 lines (vertical)  
KDL-32R304C / 32R300C: 1,366 dots (horizontal) × 768 lines (vertical)

## Power consumption

KDL-40R350C: 51 W  
KDL-32R304C / 32R300C: 37 W

\* This information is for EU and other countries whose relevant regulation is based on EU energy labelling regulation.

## Dimensions (Approx.) (w × h × d)

### with Table-Top Stand

KDL-40R350C: 924 × 568 × 183 mm  
KDL-32R304C / 32R300C: 735 × 461 × 168 mm

### without Table-Top Stand

KDL-40R350C: 924 × 550 × 65 mm  
KDL-32R304C / 32R300C: 735 × 443 × 63 mm

## Mass (Approx.)

### with Table-Top Stand

KDL-40R350C: 6.9 kg  
KDL-32R304C / 32R300C: 4.8 kg

### without Table-Top Stand

KDL-40R350C: 6.5 kg  
KDL-32R304C / 32R300C: 4.5 kg

\*1 Energy consumption per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

\*2 Specified standby power is reached after the TV finishes necessary internal processes.

## Note

- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.

## Notes on Digital TV function

- Any functions related to Digital TV (**DVB**) will only work in countries or areas where DVB-T/DVB-T2 (MPEG-2 and H.264/MPEG-4 AVC) digital terrestrial signals are broadcast. Please confirm with your local dealer if you can receive a DVB-T/DVB-T2 signal where you live.
- This TV set complies with DVB-T/DVB-T2 specifications, but compatibility with future DVB-T/DVB-T2 digital terrestrial broadcasts are not guaranteed.
- Some Digital TV functions may not be available in some countries/areas.

## Trademark information

- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- Manufactured under license from Dolby Laboratories.  
Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- "BRAVIA" and BRAVIA are trademarks of Sony Corporation.
- "Blu-ray Disc", "Blu-ray" and "Blu-ray Disc" logo are trademarks of Blu-ray Disc Association.
- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc.  
DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+ Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.
- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.



GB

Additional Information



Customer Support and Contact:

<http://www.sony-asia.com/support>

<http://www.sony.net/>

©2015 Sony Corporation Printed in Malaysia



\* 4 5 7 4 1 0 2 1 1 \* (1)

4-574-102-11(1)