DENON®

ENGLISH

FRANÇAIS

ESPAÑOL

AVR-X1300W

INTEGRATED NETWORK AV RECEIVER

Quick Start Guide

Guide de configuration rapide / Guía de configuración rápida

Read Me First....

Lisez-moi en premier.... / Lea esto primero....

Please do not return this unit to the store.

If you need help...

Check our AVR setup tips online Usa.denon.com/SetupTips Ca.Denon.com/SetupTips

Call for Assistance

1-855-MY.DENON (USA) 1-855-693-3666

1-800-668-0652 (Canada)


Monday – Friday 10:00AM to 10:00PM E.S.T Saturday 12:00PM to 8:00PM E.S.T

Welcome


Thank you for choosing a Denon AV receiver. This guide provides step-by-step instructions for setting up your AV receiver.

Before You Begin

Required for Setup

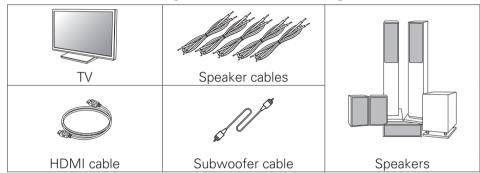

Optional

 



- When connecting this unit to a device that is compatible with the Deep Color, 4K and ARC functions, use a "High Speed HDMI cable with Ethernet" that displays the HDMI logo.
- These drawings are for illustrative purposes only and may not represent the actual product(s).

What's In the Box

Quick Start Guide		FM indoor antenna	
Safety Instructions		AM loop antenna	
Notes on radio		Sound calibration microphone	\
Warranty (for North America model only)		Sound calibration microphone stand	
Cable labels		Remote control unit	
Receiver	00	R03/AAA batteries	
Power cord			




The included sound calibration microphone stand is convenient for use when performing Speaker Calibration. Using your own tripod or the supplied Sound calibration microphone stand enables settings to be automatically configured to the optimum listening environment, providing exceptionally high performance.

Setup

There are three steps to the setup process.


- 1 Installing batteries in the remote control unit
- 2 Connecting the receiver
- 3 Following the On-Screen Setup Assistant

Installing batteries in the remote control unit

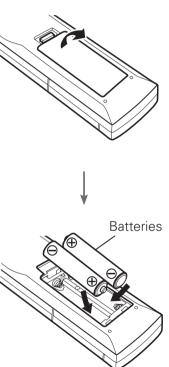

2 Connecting the receiver


1) Place the receiver near your TV and connect the power cord

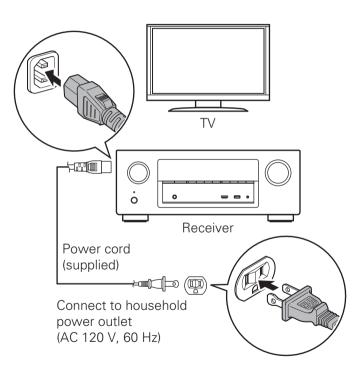

2) Connect the receiver to your home network


Wired LAN

Connect an Ethernet cable (not included) between your receiver and your network router.

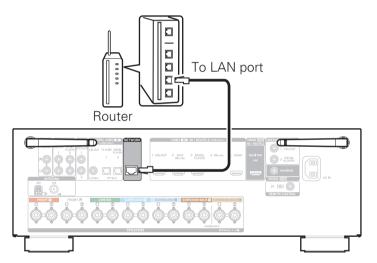


Wireless LAN

Rotate the two antennas located on the back of the receiver upwards for maximum performance.

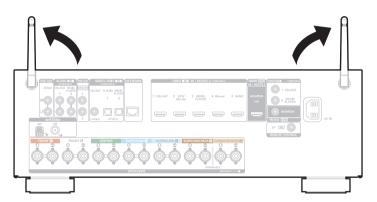


3) Connect the receiver to your TV with an HDMI cable

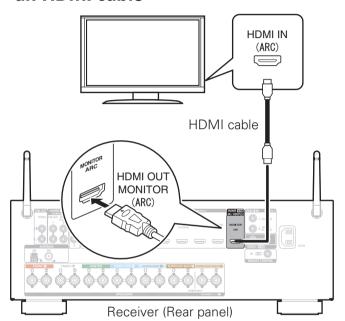

ARC (Audio Return Channel):


If your TV supports ARC, your TV can send audio back to the AV receiver when you are using your TV's built-in video sources (TV tuner, Smart TV streaming services, etc...) ARC requires that you enable HDMI CEC on your TV. Please refer to your TV's Owner's Manual for instructions on how to setup HDMI CEC. Note that some TV manufacturers use other names for the HDMI CEC function.

4) Turn on the TV

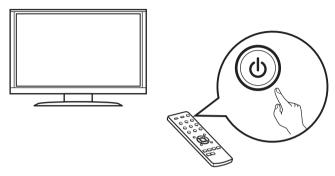

TV remote control unit


5) Select the appropriate HDMI input on your TV

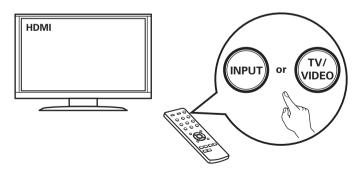

TV remote control unit

6) Turn on the receiver

• Press **b** to turn on the receiver.

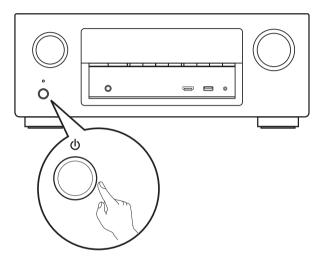

7) Verify the connection

• Verify that you can see this screen on your TV.




If this screen is not displayed, please go back and retry the steps again in the recommended sequence.



Following the On-Screen Setup Assistant

The Setup Assistant will walk you through connecting and configuring your speakers and components to your Denon receiver. Please use the remote control and follow the on-screen instructions.



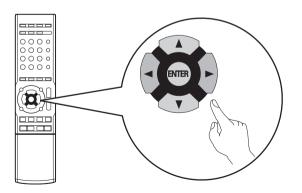

Owner's Manual

- For more information, visit www.denon.com.
- Refer to the Online Manual for other functions information and operation procedure details. manuals.denon.com/AVRX1300W/NA/EN/



Online Manual



All New "Denon 2016 AVR Remote" App



The "Denon 2016 AVR Remote" App allows you to remotely control your Denon receiver wirelessly from your iOS, Android, or Kindle mobile devices. Please visit the Apple App Store, Google Play, or the Amazon Appstore and search for "Denon 2016 AVR Remote" to get your free copy.











www.denon.com