


Remote Control User Guide

Sana Massage Chair

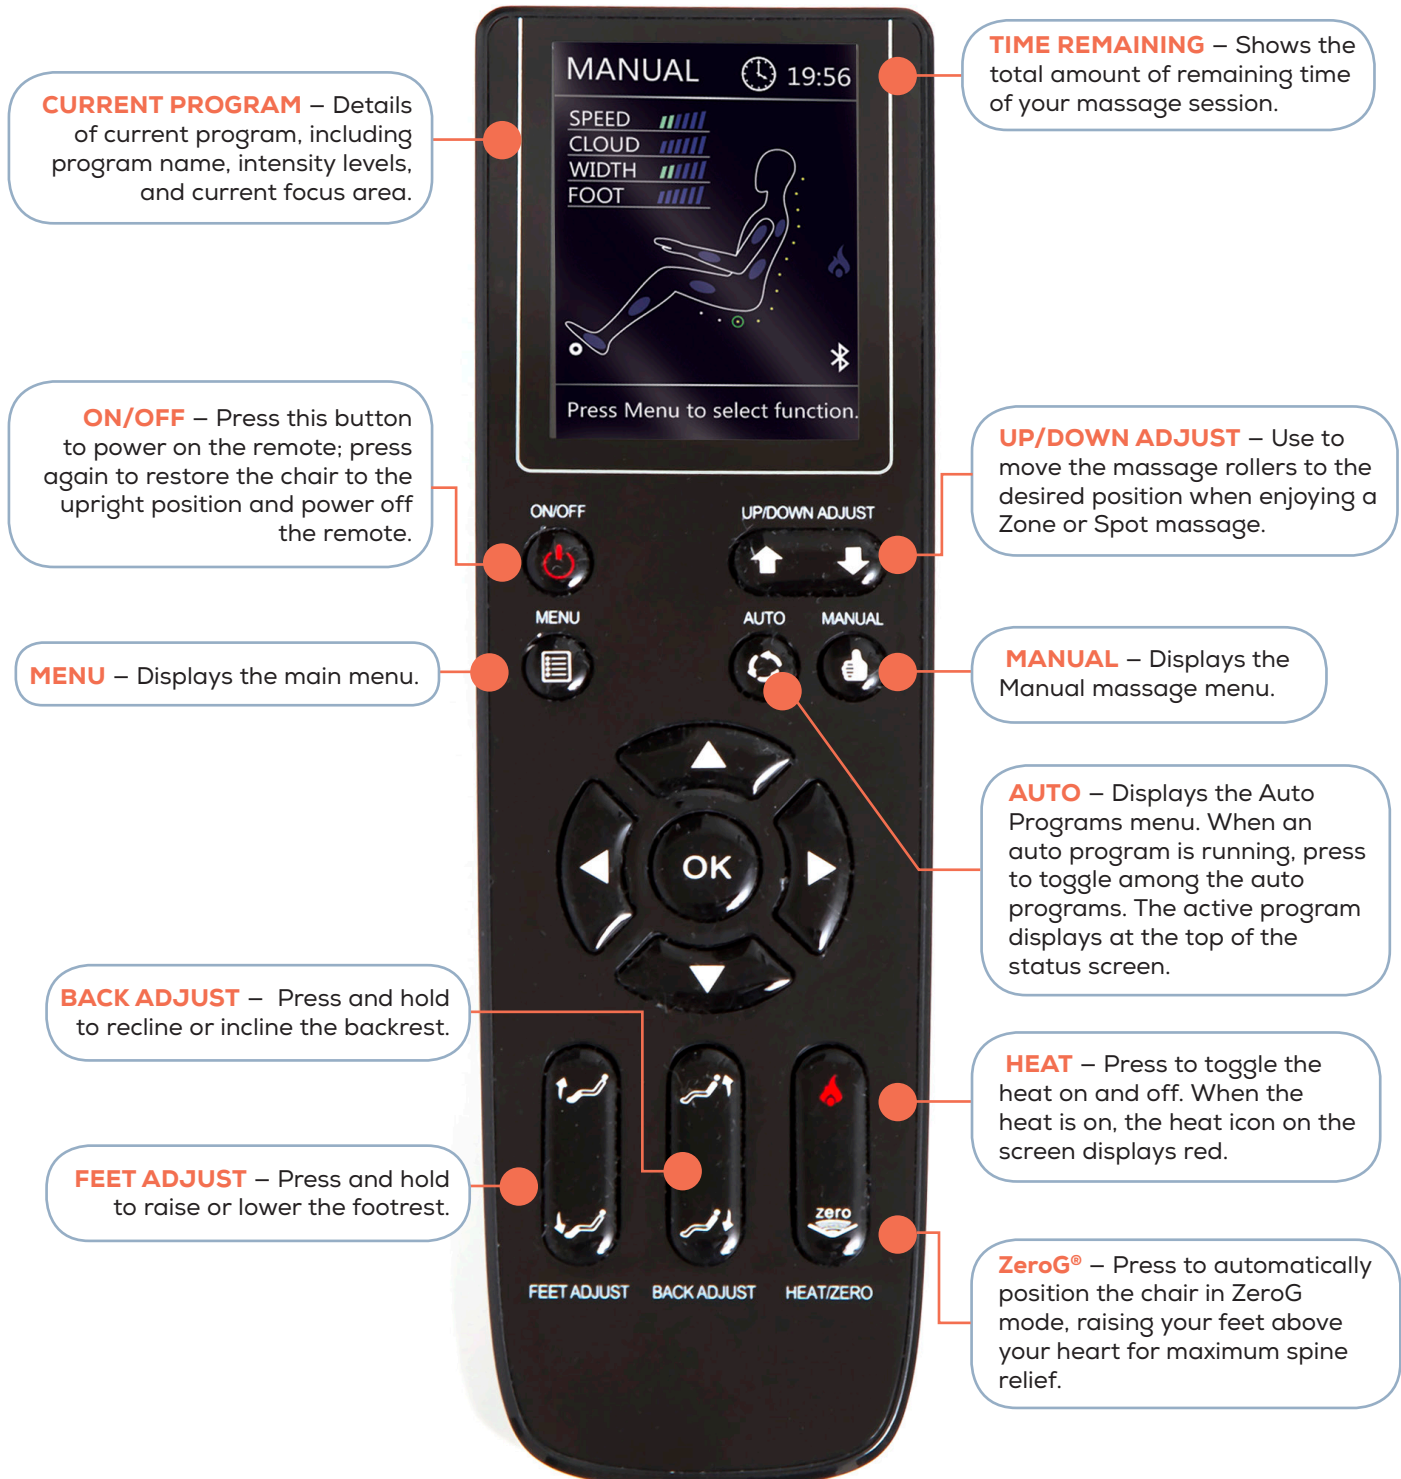

CURRENT PROGRAM – Details of current program, including program name, intensity levels, and current focus area.

TIME REMAINING – Shows the total amount of remaining time of your massage session.

ON/OFF – Press this button to power on the remote; press again to restore the chair to the upright position and power off the remote.

UP/DOWN ADJUST – Use to move the massage rollers to the desired position when enjoying a Zone or Spot massage.

MENU – Displays the main menu.

MANUAL – Displays the Manual massage menu.

AUTO – Displays the Auto Programs menu. When an auto program is running, press to toggle among the auto programs. The active program displays at the top of the status screen.

BACK ADJUST – Press and hold to recline or incline the backrest.

HEAT – Press to toggle the heat on and off. When the heat is on, the heat icon on the screen displays red.

FEET ADJUST – Press and hold to raise or lower the footrest.

ZeroG® – Press to automatically position the chair in ZeroG mode, raising your feet above your heart for maximum spine relief.

For more detailed operation instructions, please see the Use and Care Manual.