

CA-PLT14SG

AMPLIFIER MOUNTING PLATE DESIGNED AND ENGINEERED FOR
2014-UP HARLEY-DAVIDSON® STREET GLIDE®, ULTRA, OR ULTRA TRIKE
MOTORCYCLES

INSTRUCTION MANUAL

JVCKENWOOD Corporation

Important Notes

©2023 JVCKENWOOD Corporation. All Rights Reserved. KENWOOD® and eXcelon® are registered trademarks of JVCKENWOOD Corporation. Harley-Davidson®, Electra Glide®, Road Glide®, Street Glide®, Ultra Classic®, Tri Glide®, CVO™, Screamin Eagle® and Tour-Pak® are trademarks or registered trademarks of Harley-Davidson, Inc. and/or its affiliates and if used or implied are for reference only. There is no affiliation between Harley-Davidson, Inc. and/or its affiliates and JVCKENWOOD Corporation and/or its affiliates. All other trademarks are the property of their respective owners. Specifications subject to change without notice.

Take the time to read through this instruction manual.

Familiarity with installation and operation procedures will help you obtain the best performance from your new product.

The CA-PLT14SG plate is made to mount amplifiers with a maximum dimension of 8.5" W x 7" D x 2" H (216mm x 178mm x 51mm).

■ Installation procedure

1. Over the top of the radio, pull up to release each wire harness from the black plate via the factory "Christmas tree" fasteners. If your bike has factory GPS, the small square antenna will need to be relocated just behind the voltmeter as shown in Fig 1.1 below.

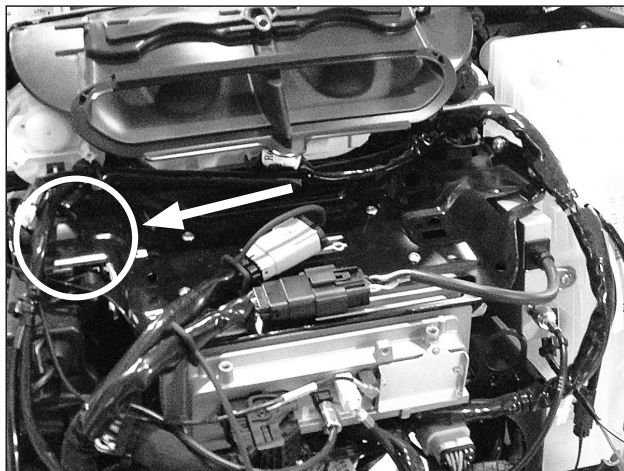


Figure 1.1 - The white circle shows the new location for the GPS Antenna if your bike came factory equipped with this feature.

2. Remove the four factory T-20 "Torx" screws that go through the top of the black plate and into the top of the radio. Set these screws aside for now.

3. Sit the main amplifier plate over the top of the radio, noting the 4 holes in the plate will line up with the 4 holes left by the factory screws just removed. The factory screws will now go through the main mounting plate, through the black plate over the top of the radio, and into the top of the radio.

4. Locate the Velcro® that came in the box and stick it to the bottom plate of the amp being installed. You can now "stick" the amp to the mounting plate just installed. Depending on the amp you are installing, you can use the "tabs" on the CA-PLT14SG to re-secure the wire harnesses that were held in place using the "Christmas Tree Fasteners."

For updated information (the latest Instruction Manual, etc.),
please visit the following website:
https://manual.kenwood.com/en_contents/search/

