


REGINA ANDREW

DETROIT

ITEM NO: 14-1071 Logan Floor Lamp

ASSEMBLY INSTRUCTIONS

1. Carefully remove all parts from box and remove all plastic covering from lamp parts.
2. Attach the pipe to the base. Attach the socket cluster to the pipe. Pull out the cord.
3. Attach shade riser to socket cluster. Put shade on the shade riser and secure with the finial.
4. Insert the proper bulb into the socket.
5. Insert the polarized plug into wall outlet, turn on switch and enjoy your new lamp.

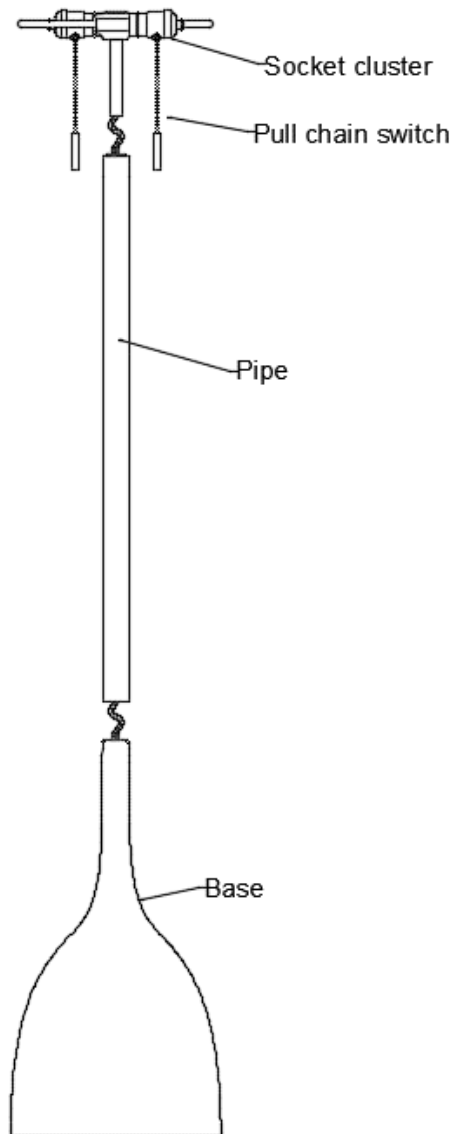

CLEANING AND CARE:

Use a soft cloth only, do not use any chemical or abrasive cleaners.

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one-way. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

Made in China