




SOFTWARE UPDATE GUIDE

UPDATING THE SOFTWARE ON YOUR STEERING WHEEL CONTROL INTERFACES

1. Set all six dipswitches to OFF.
2. Connect the USB-C cable to your PC, Mac, or smartphone, then connect it to the interface.
3. The interface will show up as a drive on the connected device and will be identified by the name "INTERFACE".
4. Double click the drive to open it.
5. The system file displays the current versions of the hardware (HW) and BIOS. The other file, starting with "SWxxxx," indicates the current software (SW) version installed on the interface.
6. You need to first delete the SWxxxx file.
7. Simply drag and drop, or copy, the new "SWxxx" file onto the interface. Once the file is copied, unplug the USB cable and then plug it back in.
8. The interface LED will illuminate solid for approximately 7 seconds, then it will begin to flash. Once it starts flashing, the interface will be visible as a drive on the PC again.
9. Open the drive and verify that the "SWxxxx" file has been updated to the new version.

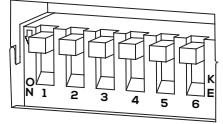

▼ Devices and drives



Name	Date modified	Type	Size
HW-001 V3 - Bios V2 - Chk 1C65A30A.sys		System file	
SW-025 - Mercedes 83.33 FT CAN V1.00		Text Document	

Name	Date modified	Type	Size
HW-001 V3 - Bios V2 - Chk 1C65A30A.sys		System file	

You should now have the latest software on your interface, indicating that the update was successful. At this point, you are ready to install the interface in your vehicle. Ensure that all connections are secure and follow the installation guidelines provided in the user manual. Once installed, the interface should function with the updated software.