

Stealthbox®

INSTALLATION GUIDE for the SB-N-TTNEXT/10W1v2 (2004-Up Nissan Titan King Cab)



This Stealthbox is a product which requires professional installation skills and tools.

Please read this installation guide thoroughly before beginning the project. It will guide you step by step through the installation. Several of the steps in this process may require two people to accomplish.

It is absolutely vital that the enclosure be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems: 1) The sub-bass performance will suffer due to the movement of the enclosure caused by the force exerted by the woofer(s) and 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

Please enjoy your JL Audio Stealthbox responsibly.


JL AUDIO®
Ahead of the Curve™

www.jlaudio.com

START
HERE



STEP 1: Remove all contents and flip up the passenger's side rear seat.

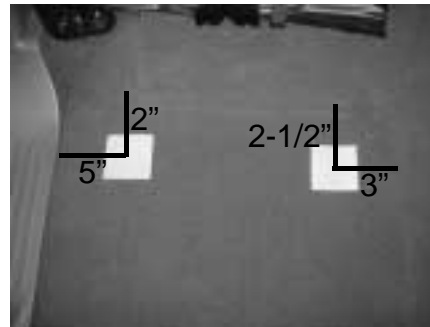

STEP 2: Remove the paper backing off the the supplied wax squares. Apply each wax square onto the passenger's side rear flooring. Follow the measurements as pictured.

The mounting holes should measure 13" from each other.



STEP 3: On the bottom of the Stealthbox®, thread in both supplied socket cup set screws, leaving a 1/4" exposed.



STEP 4: (a) Place the Stealthbox® into position. The rear of the Stealthbox® should be against the black stops/supports, for the seating. Press firmly down.

(b) Remove the Stealthbox®.



STEP 5: *CAUTION*

Before drilling, make sure that you are not going to be drilling into any gas lines, brake lines, transmission lines, electrical wiring, transfer case(4x4 vehicles) or anything else that might cause a reduction in your weekly pay. Always wear eye protection when drilling.

With the use of an 1/4" drill bit and drill. Drill out the floor at the impression on the wax square. This is just a pilot hole.



STEP 6: Now with an 1/2" drill bit, enlarge the pilot hole.

Continued on Next Page →


Cont. From Previous Page



STEP 7: (a) Back out both socket cup set screws from the bottom of the Stealthbox® to leaving 1-3/4" exposed.

(b) Attach speaker wire to the terminal and check woofer for proper operation.

(c) Place the Stealthbox® into position.

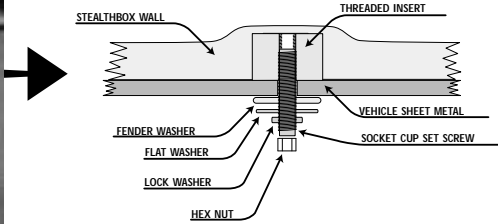

STEP 8: From under the truck. Place the supplied fender washer, flat washer, lock washer and then nut onto both socket cup set screws.

With an 9/16" socket and ratchet. Secure, but do not over tighten.



Step 9: Lower the passenger's side rear seat and replace any contents removed in **STEP1**.



**CONGRATULATIONS!
INSTALL COMPLETE.**

Included Hardware:

- 2) 3/8" Split Lock Washer
- 2) 3/8" Flat Washer
- 2) 3/8" x 1-1/4" Fender Washer
- 2) 3/8"-16 x 2-1/4 Socket Cup set Screw
- 2) 3/8"-16 Hex Nut
- 2) 3"x3" Wax Square


Difficulty Of Installation:



Specifications:

- Enclosure Type:** Ported
- Driver Type:** 10W1v2
- Nominal Impedance:** 4Ω
- Cont. Power Handling:** 150 Watts

JL Audio recommends using a high quality amplifier such as the JL Audio e2150. The diagram below shows the recommended crossover, infrasonic filter and equalizer settings for the e2150 when being used to power your Stealthbox®.

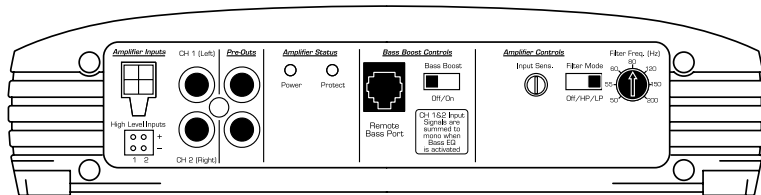

The JL Audio e2150 is a very versatile audio component. Please consult the owner's manual for detailed information about installing and tuning this amplifier.

Mid/High Frequency Driver Information:

Dashboard Location Driver Size:

2.5"

Applicable JL Audio Products:

N/A

Front Door Location Driver Size:

6.5"

Applicable JL Audio Products:

TR, VR, XR & ZR650-CSi

Rear Location Driver Size:

6.5"

Applicable JL Audio Products:

TR, VR & XR650-CXi

