



INSTALLATION INSTRUCTIONS FOR PART 99-7321

APPLICATIONS

Hyundai Accent 2006-2010
Kia Rio/Rio5 2006-2010


99-7321

KIT FEATURES


- DIN Head Unit Provision with pocket
- ISO DIN Head Unit Provision with pocket

KIT COMPONENTS


- A) Radio Housing
- B) ISO Brackets
- C) Trim Plate

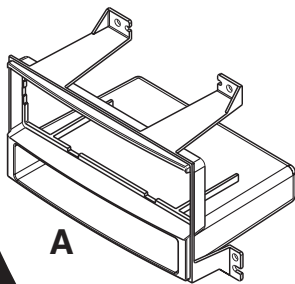

A

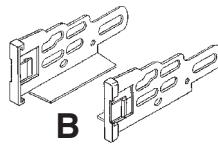

B

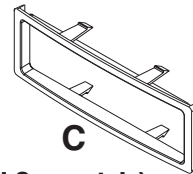

C

WIRING AND ANTENNA CONNECTIONS (Sold Separately)

Harness:

- 70-7303 - Hyundai/KIA harness 2009
- 70-1004 - Hyundai 2006-up/KIA harness 2004-up

Antenna Adapter:



- 40-KI11 - KIA antenna adapter 2007-up

TOOLS REQUIRED:

Panel Removal Tool or
Small Flat Blade Screwdriver

Phillips Screwdriver

• Cutting Tool



1-800-221-0932



www.metraonline.com


© COPYRIGHT 2004-2010 METRA ELECTRONICS CORPORATION

TABLE OF CONTENTS

***Dash Disassembly** 1*

***Kit Assembly** 2-3*

***Final Assembly** 4*

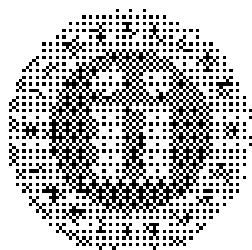


KNOWLEDGE IS POWER

Improve your installation and information skills by working in the most recognized and respected mobile electronics retail source industry. Log onto www.metradetailwholesale.com or call 800-368-6788 for more information and take steps to enhance better installation.


HYUNDAI ACCENT 2006-2010**KIA RIO / RIO 5 2006-2010**

- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip and remove the trim panel surrounding the radio and including the a/c vents. (Figure A)

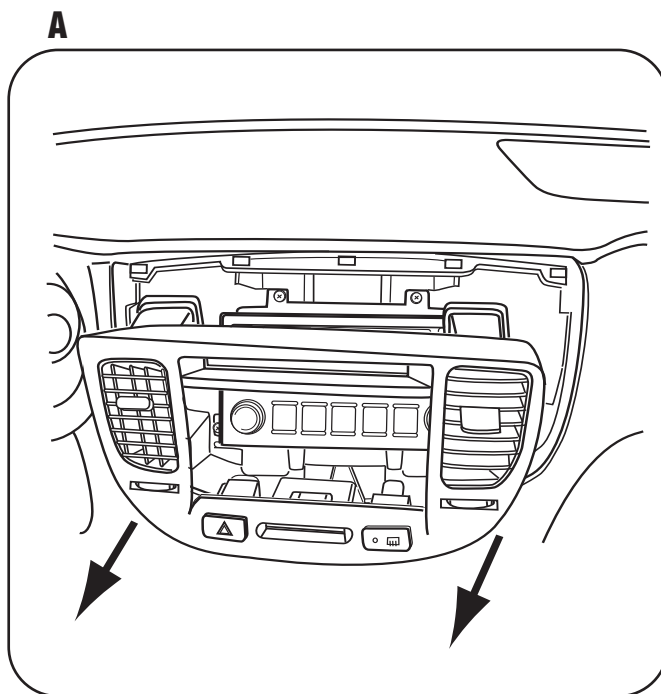

- 3** Remove (4) Phillips screws securing the radio. (Figure B)
- 4** Disconnect and remove radio. (Figure B)


Continue to KIT ASSEMBLY.

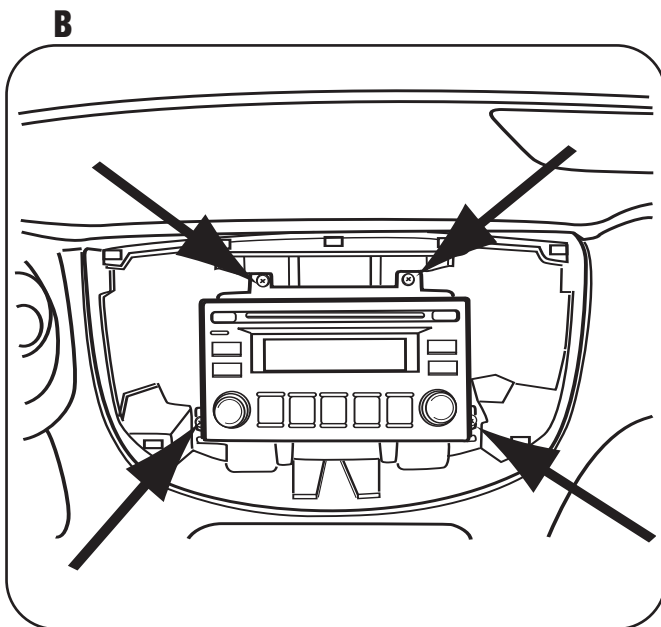


DIN HEAD UNIT PROVISION

- 1** KIA RIO: Cut and remove shaded areas #1. (Figure A)


HYUNDAI ACCENT: Cut and remove shaded areas #2. (Figure A)

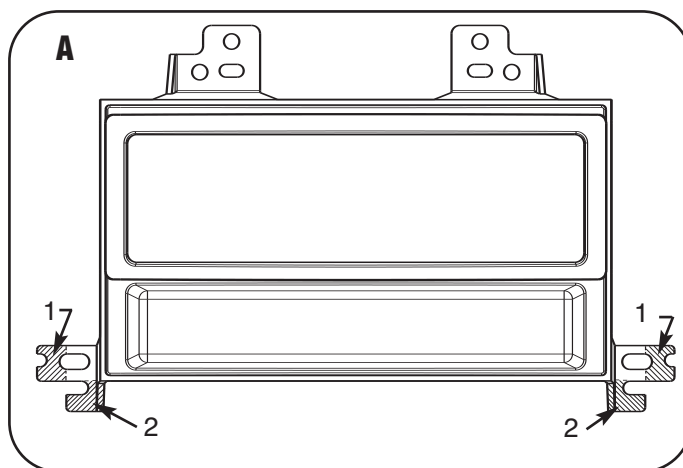

- 2** Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. (Figure B)

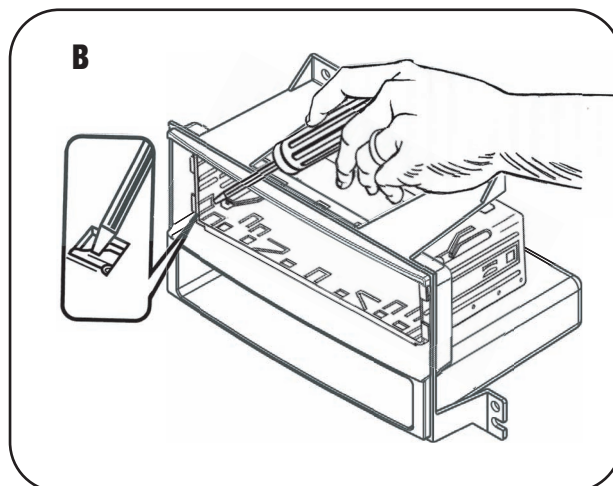

- 3** Slide the aftermarket head unit into the cage until secure. (Figure C)

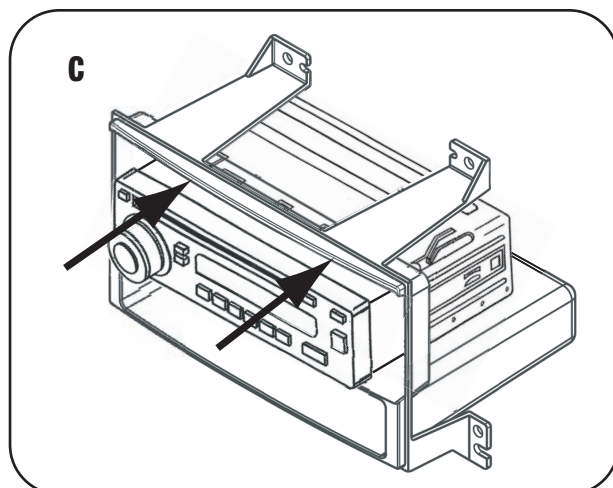


Continue to final assembly.


ISO DIN HEAD UNIT PROVISION

- 1** KIA RIO: Cut and remove shaded areas #1. (Figure A)

HYUNDAI ACCENT: Cut and remove shaded areas #2. (Figure A)

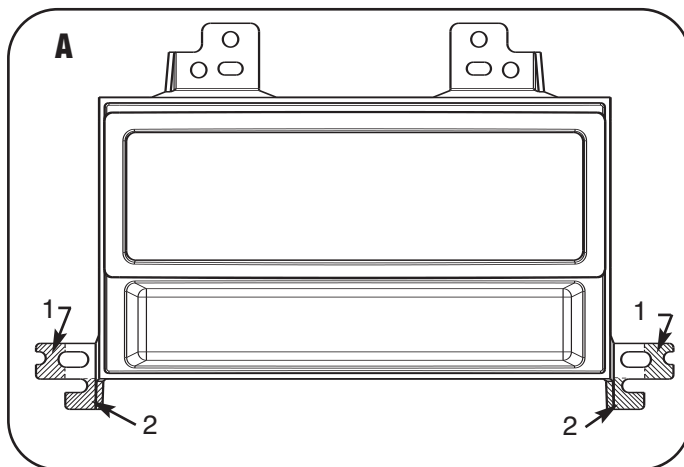


- 2** Mount the ISO Brackets to the head unit with the screws supplied with the unit. (Figure B)

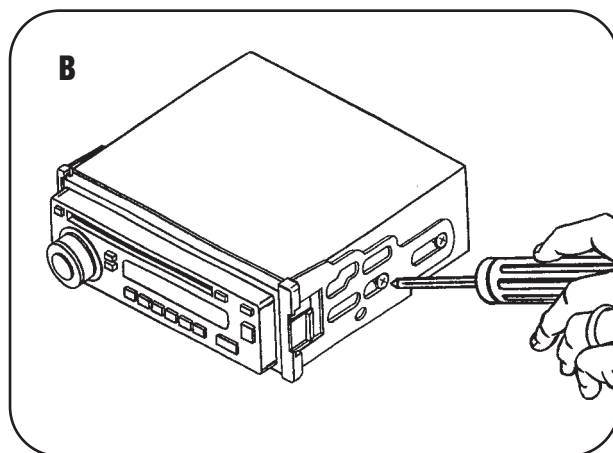

- 3** Slide the head unit into the radio opening until the side clips engage. (Figure C)

- 4** Snap the Trim plate into the Radio Housing. (Figure C)

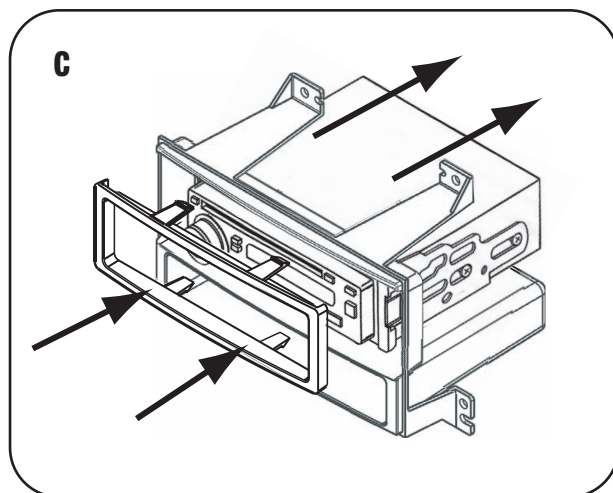


Continue to final assembly.

FINAL ASSEMBLY

- 1** Locate the factory wiring harness in the dash and make the connection as shown. Metra recommends using the proper mating adapter and making the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit.)
- 2** Re-connect the negative battery terminal and test the unit for proper operation.
- 3** Reassemble radio and dash assemblies in reverse order of disassembly.

FINAL WIRING CONNECTIONS

Make wiring connections using the EIA color code chart shown below and the instructions included with the head unit. Metra recommends making connections as shown below; Strip, Splice, Solder, Tape. Isolate and individually tape off ends of any unused wires to prevent electrical short circuit.

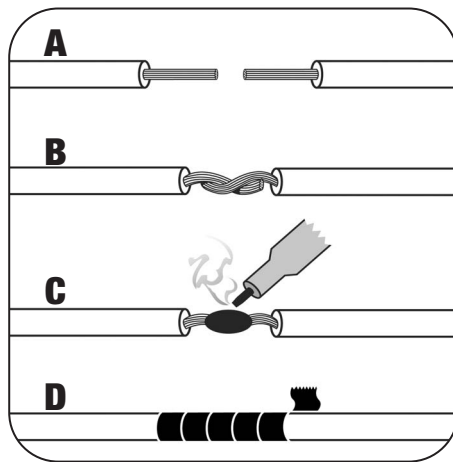

- A) Strip wire ends back 1/2"**
- B) Twist ends together**
- C) Solder**
- D) Tape**

METRA / EIA WIRING CODE

12V Ignition / Acc . . . Red	Right Front (+) Gray
12V Batt / Memory . . Yellow	Right Front (-) Gray / Black
Ground Black*	Left Front (+) White
Power Antenna Blue	Left Front (-) White / Black
Amp Turn-On Blue / White	Right Rear (+) Violet
Amp Ground Black / White	Right Rear (-) Violet / Black
Illumination. Orange	Left Rear (+) Green
Dimmer Orange / White	Left Rear (-) Green / Black

***NOTE:** When Black a wire is not present, ground radio to vehicle chassis.

All colors may not be present on all leads due to manufacturer's specifications.



99-7321

NOTES

This image shows a full page of blank, lined paper. It features approximately 28 horizontal blue or grey lines spaced evenly apart, typical of notebook paper. The lines extend across the entire width of the page, leaving small margins at the top and bottom. There are no vertical lines, text, or other markings on the page.

99-7321 INSTRUCTIONS



1-800-221-0932



www.metraonline.com

REV. 04/26/10

© COPYRIGHT 2004-2010

METRA ELECTRONICS CORPORATION

INST99-7321