


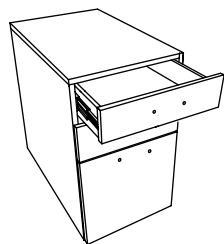


### Component List



**A** - Cabinet x 1




**B** - 5/32" x 12mm  
Phillips Screw x 20

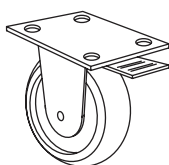

**C** - Brake Caster x 2



**D** - Center Caster x 1

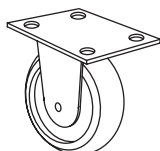

**E** - Rear Caster x 2



**F** - 5/32" x 22mm  
Phillips Screw x 6



**G** - Drawer Pull x 3



**H** - Legal File Folder  
Stretchers x 2

Your Sequel Home Office Furniture is engineered for easy assembly. Carefully follow this procedure to prevent any damage.

### Placement and Maintenance

Sequel Home Office Furniture is designed for indoor use on level floors. Clean steel parts and wood veneer with a moist cloth.

### Step 1


#### Unpack and Identify

Unpack and identify the components at left. Note that some components are shipped inside the cabinet. The assembly workspace should be a non-marring surface such as carpet. A Phillips Screwdriver will be needed for assembly. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com. For all other concerns, please contact your BDI Retailer.

### Step 2

#### Install Casters


Carefully position **Cabinet (A)** on its top surface so that bottom surface is up, then attach a **Caster** to each of the five (5) exposed installation plates using **5/32" x 12mm Phillips Screw (B)** and a Phillips Screwdriver.

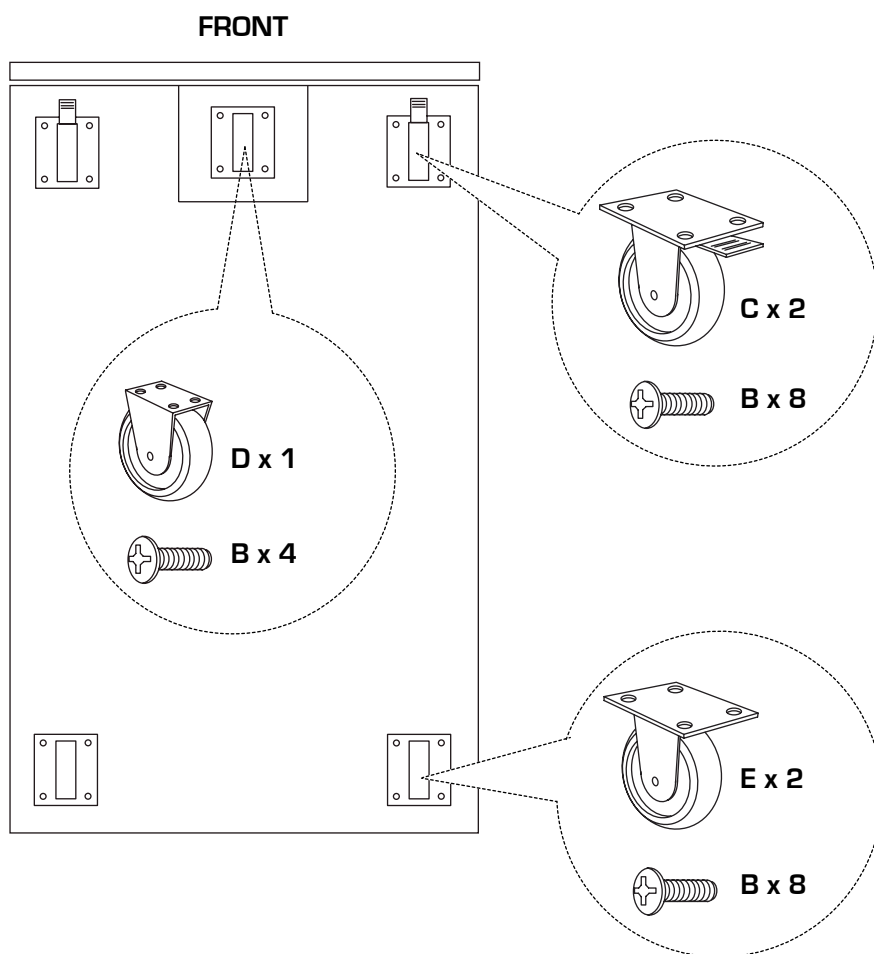

### Step 3

#### Install Handles.

Carefully turn pedestal upright so that it rests evenly on all installed casters, then install one **Drawer Pull (G)** per drawer using the **5/32" x 22mm Phillips Screw (F)** and a Phillips Screwdriver.

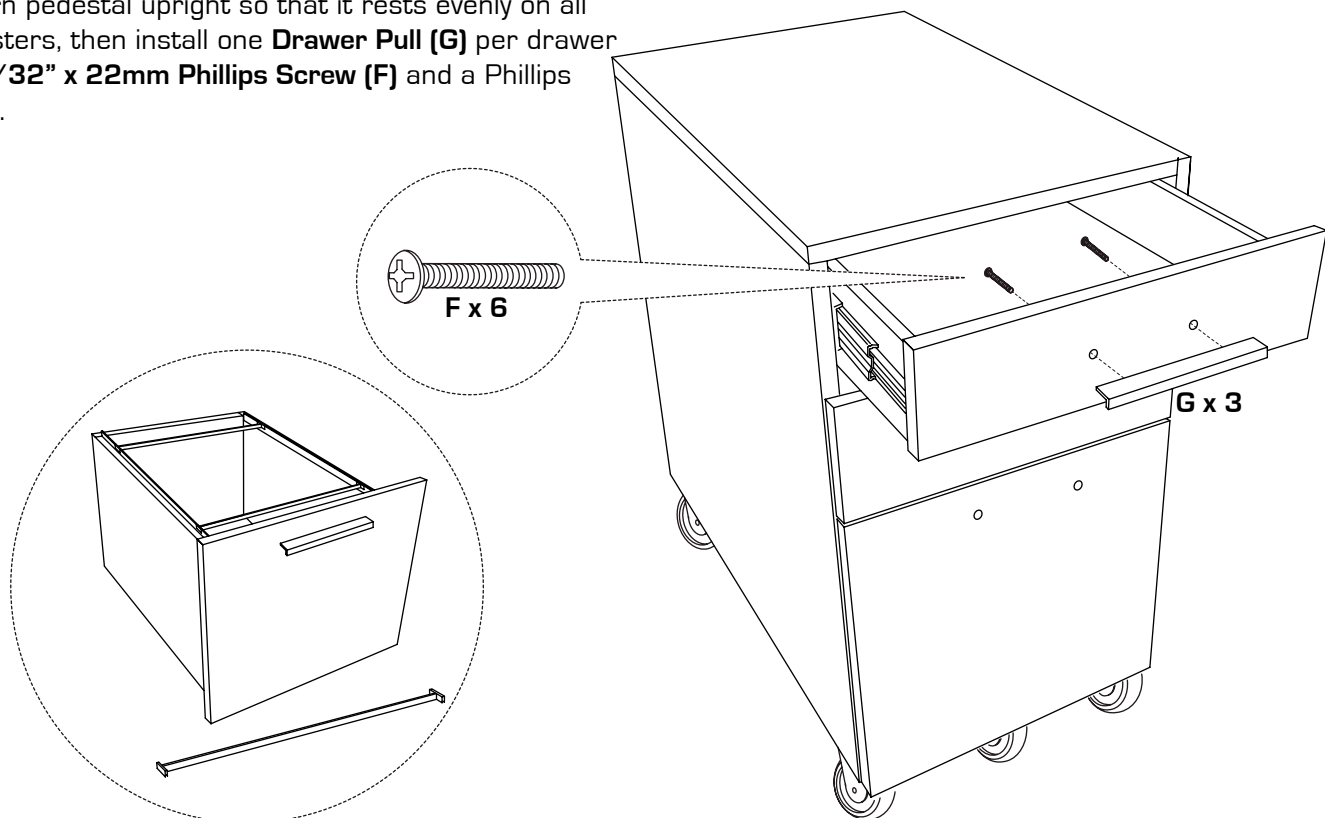

#### File Folders

Users who wish to use legal-length files may install provided **Legal File Folder Stretchers (H)** by dropping into place near front and back of the file drawer.