



Installation instructions for part 99-9108BB

Audi A6/RS 6/S6 2000-2004, allroad 2001-2005 99-9108BB


KIT FEATURES

- ISO DIN radio provision with pocket
- ISO DDIN radio provision
- *Painted matte black*



KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (8) #8 x 3/8" Phillips screws

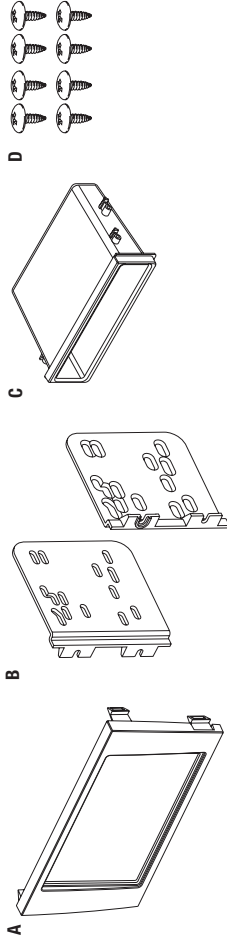

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • XSVI-9004-NAV (2004-up models) Antenna Adapter: • 40-VW54 (2004-up models)

Table of Contents

Dash Disassembly 2

Kit Assembly

- ISO DIN radio provision with pocket..... 2-3
- ISO DDIN radio provision 3

TOOLS REQUIRED

- Metra 86-9001 radio removal tools (qty. 2)
- Phillips screwdriver

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation, unless the vehicle manufacturer recommends against so. Please check with your local Dealership for more information. All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before reconnecting the battery or cycling the ignition. Also, do not remove the factory radio with the key in the on position, or the vehicle running. It would be best to remove the key from the ignition and then wait a few seconds before removing the factory radio.

REV. 12/31/2015 INST99-9108BB

METRA. The World's best kits.™


metraonline.com

© COPYRIGHT 2015 METRA ELECTRONICS CORPORATION

Dash Disassembly

1. Insert (4) of the Metra 86-9001 radio removal tools into the slots on the front of the radio face, and then remove the radio. (Figure A)

Continue to kit assembly

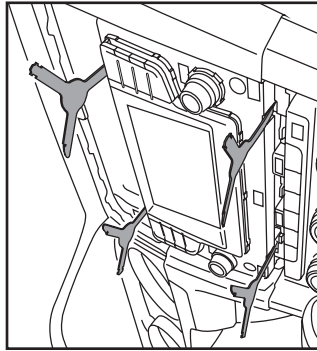


(Figure A)

Kit Assembly


ISO DIN radio provision with pocket

1. Attach the radio brackets to the radio trim panel using (4) #8 x 3/8" Phillips screws supplied. (Figure A)
2. Attach the pocket to the bracket assembly using the (4) supplied #8 x 3/8" Phillips screws. (Figure B)
3. Remove the metal "DIN" sleeve and trim ring from the aftermarket radio.

Continued on the next page

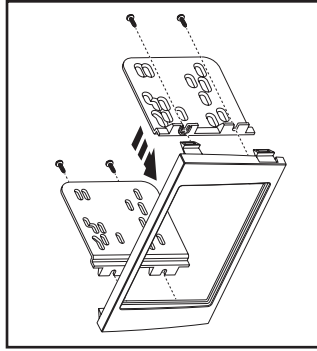

(Figure A)

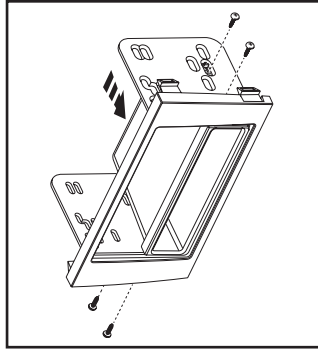


(Figure B)

Kit Assembly

ISO DIN radio provision with pocket (continued)

4. Slide the radio into the completed assembly, and then secure it to the assembly using the screws supplied with the radio. (Figure C)
5. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Re-connect the negative battery terminal and test the radio for proper operation.


6. Reassemble the dash in reverse order of disassembly.

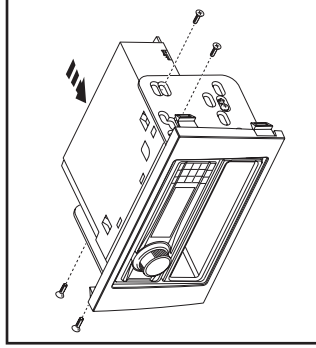


(Figure C)

ISO DDIN radio provision

1. Attach the *radio brackets* to the *radio trim panel* using (4) #8 x 3/8" Phillips screws supplied. (Figure A)
2. Slide the radio into the completed assembly, and then secure it to the assembly using the screws supplied with the radio. (Figure B)
3. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Re-connect the negative battery terminal and test the radio for proper operation.
4. Reassemble the dash in reverse order of disassembly.

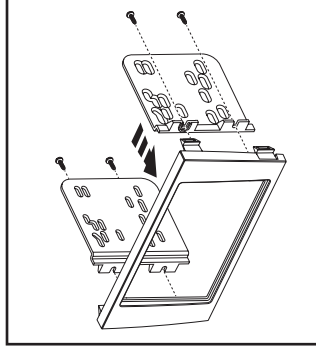

(Figure A)

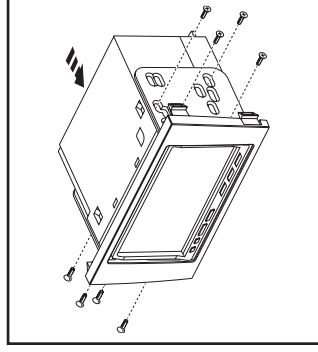

(Figure B)



Installation instructions for part 99-9108B



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at 1-800-253-TECH. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics training program in the industry. Log onto www.installinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**