


Icon 9423

HIGH PERFORMANCE
FURNITURE FOR YOUR
HOME THEATER

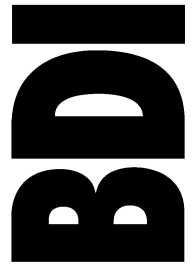


Assembly Instructions


Your ICON home theater furniture is engineered for easy assembly carefully follow this procedure to prevent any damage. All tools necessary are provided. Icon is designed for indoor use on level surfaces. clean glass parts with glass cleaner, clean steel and wood parts with a moist cloth. If any parts are damaged or missing please contact BDI at customerservice@bdiusa.com

Designed by : Cristian Wicha & Bill Becker

Component list:

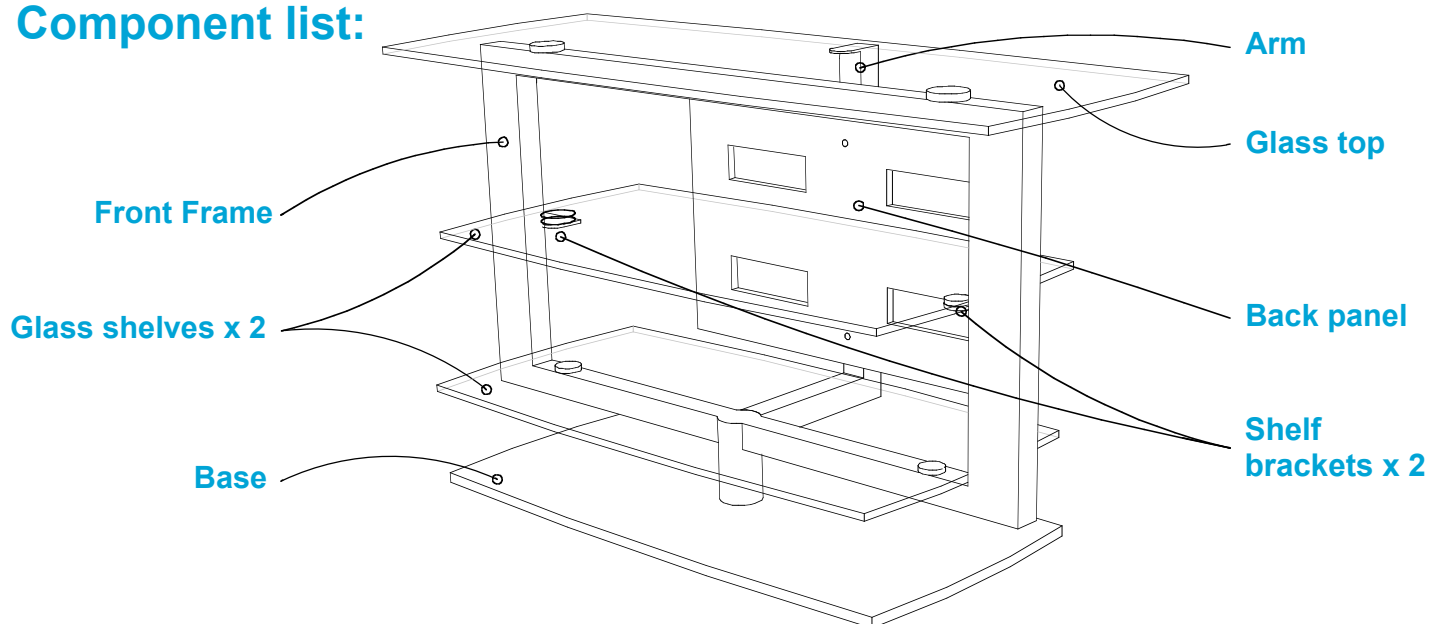

Hardware list:




A x 4



B x 3




C x 7




D x 1



E x 2




F x 6

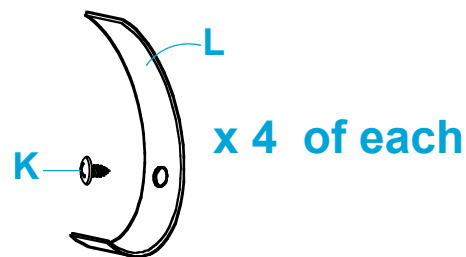

ICON is a trademark of
Becker Designed Inc.
All rights reserved.
Patents pending
©2003 Becker
Designed Inc.

Step 1

installing the arm

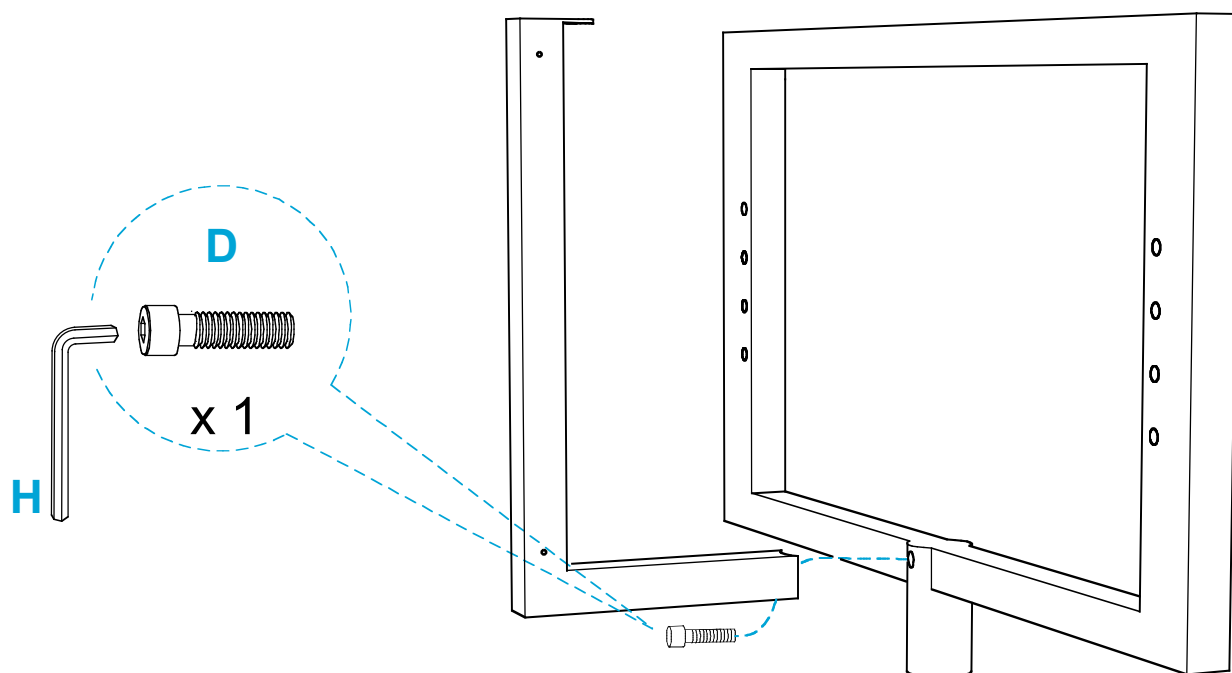


Step 2

install frame onto base.

Use twisting motion and make sure frame is completely seated on base. There should be 1/16" gap between wood base and steel frame

Install Levelers x 6


adjust levelers so base is level and stable.

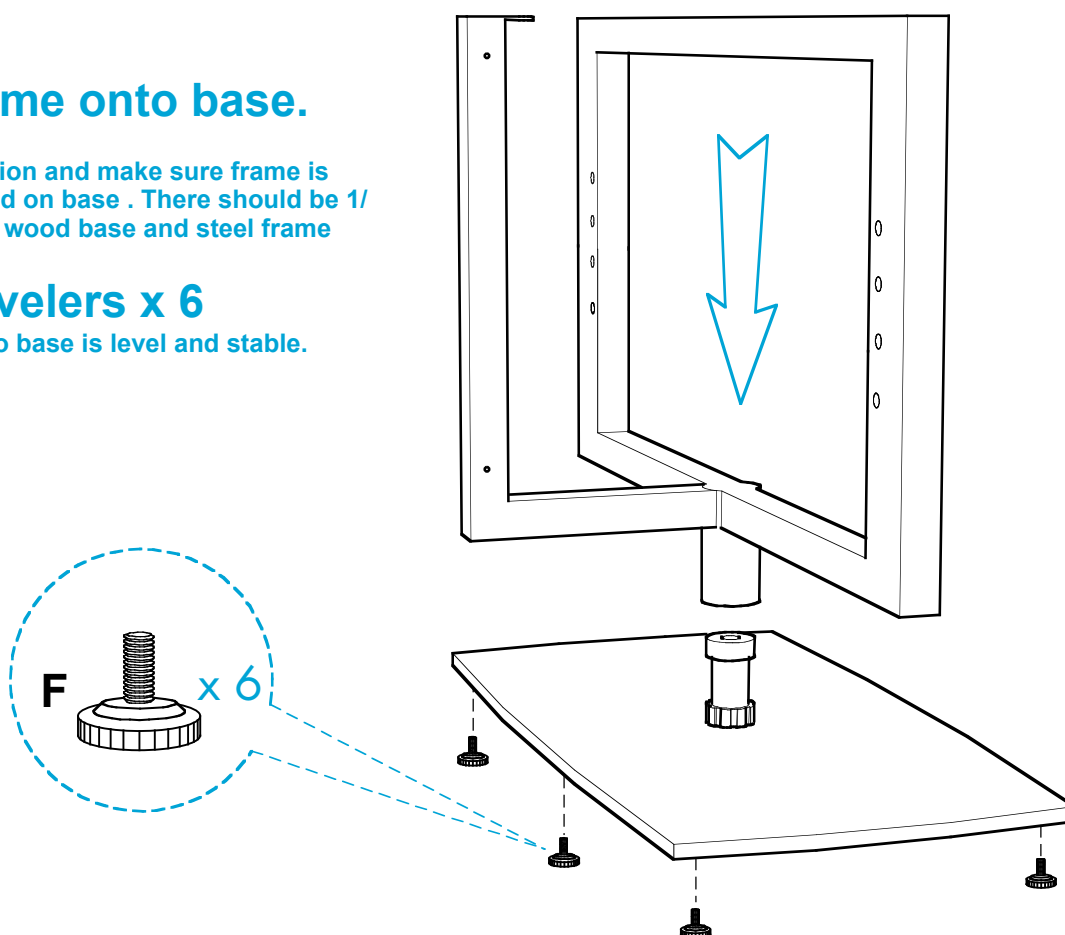

Step 3

installing the Shelf brackets.

shelf brackets can be adjusted to offer three different shelf positions.

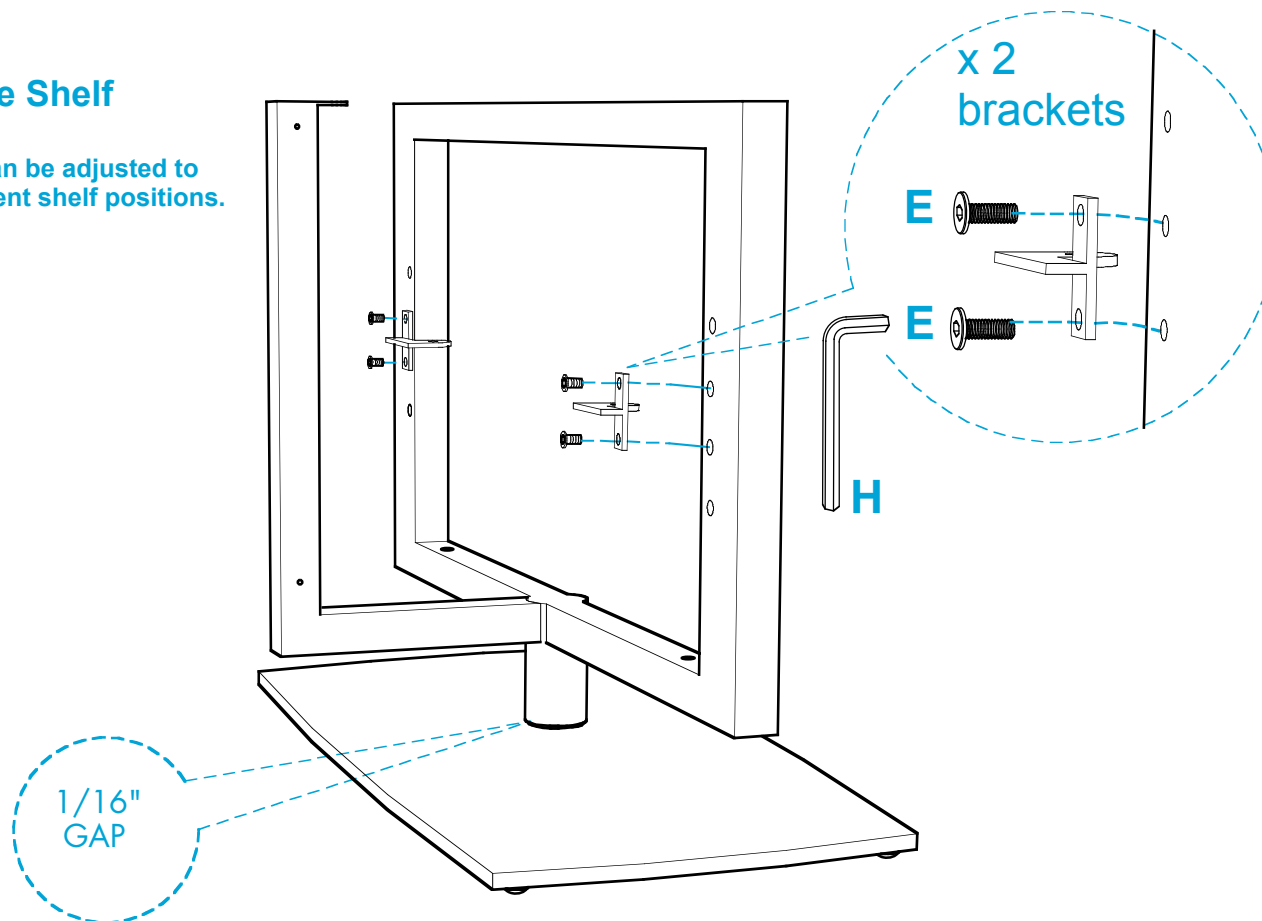


Step 4

installing Back panel.

back panel is to be installed with small holes facing backward.

wire management straps.

velcro straps are supplied to control cables. they can be screwed into the steel at top and bottom of the arm or into the small holes on the back panel.

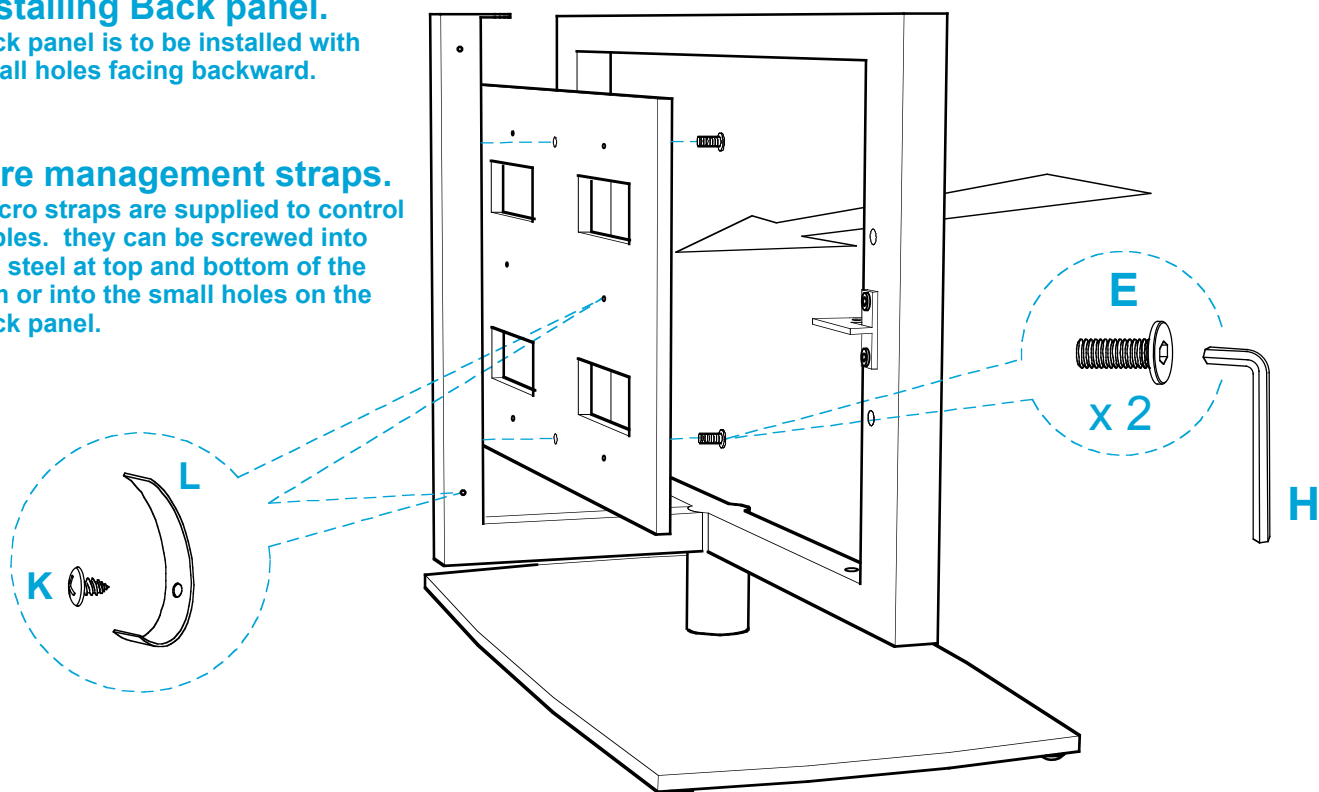


Step 5

installing Glass shelves.

Use appropriate hardware . Apply Felt washers to the stainless pucks prior to glass installation.

Note: leave screws loose until all screws have been installed. Then tighten securely. It may be necessary to loosen shelf brackets to obtain proper fit. Once fitted tighten securely.

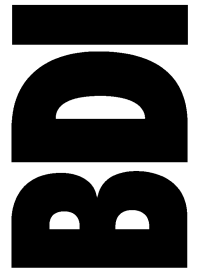

Becker Designed Inc.
14101-A Parke Long Ct
Chantilly VA 20151
www.bdiusa.com

