




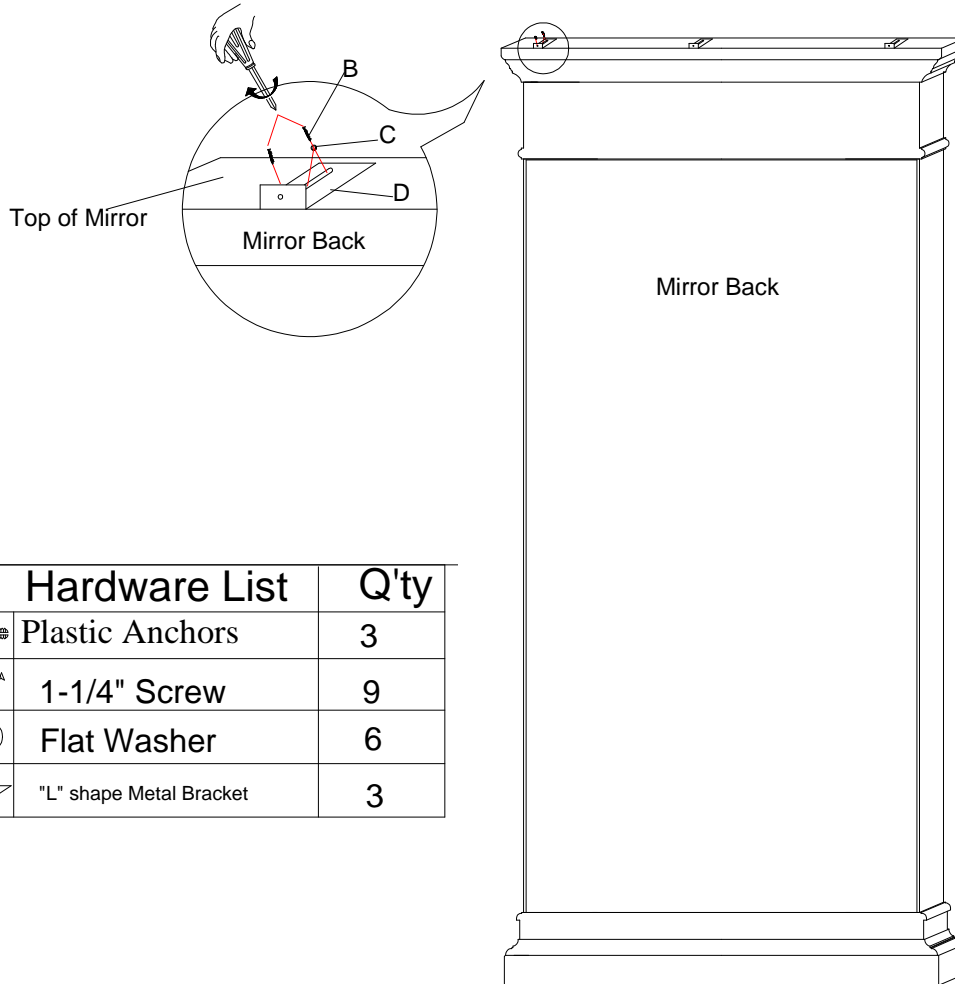

# ASSEMBLY INSTRUCTION

Item#: 500-50-558 FLOOR MIRROR WITH JEWELRY ARMOIRE STORAGE

**\*\*\* Caution: Please read all instructions carefully before starting the assembly process. This item is heavy and be best to carry on the following steps with the help of two or more people.**



NO	Hardware List	Q'ty
A	 Plastic Anchors	3
B	 1-1/4" Screw	9
C	 Flat Washer	6
D	 "L" shape Metal Bracket	3

## Assembly Steps:

1. Screw 3 "L" shape metal brackets(D) onto the top of the mirror using a Phillips Head screwdriver, 2 screws(B),2 flat washers(C) ,you can adjust the distance between the mirror to the wall by locating to "L" shape metal bracket (D) as you need.
2. Mark the location of the screw holes of the "L" shape brackets(D) on the wall, drill 3 holes on the wall where you marked using 1/4" drill bit.
3. Insert 3 plastic anchors(A) into the holes drilled on the wall.
4. Place the mirror to the wall, align the holes on the "L" shape bracket(D) to plastic anchors(A), screw the "L" Shape brackets to the anchors(A), using a Phillips Head screwdriver.
5. Tighten the screws on the top of the unit after attaching "L" shape bracket to the wall.

**Above hardware is packed in a small box. Please make sure not to throw it away.**

**Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.**